



Parts Manual

Models ***TH336C, TH337C*** ***TH406C, TH407C***

S/N MJR00150 thru MJR00270

S/N THM00150

S/N DJB00150 thru DJB00483

S/N SXJ00150 thru SXJ00152

S/N GAT00150 thru GAT00257

S/N MLH00150 thru MLH00842

S/N JJT00150 thru JJT00171

31200730

Revised
December 21, 2017

TABLE OF CONTENTS

FIGURE NO.	TITLE	PAGE NO.
SECTION 1 –		
FRAME & ATTACHING PARTS		1-1
1-1	Frame & Attaching Parts	1-2
1-2	Covers	1-6
1-3	Retrieval Hitch	1-10
1-4	Pin Hitch, Auto Hitch& Piton Frame-Auto Hitch	1-12
1-5	Pin Hitch - Cuna C & Cuna D2	1-14
1-6	Hydraulic Hitch	1-16
1-7	Fixed Position Hitch	1-20
1-8	License Plate Installation	1-22
 SECTION 2 –		
BOOM		2-1
2-1	Boom Installation	2-2
2-2	First Boom Section	2-6
2-3	Second Boom Section	2-8
2-4	Quick Coupler & Quick Disconnect Installation	2-10
2-5	JD Coupler Installation	2-14
2-6	JCB Coupler, Manual & Hydraulic	2-16
2-7	Manitou Coupler Installation, Manual & Hydraulic	2-20
 SECTION 3 –		
ATTACHMENTS		3-1
3-1	Standard Carriage	3-2
3-2	Side Tilt Carriage	3-6
3-3	Side Tilt Carriage	3-8
3-4	Rotate/Side Tilt Carriage	3-10
3-5	Side Shift Carriage	3-12
3-6	100 Degree Swing Carriage	3-16
3-7	Forks and Attaching Parts	3-18
3-8	Manure Fork	3-22
3-9	Lifting Hook	3-24
3-10	General Purpose Bucket	3-26
3-11	Multi-Purpose Bucket	3-28
3-12	Grapple Bucket	3-30
3-13	Material Bucket	3-32
3-14	Truss Boom	3-34
3-15	Hay Baler	3-36
3-16	Hay Baler	3-38
3-17	Fork Rotator Carriage	3-40
3-18	Platform Installations	3-44

TABLE OF CONTENTS

FIGURE NO.	TITLE	PAGE NO.
SECTION 4 –		
ENGINE & ATTACHING PARTS		4-1
4-1	Engine Installation	4-2
4-2	Engine	4-14
4-3	Fuel Line Installation	4-18
4-4	Fuel Tank Installation	4-26
4-5	Radiator Installation	4-28
4-6	Air Cleaner Installation	4-46
4-7	Exhaust Installation	4-52
4-8	Jacket Water Heater Installation	4-58
SECTION 5 –		
DRIVE TRAIN		5-1
5-1	Drive Train Components	5-2
5-2	Front Axle Assembly	5-4
5-3	Front Axle - Axle Housing	5-6
5-4	Front Axle - Swivel Housing & Steering Cylinder	5-8
5-5	Front Axle - Bevel Gear Set	5-10
5-6	Front Axle - Differential	5-12
5-7	Front Axle - Double U-Joint	5-14
5-8	Front Axle - Brakes	5-16
5-9	Front Axle - Wheel Hub	5-18
5-10	Front Axle - Final Reduction	5-20
5-11	Front Axle - Brake Caliper	5-22
5-12	Front Axle Assembly	5-24
5-13	Front Axle - Axle Housing	5-26
5-14	Front Axle - Swivel Housing & Steering Cylinder	5-28
5-15	Front Axle - Bevel Gear Set	5-30
5-16	Front Axle - Differential	5-32
5-17	Front Axle - Double U-Joint	5-34
5-18	Front Axle - Brakes	5-36
5-19	Front Axle - Wheel Hub	5-38
5-20	Front Axle - Final Reduction	5-40
5-21	Front Axle - Brake Calipers	5-42
5-22	Rear Axle Assembly	5-44
5-23	Rear Axle - Axle Housing	5-46
5-24	Rear Axle - Swivel Housing & Steering Cylinder	5-48
5-25	Rear Axle - Bevel Gear Set	5-50
5-26	Rear Axle - Differential	5-52
5-27	Rear Axle - Double U-Joint	5-54
5-28	Rear Axle - Wheel Hub	5-56
5-29	Rear Axle - Final Reduction	5-58
5-30	Rear Axle Assembly	5-60
5-31	Rear Axle - Axle Housing	5-62
5-32	Rear Axle - Swivel Housing & Steering Cylinder	5-64

TABLE OF CONTENTS

FIGURE NO.	TITLE	PAGE NO.
5-33	Rear Axle - Bevel Gear Set	5-66
5-34	Rear Axle - Differential	5-68
5-35	Rear Axle - Double U-Joint	5-70
5-36	Rear Axle - Wheel Hub	5-72
5-37	Rear Axle - Final Reduction	5-74
5-38	Transmission	5-76
5-39	Fender Installation	5-78
5-40	Remote Grease System Installation	5-80
5-41	Tire & Wheel Installation	5-82
 SECTION 6 –		
	CAB	6-1
6-1	Cab Installation	6-2
6-2	Cab Assembly	6-10
6-3	Cab Door	6-14
6-4	Cab Interior	6-18
6-5	Wipers	6-22
6-6	Wipers	6-26
6-7	Seats	6-28
6-8	Heater Installation	6-34
6-9	Air Conditioning Installation	6-42
 SECTION 7 –		
	CONTROLS	7-1
7-1	Brake	7-2
7-2	Hand Brake	7-4
7-3	Accelerator	7-6
7-4	Mechanical Throttle Cable	7-8
7-5	Steering Column	7-10
7-6	Steering Column Cover	7-12
7-7	Boom Joystick	7-14
 SECTION 8 –		
	HYDRAULIC CIRCUITS	8-1
8-1	Supply Circuit	8-2
8-2	Dump Circuit	8-6
8-3	Steer Select Valve	8-10
8-4	Service Brake	8-12
8-5	Lift Cylinder	8-14
8-6	Extend/Retract	8-20
8-7	Tilt & Tilt Compensating Cylinder	8-22
8-8	Auxiliary Hydraulics	8-26
8-9	Trailer Brakes	8-28

TABLE OF CONTENTS

FIGURE NO.	TITLE	PAGE NO.
SECTION 9 –		
HYDRAULIC COMPONENTS		9-1
9-1	Lift Cylinder and Hardware	9-2
9-2	Extend/Retract Cylinder and Hardware	9-4
9-3	Tilt Cylinder and Hardware	9-6
9-4	Compensation Cylinder and Hardware	9-8
9-5	Quick Coupler Cylinder	9-10
9-6	Side Shift Carriage Cylinder	9-12
9-7	Swing Carriage Cylinder	9-14
9-8	Main Control Valve	9-16
9-9	Piston Pump	9-20
9-10	Hydraulic Tank	9-22
9-11	Steer Select Valve	9-24
9-12	Diverter Valve	9-26
9-13	Combination Valve	9-28
9-14	Side Tilt Cylinder	9-30
9-15	Side Tilt Cylinder	9-32
9-16	Dynamic Select Valve	9-34
9-17	Trailer Brake Valve	9-36
SECTION 10 –		
ELECTRICAL		10-1
10-1	Engine Compartment Electrical Installation	10-2
10-2	Dual Battery Installation	10-12
10-3	Boom and Frame Electrical Installation	10-14
10-4	LMIS Installation	10-20
10-5	Cab Electrical Installation	10-24
10-6	Cab Switches	10-30
10-7	Work Lights	10-34
10-8	Drive Lights	10-36
10-9	Engine Harness	10-42
10-10	Transmission Harness	10-60
10-11	Front Frame Harness	10-62
10-12	Rear Frame Harness	10-64
10-13	Boom Auxiliary Electric Harness	10-66
10-14	Cab Floor Harness	10-68
10-15	Cab Floor Harness	10-76
10-16	Cab Roof Harness	10-84
10-17	Reverse Fan Harness	10-86
10-18	Engine Speed Sensor Harness	10-88
10-19	DPF Jumper Harness	10-90
10-20	ECM To Injector Harness	10-94
10-21	LMIS Cab Harness	10-96
10-22	LMIS Frame Harness	10-98
10-23	LMIS Lift Extension Harness	10-100

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com