

**CROWN**



**Parts Manual**

**ESR4000** Series

---

# **CROWN**

## ***TABLE OF CONTENT***

---

## Table of Content

ITD – INTRODUCTION	PAGE	SERIAL NR. CUT	REV.
Allgemeines .....	7		

SECTION 1 – COVERS	PAGE	SERIAL NR. CUT	REV.
Covers .....	12,14,16		Rev.1 10/02
Reach Carriage .....	18,20		Rev.1 10/02
Load Wheel .....	22		
Battery Latch .....	24		Rev.1 10/02
Battery Reach Out .....	26,28		
Seat & Pan .....	30		Rev.1 10/02
Seat .....	32		
Rear Mirror .....	34		
Guide Wheels .....	36		

SECTION 2 – HYDRAULIC PART	PAGE	SERIAL NR. CUT	REV.
Tube-/Hose Layout .....	40		Rev.1 10/02
Hydraulic Tank .....	42		Rev.2 10/02
Hydraulic TT Mast .....	44,46		Rev.1 10/02
Valve Block .....	48,50		Rev.1 10/02
Reach Manifold .....	52		
Hydraulic Motor .....	54		
Pump .....	56		
Pump Motor and Pump .....	58		Rev.1 10/02
Pump Motor .....	60		
Fan .....	62		

SECTION 3 – DRIVE UNIT	PAGE	SERIAL NR. CUT	REV.
Drive Unit .....	66,68		Rev.1 10/02
Turntable .....	70		
Gearbox .....	72		Rev.1 10/02
Drive Motor .....	74		
Fan .....	76		Rev.1 10/02

SECTION 4 – ELECTRICAL	PAGE	SERIAL NR. CUT	REV.
Electrical Compartment .....	80,82,84		Rev.1 10/02
Contactors .....	86		
Mast Wiring .....	88,90		Rev.1 10/02
Switch HGTS Lift Speed Reduction .....	92		Rev.1 10/02
Height Encoder .....	94,96		Rev.1 10/02
Joystick and Emergency Disconnect Switch .....	98		Rev.1 10/02
Direction Switch/Horn Button .....	100		Rev.1 10/02
Floorplate .....	102		Rev.1 10/02
Accelerator .....	104		Rev.1 10/02
Dead Man Pedal .....	106		Rev.1 10/02
DC/DC Converter .....	108		
Dash Panel .....	110		Rev.1 10/02
Display Module .....	112		Rev.1 10/02
Steer Indicator .....	114		
Flashing Beacon .....	116		
Working Light .....	118,120		
Reverse Alarm .....	122		

Horn .....	124 .....	Rev.1 10/02
Cooling System .....	126	

<b>SECTION5 – BRAKE SYSTEM</b>	<b>PAGE</b>	<b>SERIAL NR. CUT</b>	<b>REV.</b>
Brake Circuit .....	130 .....		Rev.1 10/02
Foot Brake .....	132		
Drive Motor Brake .....	134		
Load Wheel Brake .....	136		
Brake Cylinder .....	138 .....		Rev.1 10/02

<b>SECTION 6 – STEERING</b>	<b>PAGE</b>	<b>SERIAL NR. CUT</b>	<b>REV.</b>
Steering Column .....	142,144,146 .....		Rev.1 10/02

<b>SECTION 7 – MAST-/LIFT STRUCTURE</b>	<b>PAGE</b>	<b>SERIAL NR. CUT</b>	<b>REV.</b>
TT Mast 1.4t/1.6t .....	150,152 .....		Rev.1 10/02
TT Mast 2.0t .....	154,156 .....		Rev.1 10/02
Lift Chain TT Mast .....	158,160 .....		Rev.1 10/02
Tilt/Sideshift .....	162,164,166 .....		Rev.1 10/02
Tilt/Sideshift-Hydraulic .....	168,170,172 .....		Rev.2 10/02
Lift Buffer .....	174 .....		Rev.1 10/02
Fork .....	176 .....		Rev.1 10/02
Load Backrest .....	178		
Yoke .....	180 .....		Rev.1 10/02

<b>SECTION 8 – CYLINDER</b>	<b>PAGE</b>	<b>SERIAL NR. CUT</b>	<b>REV.</b>
Lift Cylinder 1.4t/1.6t .....	184		
Lift Cylinder 2.0t .....	186 .....		Rev.1 10/02
Free Lift Cylinder 1.4t/1.6t .....	188 .....		Rev.1 10/02
Free Lift Cylinder 2.0t .....	190 .....		Rev.1 10/02
Cylinder Reach .....	192 .....		Rev.1 10/02

<b>SECTION10 – MISCELLANEOUS SERVICE INF.</b>	<b>PAGE</b>	<b>SERIAL NR. CUT</b>	<b>REV.</b>
Labels and Decals .....	196		

---

**CROWN**

***INTRODUCTION***

---

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)