

CROWN

Parts Manual



FC4000 Series

CROWN

TABLE OF CONTENT

Table of Content

ITD – INTRODUCTION	PAGE	SERIAL NR. CUT	REV.
General	7		
Model - Number	8		
SECTION 1 – COVERS	PAGE	SERIAL NR. CUT	REV.
Covers	14,16,18,20,22		
Seat & Pan	24		
Seat (Static).....	26		
Seat (Suspension)	28		
SECTION 2 – HYDRAULIC PARTS	PAGE	SERIAL NR. CUT	REV.
Tube/Hose Layout	32,34,36,38,40,42		
Control Valve Linkage	44,46,48		
Control Lever	50		
Hydraulic TL & TT Mast	52		
Hydraulic Accessories TL Mast	54		
Hydraulic Accessories TT Mast	56		
Valve Bloc	58,60		
Tilt Manifold	62		
Park Brake Release Manifold	64		
Lowering Flow Control Manifold	66		
Accessory Manifold	68		
Pump	72		
Pump Motor	74		
SECTION 3 – DRIVE UNIT	PAGE	SERIAL NR. CUT	REV.
Gear Box	78		
Drive Motor	82		
Drive Tire	84		
SECTION 4 – ELEKTICAL	PAGE	SERIAL NR. CUT	REV.
Socket - Housing	90		
Electrical Components	94		
Contactor Panel	96,100,104		
Panel.....	108,110		
Distribution Panel	112		
Fuse Box	114		
Contactor (Forward & Reverse)	116		Rev. 4 09/95
Contactor ("EE")	118		Rev. 2 11/01
Contactor ("EE")	120		Rev. 3 11/01
Contactor (Steering)	122		Rev. 2 12/93
Contactor ("EE")	124		Rev. 3 11/01
Contactor (Pump)	126		
Tilt Limit Switch	128		
Mast Wiring (TL & TT)	130,132		
Directional Control	134		Rev. 1 09/01
Foot Operated Directional Control	136		
Accelerator	138		
Diagnostic Switch	140		
Park Brake Switch	142		
Working Light	144		Rev. 1 03/02

Working Light	146
Working Light - TT Mast	148
Light Rear	150,152

SECTION 5 – BRAKE	PAGE	SERIAL NR. CUT	REV.
Foorbrake	156		
Drive Brake	158		
Park - Brake	160		
Brake Cylinder	162		

SECTION 6 – STEERING	PAGE	SERIAL NR. CUT	REV.
Pump - Steering & Drive Brake	166		
Pump Motor (Steering)	168		Rev. 2 10/00
Steer Wheel	170		
Steer Axle	172		
Steer Cylinder	174		Rev. 2 05/96
Steering Column	176,178,180		

SECTION 7 – MAST/LIFT STRUCTURE	PAGE	SERIAL NR. CUT	REV.
TL Mast	184		
TL Mast Accessories	186		
Lift Chain TL Mast	188		
TT Mast	190		
TT Mast Accessories	194		
Lift Chain TT Mast	196		
Fork Carriage	198,200		
Sideshift	202		
Fork	204		
Load Backrest	208		
Yoke	210		

SECTION 8 – CYLINDER	PAGE	SERIAL NR. CUT	REV.
Lift Cylinder	214		
Free Lift Cylinder	216		
Tilt Cylinder	218		
Sideshift Cylinder	220		

SECTION 10 – LABELS & DECALS	PAGE	SERIAL NR. CUT	REV.
Labels & Decals	224,226,228		

This Manual contains 230 Pages

General

Maintenance and Repair

Only qualified and Crown authorised personnel may carry out work on the truck.

Otherwise warranty will be void.

Ordering Spare Parts

Spare parts can be ordered by quoting:

- The truck model number
- The truck serial number
- The truck specification number

This information can be found on the truck's data plate. Only if this information is provided can the order be processed quickly, correctly and reliably.

Please refer to the Technical Specifications Sheet for the utilisable loads, technical data and dimensions for this series. Brochures can be obtained from your CROWN dealer or from the following address:

Battery Weight Lbs.		D.C. Voltage
Max.	Min	
Max. A. H. Cap.	HR. Rate	Batt. Type
Truck Wt. Less Batt.		
Max. Grade With 12 In. Max. Fork Height		%
Load Tire Treac Width		
180° Traverse Sideshift		
Model Number		Fork Length
Serial Number		Max. Tilt Back °
Truck Data Number		
<small>This truck as released from the factory conforms to the mandatory requirements of the ANSI B56.1 Standard.</small>		
<small>Crown Equipment Corp. New Bremen, OH 45869</small>		
<small>CL B</small>		

TRUCK DATA PLATE

6312

CROWN Gabelstapler GmbH
Moosacher Str. 52
80809 Munich
GERMANY
Tel.: +49 (0)89 / 93 002 -0
Fax: +49 (0)89 / 93 002 -175 oder 133

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com