



PARTS MANUAL

GPC2000 SL SERIES





TABLE OF CONTENT

Table of Content

INTRODUCTION	PAGE	SERIAL NR. CUT	REV.
General	3		
COVERS	PAGE	SERIAL NR. CUT	REV.
Covers	6, 8, 10		
Castor Wheel	12		
Load Wheel	14		
HYDRAULIC	PAGE	SERIAL NR. CUT	REV.
Tube-/Hose Layout	18, 20		
Pump Motor and Pump	22		
DRIVE UNIT	PAGE	SERIAL NR. CUT	REV.
Drive Unite	26		
Gearbox	28, 30		
Drive Motor	32		
Knuckel	34, 36		
ELECTRIC	PAGE	SERIAL NR. CUT	REV.
Contacteur Panel	40		
Steering Controller GPC2040S	42		
Drive Board	44		
Contacteur/Traction	46		
Contacteur/Pump	48		
Quick Pic GPC2040S	50		
Accelerator Switch GPC2040S	52		
Lift/Lower and Horn GPC2040S	54		
Control Handle	56		
Handle	58, 60		
Foot Brake	62		
Platform	64		
Switch	66		
Battery Connector/Emergency Disconnecter	68		
Dash Board	70		
Steer Indicator GPC2040S	72		
BRAKE SYSTEM	PAGE	SERIAL NR. CUT	REV.
Brake	76		
STEERING	PAGE	SERIAL NR. CUT	REV.
Steering GPC2040S	80		
Steer Motor GPC2040S	82		
Steering GPC2040S	84, 86		
Steering Column	88		
MAST-/LIFT STRUCTURE	PAGE	SERIAL NR. CUT	REV.
Lift Structure	92		
Guard Rail	94		
Yoke	96		
CYLINDER	PAGE	SERIAL NR. CUT	REV.
Lift Cylinder	100		
Free Lift Cylinder	102		

CABIN/PLATFORM	PAGE	SERIAL NR. CUT	REV.
Platform	106, 108, 110		

MISCELLANEOUS SERVICE INF.	PAGE	SERIAL NR. CUT	REV.
Labels and Decals	114		



INTRODUCTION

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com