



CROWN



Parts Manual

Ersatzteilhandbuch

Manual de pièces détachés

GPC 2000 Series

CROWN

TABLE OF CONTENT

Table of Content

MA – SAFETY	PAGE	SERIAL NR. CUT	REV.
Safety Symbols used in the Manual	M/P-MA-0000-001		Rev.1 4/00
ITD – INTRODUCTION	PAGE	SERIAL NR. CUT	REV.
General	P-ITD-6620-001		Rev.1 11/00
Page Numbers	M/P-ITD-6620-002		
P-1.1 – LUBRICATION	PAGE	SERIAL NR. CUT	REV.
Lubrication Type	P-1.1-6620-002		
DIA – ELECTRICAL DIAGRAMS	PAGE	SERIAL NR. CUT	REV.
Diagrams 2020	M/P-DIA-6620-001		Rev.1 01/01
Diagrams 2040	M/P-DIA-6620-025		Rev.1 01/01
Diagrams 2040S	M/P-DIA-6620-050		
M/P – HYDRAUKIC	PAGE	SERIAL NR. CUT	REV.
Hydraulic Schematic	M/P-2.0-6620-001		
SECTION 1 – COVERS	PAGE	SERIAL NR. CUT	REV.
Caster Wheel	P-1.5-6620-001		Rev.2 01/01
Load Wheel	P-1.5-6620-025		Rev.1 01/01
Covers	P-1.6-6620-001		Rev.2 01/01
SECTION 2 – HYDRAULIC PARTS	PAGE	SERIAL NR. CUT	REV.
Tube/Hose Layout	P-2.1-6620-001		
Pumpen Motor and Pump	P-2.13-6620-001		Rev.2 01/01
SECTION 3 – DRIVE UNIT	PAGE	SERIAL NR. CUT	REV.
Drive Unit	P-3.0-6620-001		Rev.2 01/01
Gearbox	P-3.1-6620-001		Rev.1 01/01
Drive Motor	P-3.2-6620-001		Rev.3 06/01
Knuckle	P-3.3-6620-001		Rev.2 01/01
SECTION 4 – ELECTRICAL	PAGE	SERIAL NR. CUT	REV.
Control Panel	P-4.1-6620-001		Rev.2 01/01
Steering Controller	P-4.2-6620-001		
Drive Board	P-4.3-6620-001		Rev.2 01/01
Contactora	P-4.4-6620-001		
Quick Pic	P-4.6-6620-001		
Accelerator Switch	P-4.6-6620-025		
Lift/Lower and Horn	P-4.6-6620-050		
Control Handle	P-4.6-6620-075		Rev.2 01/01
Handle	P-4.6-6620-077		
Control Handle (Cap)	P-4.6-6620-079		Rev.2 01/01
Foot Brake/Walk Along 2020/2040	P-4.6-6620-100		Rev.1 01/01
Walk Along and Lift/Lower 2040S	P-4.6-6620-125		
Platform	P-4.6-6620-150		

Battery Connector/Emergency Disconnect	P-4.7-6620-001	Rev.1 2/97
Dash Board	P-4.9-6620-001	Rev.2 01/01
Steer Indicator	P-4.9-6620-025	

SECTION 5 – BRAKE	PAGE	SERIAL NR. CUT	REV.
Brake 2020	P-5.6-6620-001		Rev.1 2/97
Brake 2040/2040S	P-5.6-6620-025		Rev.2 01/01

SECTION 6 – STEERING	PAGE	SERIAL NR. CUT	REV.
Steering	P-6.2-6620-001		
Steering Motor	P-6.2-6620-025		
Steering	P-6.4-6620-001		
Steering Column	P-6.7-6620-001		Rev.1 2/97

SECTION 7 – MAST/LIFT STRUCTURE	PAGE	SERIAL NR. CUT	REV.
Platform Lift	P-7.1-6620-001		Rev.1 01/01
Fork Lift	P-7.1-6620-025		
Fork Carriage	P-7.7-6620-001		Rev.1 01/01
Lift Structure	P-7.8-6620-001		Rev.2 01/01
Load Backrest	P-7.10-6620-001		Rev.1 01/01
Guard Rail	P-7.10-6620-075		

SECTION 8 – CYLINDER	PAGE	SERIAL NR. CUT	REV.
Lift Cylinder (Platform Lift)	P-8.4-6620-001		Rev.1 01/01
Free Lift Cylinder	P-8.4-6620-025		
Free Lift Cylinder (Platform Lift and Combi)	P-8.4-6620-050		

SECTION 9 – CABIN/PLATFORM	PAGE	SERIAL NR. CUT	REV.
Platform	P-9.0-6620-001		Rev.2 01/01
Platform (Platform Lift/Fork Lift)	P-9.0-6620-075		
Platform (Fork Lift)	P-9.0-6620-100		

SECTION 10 – MISCELLANEOUS SERVICE INF.	PAGE	SERIAL NR. CUT	REV.
Labels and Decals	P-10.9-6620-001		Rev.2 01/01

Safety Symbols used in the Manual

To help guide you through the manual and to highlight particular danger areas, we have used graphic illustrations:

DANGER



This symbol indicates life-threatening risks

- Failure to comply with this notice may result in severe or fatal injuries to yourself or other people.

WARNING



This symbol indicates the risk of serious injury and/or serious material damage.

- Failure to comply with this notice may result in severe injuries to yourself or other people and/or serious material damage.

CAUTION



This symbol indicates the risk of minor injury and/or minor material damage.

- Failure to comply with this notice may result in minor injuries to yourself or other people and/or minor material damage.

INFORMATION



Contains additional information with supplementary notes and hints.

OPTION



These items relate to optional features not supplied with the standard version.

General Maintenance and Repair Safety Notes

DANGER



Read the safety notices in the truck Maintenance and Operator's Manuals.

- Failure to do so could result in severe or fatal injuries to maintenance personnel and/or other persons.

Motorised vehicles can be dangerous if maintenance and service are neglected. For this reason maintenance and inspections must be carried out at regular short intervals by trained personnel working to approved company guidelines.

DANGER



Follow all national/local safety regulations applicable for maintenance work, e.g. for work on higher levels.

- Failure to do so could result in severe or fatal injuries to maintenance personnel and/or other persons.

Maintenance and Repair

1. Maintenance work must only be carried out in accordance with the test and maintenance program contained in the present Maintenance Manual and any applicable service notices.
2. Only qualified and authorised personnel may carry out work on the truck.
3. Always keep fire extinguishers in good working condition. Do not approach fluid levels or leaks with a naked flame.
4. To clean, use a non flammable, non combustible cleaning solution which is groundwater-neutral. Only carry out cleaning with an oil separator. Protect the electrical system from dampness.
5. Keep the service area clean, dry and well-ventilated.
6. Do not allow oil to penetrate the ground or enter the draining system. Used oil must be recycled. Oil filters and desiccants must be treated as special waste products. Relevant applicable regulations must be followed.
7. Neutralise and thoroughly rinse any spilled battery fluid immediately.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com