

**Rear Mounted
Implements
for
Models VAC and VC
Tractors
with Case Eagle Hitch**

Operator's Manual

RI-166

Reprinted








THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

OPERATOR'S

INSTRUCTION MANUAL

Instructions for Attaching and Operating

REAR MOUNTED IMPLEMENTS

for

**MODELS VAC AND VA TRACTORS
WITH CASE EAGLE HITCH**




Est. 1842

J. I. CASE COMPANY • RACINE, WIS., U. S. A.

RI-166 (10M-10-49)

FIRST EDITION

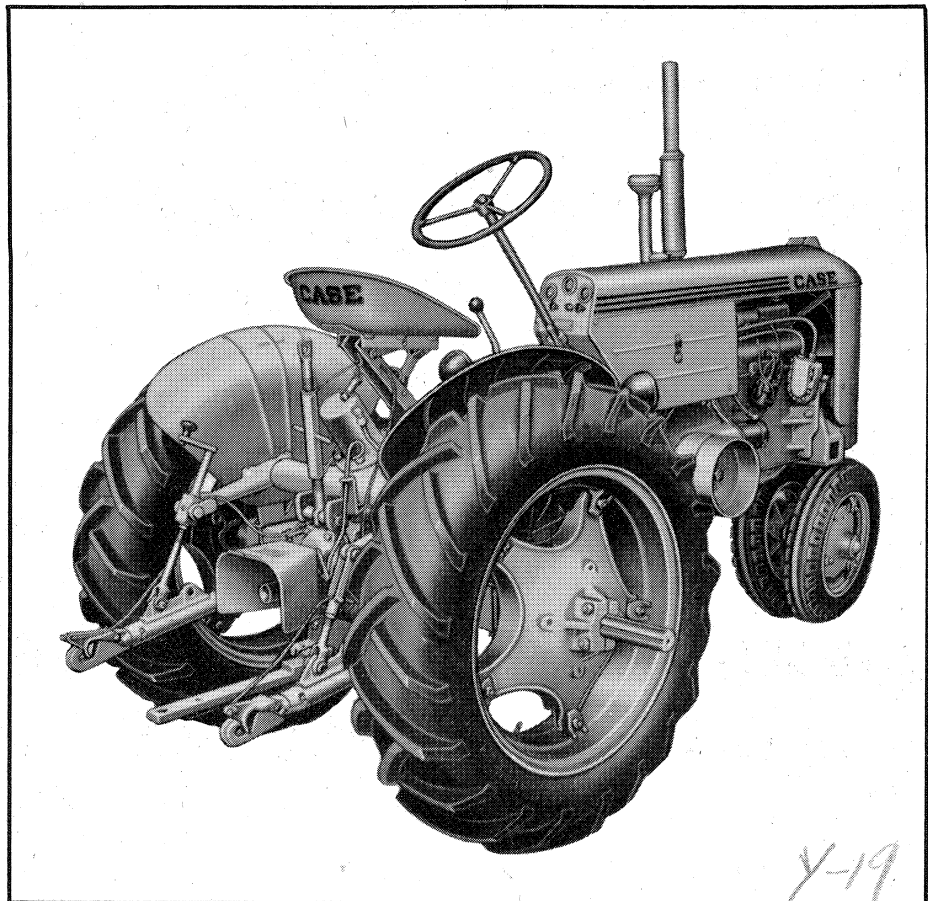

MODEL "VAC" TRACTOR WITH CASE EAGLE HITCH

TO PURCHASERS OF NEW CASE MACHINES



Congratulations on your purchase of a CASE machine. Welcome to the ever-increasing number of satisfied CASE owners.

The dependability and economical performance of your new CASE machine will prove that you were wise in making this choice. The organization back of your machine has been building quality farm equipment for more than a century. Your CASE machine was built in one of the largest and best equipped plants in the world. In this factory quality materials, the finest precision machinery, high grade workmanship, thorough inspection, and complete testing equipment are combined to give you the best in performance and economical operation.

The care which you give your machine will have a great deal to do with the service and satisfaction you get from it. By observing the precautions and suggestions in this manual, your CASE machine will serve you well for many years. Make this manual your guide. Should you need information not covered here, or should your machine require special servicing, contact your Case dealer. He has trained men who are kept informed on the best methods of servicing CASE machines in the field or in his shop.

When it becomes necessary, after long use, to replace certain parts on your machine, be sure to use only genuine CASE parts which insure proper fit and continued good service. These may be obtained from your CASE dealer. It is always helpful to provide him with the MODEL of your machine in addition to a description (and part number if available) of the parts required.

INDEX

	PAGE
BEDDER, DISK.....	18-20
CULTIVATOR, BEDDER.....	18-20
PLOW, DISK.....	8-16
PLOW, ONE BOTTOM.....	3-5
PLOW, TWO BOTTOM.....	3-5
PLOW, TWO-WAY.....	5-8
TILLER, FIELD.....	16-17
TOOLBAR, REAR MOUNTED.....	21-23
WARRANTY.....	24

INTRODUCTION

This manual is intended to illustrate in a general way the assembly and adjustment of the implements being made available for use on the Models "VA" and "VAC" Tractors with Case Eagle Hitch.

A separate manual, RI-162, is provided to cover care and operation instructions of the Hydraulic System and Case Eagle Hitch on Models "VAC", "VA", and "VAH" tractors.

"Right" and "Left" are designated when standing at the rear of the tractor and facing the direction of travel.

Rear wheel tread of the model VAC Tractor with Case Hitch can be adjusted from 48" to 88" to accommodate the mounted implements designed for various row spacings. Wheel settings for individual implements will be specified in various paragraphs in this manual.

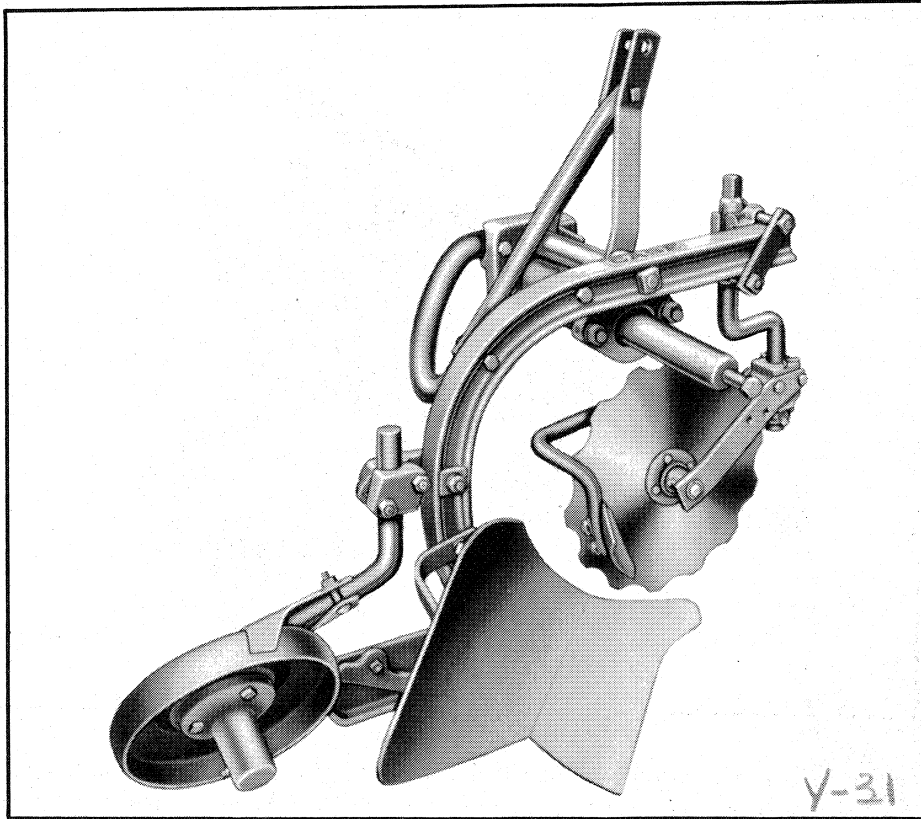


FIGURE 1 ONE-BOTTOM PLOW

ONE AND TWO BOTTOM PLOWS

- E16 one-bottom 16" mounted plow
- E18 one-bottom 18" mounted plow
- E22 two-bottom 12" mounted plow
- E24 two-bottom 14" mounted plow

Standard equipment for the one-bottom plow consists of a long landside bottom, coulter, pull bar bundle, and beam and mast bundle. The two-bottom plow bundles include bottoms, coulters, pull bar bundle, beam and mast bundle, and a rear furrow wheel. Optional sizes and types of coulters and bottoms are available.

A rear furrow wheel is available as extra equipment for the one-bottom plow. Coulter jointers are available as extra equipment for either the one or two-bottom plow.



Our support email:

ebooklibonline@outlook.com