

 
**T2250**

**S/N A859 11001 &  
Above**



**Bobcat®**

**SERVICE  
MANUAL**

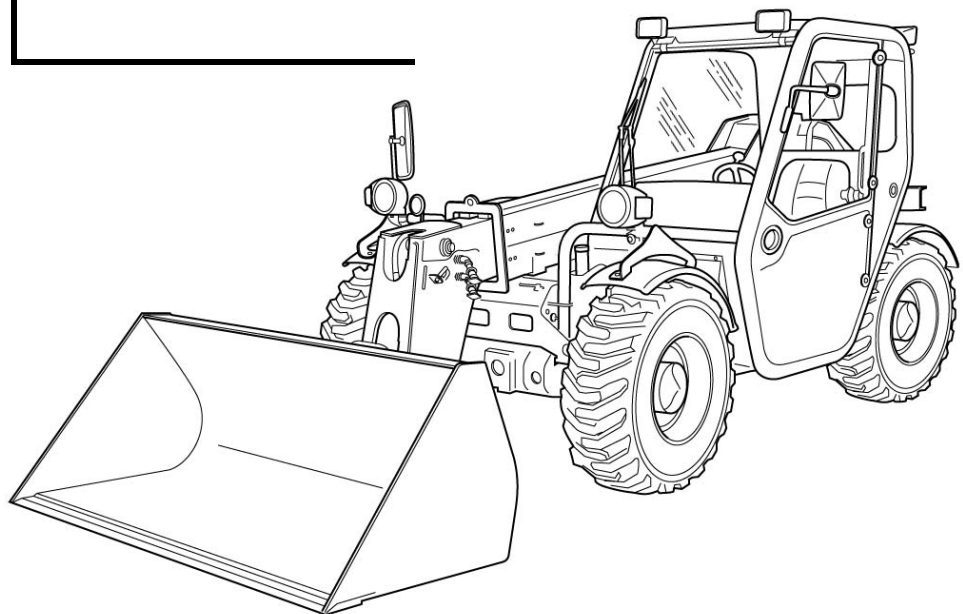

# MAINTENANCE SAFETY

## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

CORRECT

B-10731a

**⚠** Never service the Bobcat Telescopic Handler without instructions.



**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

CORRECT

B-16082

**⚠** Cleaning and maintenance are required daily.

WRONG

B-16080

**⚠** Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause boom to drop. Do not go under boom when raised unless supported by an approved boom stop. Replace if damaged.

WRONG

B-16079

**⚠** Never work on Telescopic Handler with boom up unless boom is held by an approved boom stop. Replace if damaged.  
**⚠** Never modify equipment or add attachments not approved by Bobcat Company.

WRONG

B-16081

**⚠** Have good ventilation when welding or grinding painted parts.  
**⚠** Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.  
**⚠** Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

WRONG

B-16078

**⚠** Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.  
**⚠** Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.

WRONG

B-6589

**⚠** Lead-acid batteries produce flammable and explosive gases.  
**⚠** Keep arcs, sparks, flames and lighted tobacco away from batteries.  
**⚠** Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use **genuine Bobcat replacement parts**.



---

## ALPHABETICAL INDEX (CONT'D)

MACHINE TORQUE SPECIFICATIONS .....	SPEC-30-1	
MAIN RELIEF VALVE .....	20-80-1	
MANIFOLD .....	20-240-1	WEAR PADS (FRONT)..... 50-50-1
MUFFLER .....	70-30-1	WEAR PADS (REAR)..... 50-60-1
OIL COOLER .....	30-20-1	
OPERATOR CAB .....	10-20-1	
OPERATOR CAB .....	50-10-1	
OPERATOR SEAT .....	50-20-1	
PARKING BRAKE .....	20-190-1	
PARKING BRAKE .....	40-50-1	
PEDAL ASSEMBLY .....	60-140-1	
PORT RELIEF VALVES.....	20-100-1	
WORKGROUP LOCKOUT VALVE .....	20-200-1	
PRESSURE SWITCH .....	80-140-1	
BOB-TACH .....	50-90-1	
BOB-TACH CYLINDER .....	20-90-1	
REAR AXLE .....	40-90-1	
REAR WEIGHTS.....	50-100-1	
REAR WIPER MOTOR .....	60-130-1	
RECEIVER / DRIER.....	80-130-1	
REGULAR MAINTENANCE.....	80-40-1	
REMOTE START .....	10-180-1	
SAFETY .....	80-30-1	
SERVICE BRAKE .....	40-80-1	
SERVICE SCHEDULE .....	10-50-1	
SERVICE SOFTWARE .....	60-160-1	
STARTER .....	60-40-1	
STEERING ANGLE ADJUSTMENT .....	40-60-1	
STEERING CYLINDER (FRONT).....	20-60-1	
STEERING CYLINDER (REAR) .....	20-61-1	
STEERING MODE VALVE BLOCK .....	20-110-1	
STEERING VALVE .....	20-160-1	
SYSTEM CHARGING AND RECLAMATION .....	80-100-1	
SYSTEM TROUBLESHOOTING CHART .....	80-70-1	
TEMPERATURE AND PRESSURE .....	80-80-1	
TIRE MAINTENANCE .....	10-130-1	
TILT CYLINDER .....	20-50-1	
TOP WIPER MOTOR .....	60-120-1	
TORQUE SPECIFICATIONS FOR BOLTS.....	SPEC-40-1	
TOW VALVE .....	20-220-1	
TOWING THE TELESCOPIC HANDLER.....	10-40-1	
TRANSPORTING THE TELESCOPIC HANDLER.....	10-30-1	
TRAVEL LEVER.....	60-70-1	
TROUBLESHOOTING .....	40-10-1	
TELESCOPIC HANDLER TELESCOPIC TOOL CARRIER (TTC) SPECIFICATIONS .....	SPEC-10-1	

---

## CONTENTS

DELIVERY REPORT .....	IX
FOREWORD .....	III
SAFETY INSTRUCTIONS .....	V
SERIAL NUMBER LOCATION .....	VIII
BOBCAT TELESCOPIC HANDLER IDENTIFICATION .....	X
SAFETY AND MAINTENANCE .....	10-01
HYDRAULIC SYSTEM .....	20-01
HYDROSTATIC SYSTEM .....	30-01
DRIVE SYSTEM .....	40-01
MAIN FRAME .....	50-01
ELECTRICAL SYSTEM AND ANALYSIS .....	60-01
ENGINE SERVICE .....	70-01
HEATING, VENTILATION, AIR CONDITIONING .....	80-01
SPECIFICATIONS .....	SPEC-01

**SAFETY &  
MAINTENANCE**

**HYDRAULIC  
SYSTEM**

**HYDROSTATIC  
SYSTEM**

**DRIVE  
SYSTEM**

**MAIN FRAME**

**ELECTRICAL  
SYSTEM &  
ANALYSIS**

**ENGINE  
SERVICE**



 


 
 
 

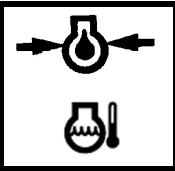 
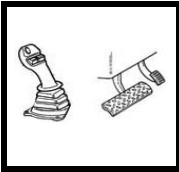 



**HVAC**

**SPECIFICATION**

# FOREWORD

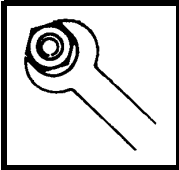This manual is for the Bobcat Telescopic Handler mechanic. It provides necessary servicing and adjustment procedures for the Bobcat Telescopic Handler and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

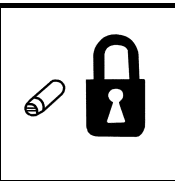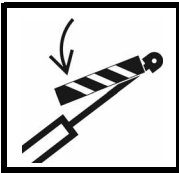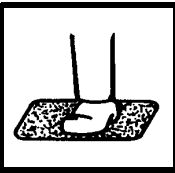A general inspection of the following items must be made after the Telescopic Handler has had service or repair:


- |   |   |  |   |
|---|---|--|---|
| 1. Check that ROPS/FOPS (including right side window) is in good condition and is not modified. |    | 8. The parking brake must function correctly.  |    |
| 2. Check that ROPS mounting hardware is tightened and is Bobcat approved.                       |    | 9. Enclosure door latches must open and close freely.  |    |
| 3. The seat belt must be correctly installed, functional and in good condition.                 |    | 10. Attachment locking pins must function correctly and be in good condition. Bob-Tach wedges and linkages (if equipped) must function correctly and be in good condition. |    |
| 4. Check boom stop, replace if damaged.   |  | 11. Safety treads must be in good condition.   |  |
| 5. Machine signs (decals) must be legible and in the correct location.                          |  | 12. Check for correct function of indicator lamps and gauges.  |  |
| 6. Joystick control lever and foot pedals must return to neutral.                               |  | 13. Check hydraulic fluid level, engine oil level and fuel supply.   |  |
| 7. Check for correct function of the work lights.   |  | 14. Inspect for fuel, oil or hydraulic fluid leaks.  |  |

FW VH-0308 SM


15. Lubricate the Telescopic Handler.



 20. Inspect for loose or broken parts or connections.

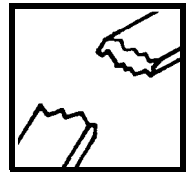

 
16. Check the condition of the battery and cables.

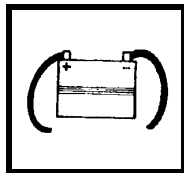

21. Check for any field modification not completed.



 
17. Inspect the air cleaner for damage or leaks. Check the condition of the element.

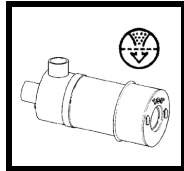

22. Operate the machine and check all functions.



 
18. Check the electrical charging system.

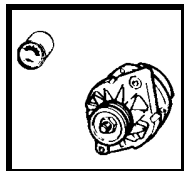


23. Check function or condition of all equipped options and accessories (examples: back-up alarm, fire extinguisher, rotating beacon, front stabilizers, etc.).



 19. Check tires for wear and pressure. Use only approved tires.

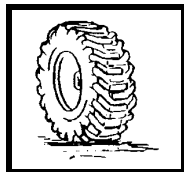

 24. Recommend to the owner that all necessary corrections be made before the machine is returned to service.

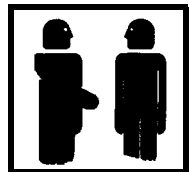

**CALIFORNIA  
PROPOSITION 65 WARNING**  
Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects and other reproductive harm.

FW VH-0308 SM

## SAFETY INSTRUCTIONS



Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284



The signal word DANGER on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107



The signal word WARNING on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

 
W-2044-1107

The following publications provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.

- The Operation & Maintenance Manual delivered with the machine or attachment contains operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.

The dealer and owner / operator review the recommended uses of the product when delivered. If the owner / operator will be using the machine for a different application(s) he or she must ask the dealer for recommendations on the new use.

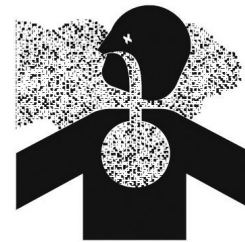

Cutting or drilling concrete containing sand or rock containing quartz may result in exposure to silica dust.

SI VH-0308 SM



## FIRE PREVENTION



### Maintenance

The machine and some attachments have components that are at high temperatures under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it can cause a fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential fire hazard.

The operator's area, engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazards and overheating.

All fuels, most lubricants and some coolants mixtures are flammable. Flammable fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire.

### Operation

Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.

### Electrical



Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part or wires that are loose or frayed.

Battery gas can explode and cause serious injury. Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting. Do not jump start or charge a frozen or damaged battery. Keep any open flames or sparks away from batteries. Do not smoke in battery charging area.

## Hydraulic System

Check hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Hydraulic tubes and hoses must be properly routed and have adequate support and secure clamps. Tighten or replace any parts that show leakage.

Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.

### Fueling



Stop the engine and let it cool before adding fuel. No smoking! Do not refuel a machine near open flames or sparks. Fill the fuel tank outdoors.

### Starting

Do not use ether or starting fluids on any engine that has glow plugs. These starting aids can cause explosion and injure you or bystanders.

Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.

SI VH-0308 SM

**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)