

 


Bobcat®

Service Manual Planer

(14 Planer) S/N 231200101 & Above
(18 Hyd Planer) S/N 231611101 & Above
(24 Hyd Planer) S/N 231711101 & Above

(Surface Planer) S/N 231100101 & Above
(40 Hyd Planer) S/N 991400101 & Above
(Curb Planer) S/N 234000101 & Above

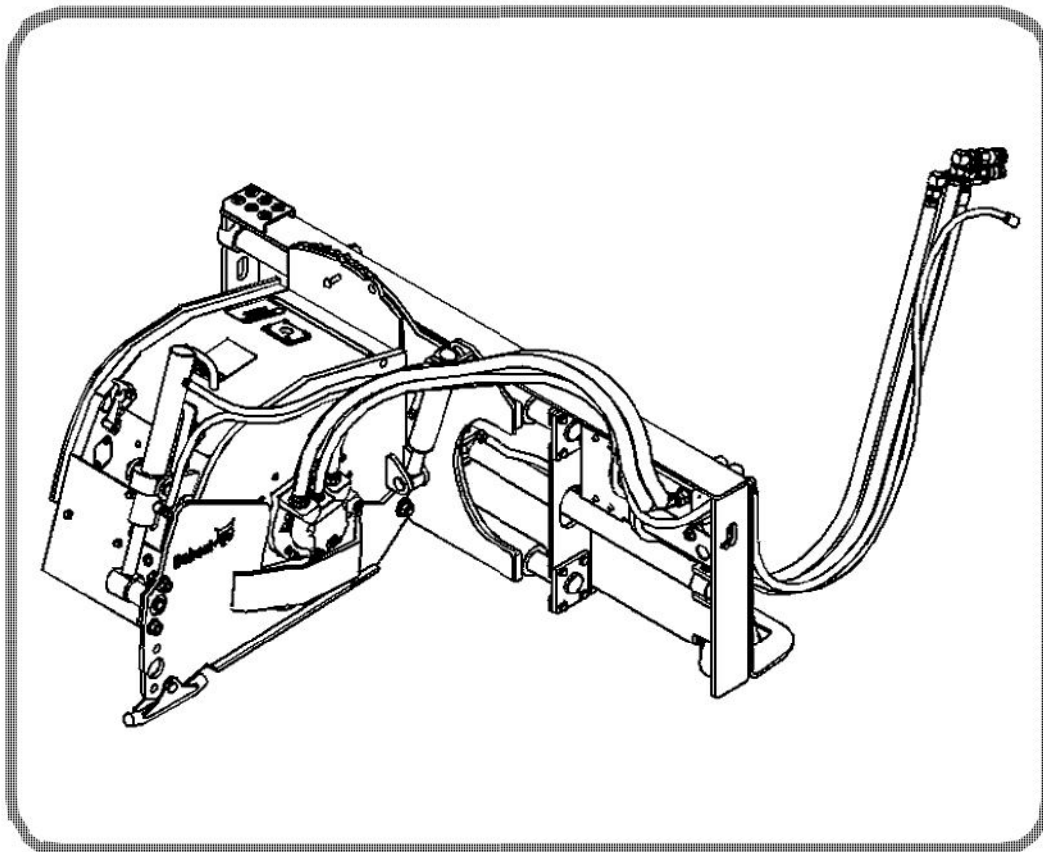

Dealer Copy -- Not for Resale



MAINTENANCE SAFETY



 
WARNING







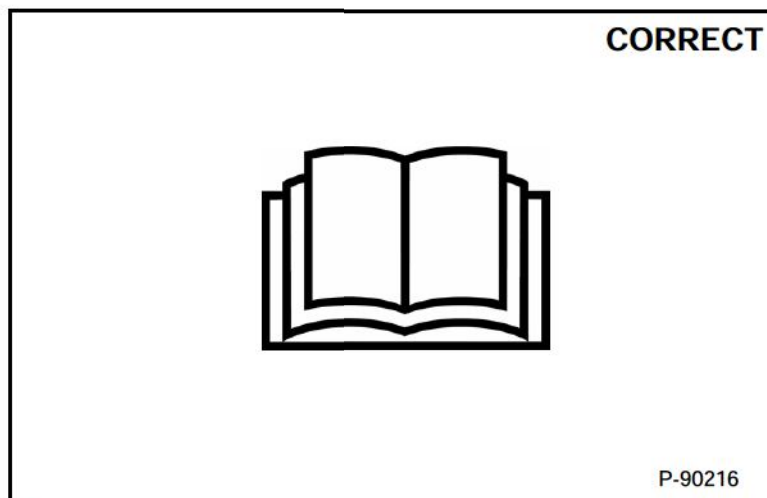

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.



-  Never service attachments / implements without instructions. See Operation & Maintenance Manual and Attachment / Implement Service Manual.
-  Cleaning and maintenance are required daily.
-  Never service or adjust attachment / implement with the engine running unless instructed to do so in manual.
-  Always lower the attachment / implement to the ground before lubricating or servicing.
-  Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate skin or eyes.
-  Stop, cool and clean engine of flammable materials before checking fluids.
-  Keep body, loose objects and clothing away from moving parts, electrical contacts, hot parts and exhaust.
-  Safety glasses are needed for eye protection from electrical arcs, battery acid, compressed springs, fluids under pressure and flying debris or when tools are used. Use eye protection approved for type of welding.

Dealer Copy -- Not for Resale

MSW30-0409

CONTENTS

SAFETY AND MAINTENANCE	10-01
HYDRAULIC SYSTEM	20-01
MAINFRAME	30-01
SPECIFICATIONS	SPEC-01
ALPHABETICAL INDEX	INDEX-01

Dealer Copy -- Not for Resale

FOREWORD

SERIAL NUMBER LOCATION	1-7
(14 Planer) Standard Flow Planer (S/N 231200101 & Above)	1-7
(18 And 24 Hyd Planer) High Flow Planer (S/N 231711101 & Above, S/N 231611101 & Above)	1-7
(Surface Planer) Planer (S/N 231100101 & Above)	1-7
(40 Hyd Planer) High Flow Planer (S/N 991400101 & Above)	1-7
(Curb) Planer (S/N 234000101 & Above)	1-8
 DELIVERY REPORT	 1-8
 ATTACHMENT IDENTIFICATION	 1-9
(14 Inch) Standard Flow Planer (S/N 231200101 & Above)	1-9
(18 And 24 Inch) High Flow Planer (S/N 231711101 & Above, S/N 231611101 & Above)	1-10
(16 Inch) Surface Planer (S/N 231100101 & Above)	1-11
(40 Inch) High Flow Planer (S/N 991400101 & Above)	1-12
Curb Planer (S/N 234000101 & Above)	1-13

SERIAL NUMBER LOCATION

(14 Planer) Standard Flow Planer (S/N 231200101 & Above)


Figure 1



Always use the serial number [Figure 1] of the planer when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

(18 And 24 Hyd Planer) High Flow Planer (S/N 231711101 & Above, S/N 231611101 & Above)

 Figure 2

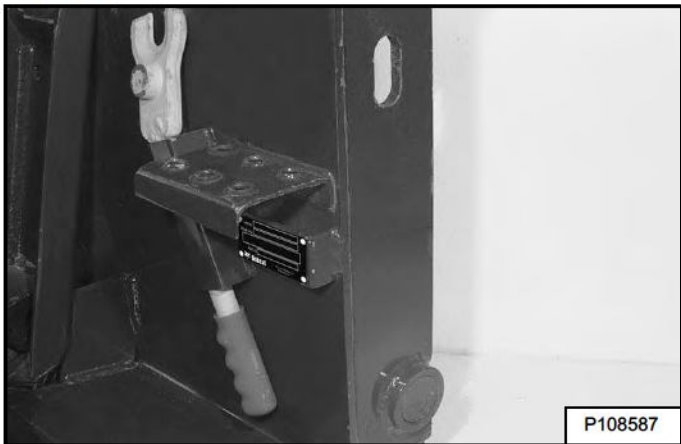

Always use the serial number [Figure 2] of the planer when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

(Surface Planer) Planer (S/N 231100101 & Above)

Figure 3



Always use the serial number [Figure 3] of the planer when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

(40 Hyd Planer) High Flow Planer (S/N 991400101 & Above)

Figure 4




Always use the serial number [Figure 4] of the planer when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

Dealer Copy -- Not for Resale

SERIAL NUMBER LOCATION (CONT'D)

(Curb) Planer (S/N 234000101 & Above)

 Figure 5

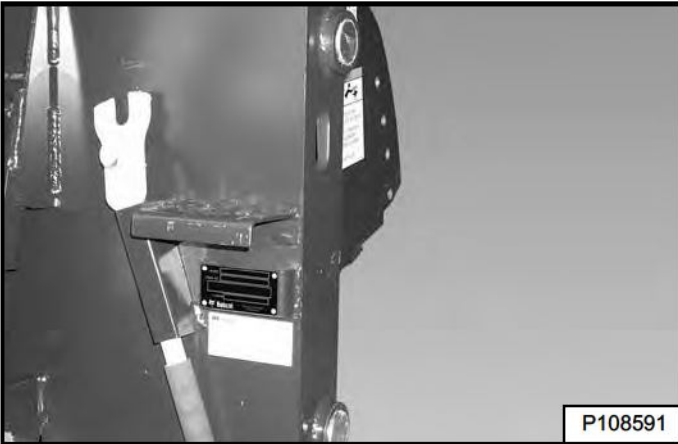

Always use the serial number [Figure 5] of the curb planer when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

DELIVERY REPORT

Figure 6




NA7494

The delivery report [Figure 6] must be completed by the dealer and signed by the owner or operator when the Bobcat planer is delivered. An explanation of the form must be given to the owner.

ATTACHMENT IDENTIFICATION

 
(14 Inch) Standard Flow Planer (S/N 231200101 & Above)

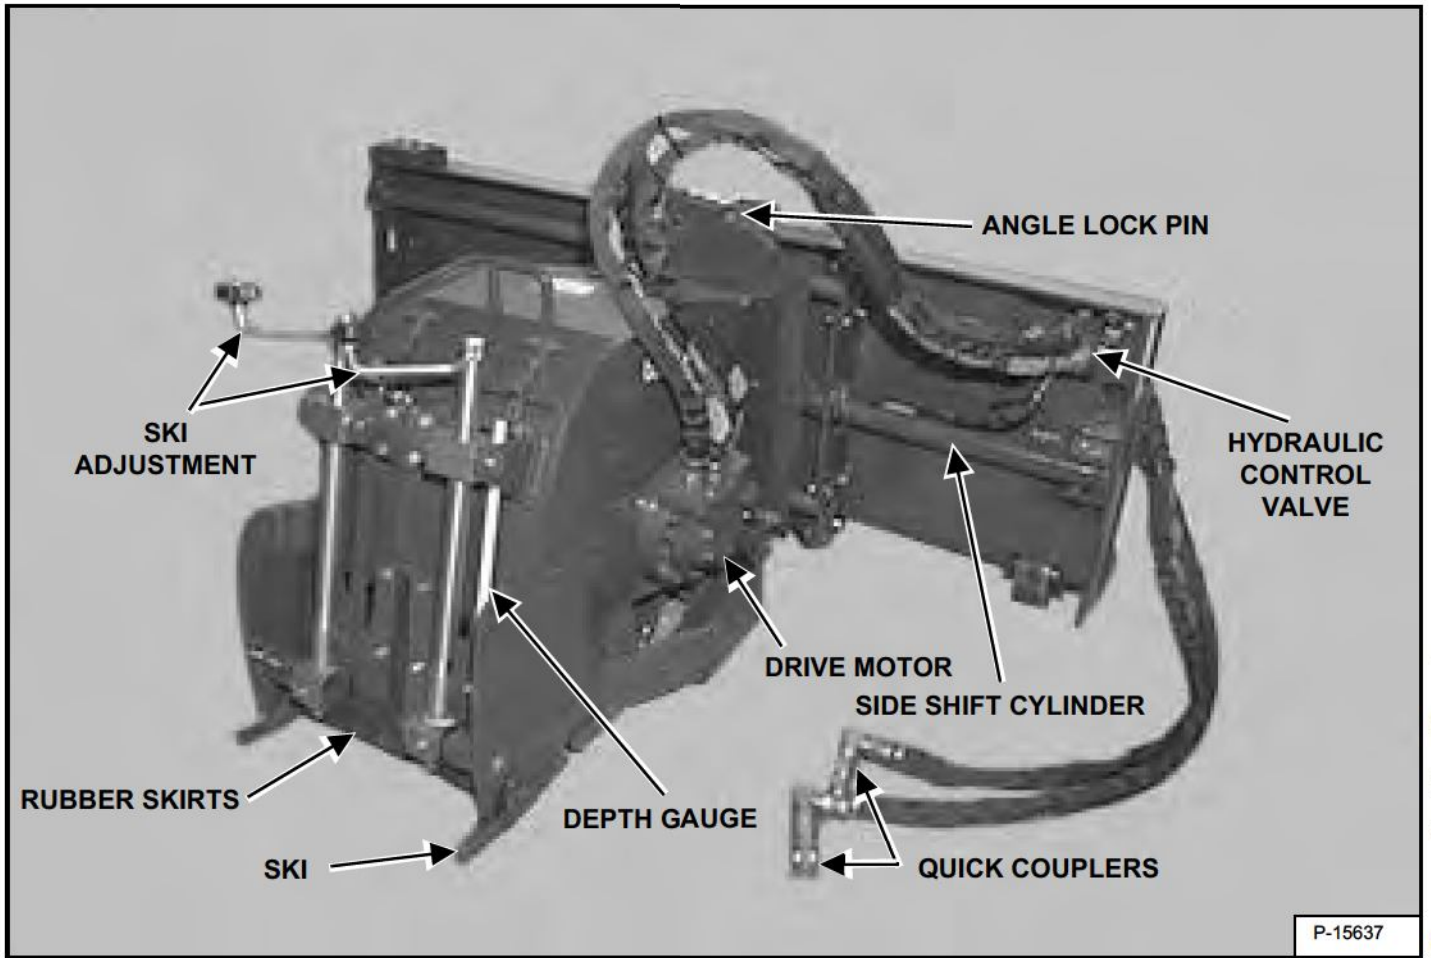

Dealer Copy -- Not for Resale

ATTACHMENT IDENTIFICATION (CONT'D)

 
(18 And 24 Inch) High Flow Planer (S/N 231711101 & Above, S/N 231611101 & Above)

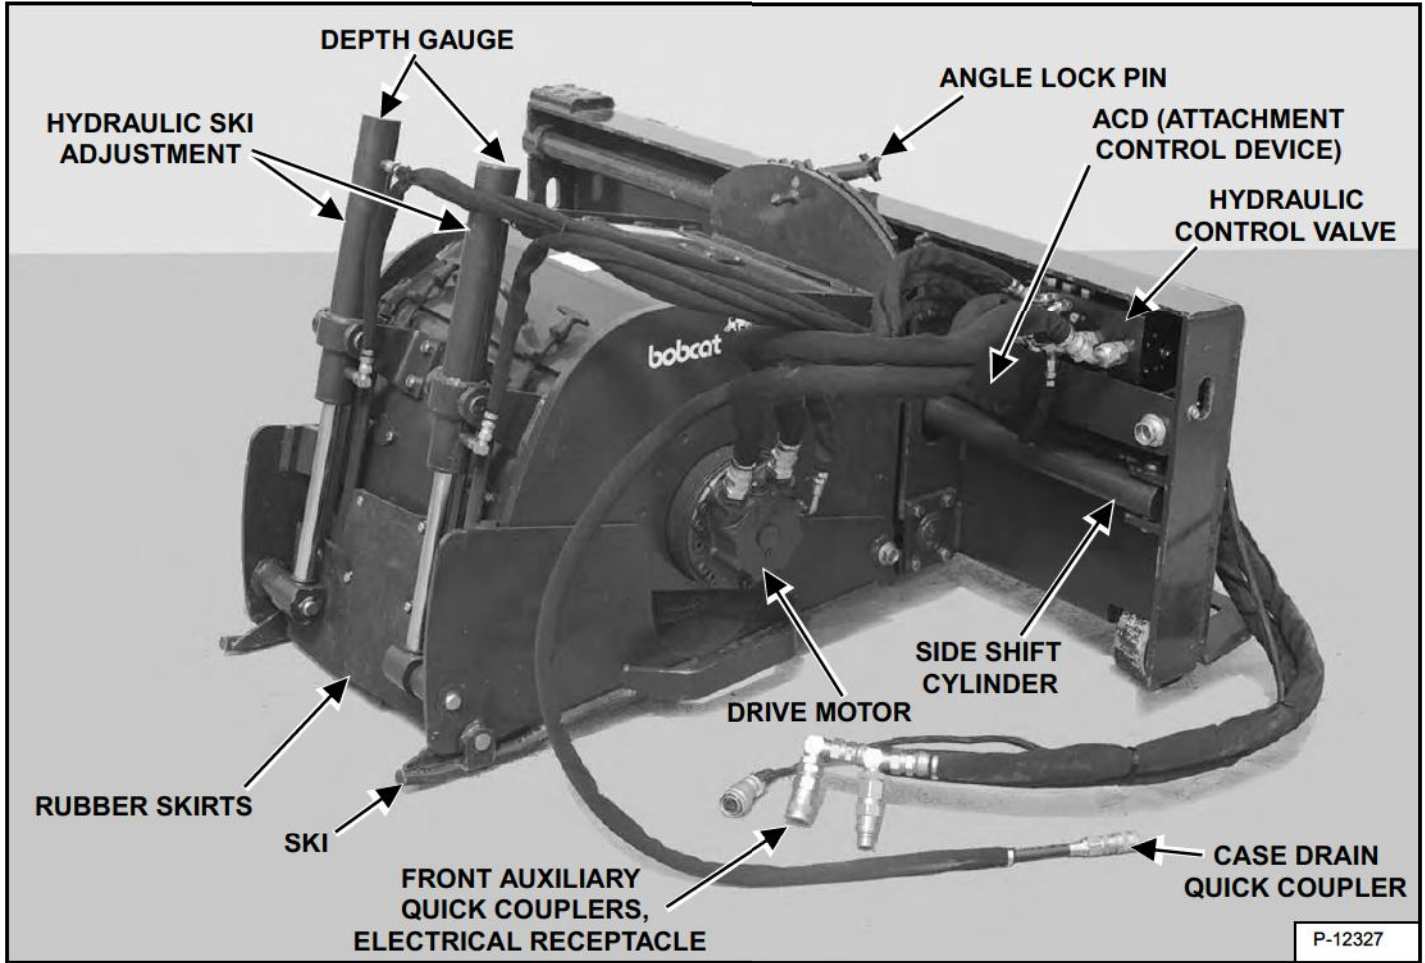

Dealer Copy -- Not for Resale

ATTACHMENT IDENTIFICATION (CONT'D)

 
(16 Inch) Surface Planer (S/N 231100101 & Above)

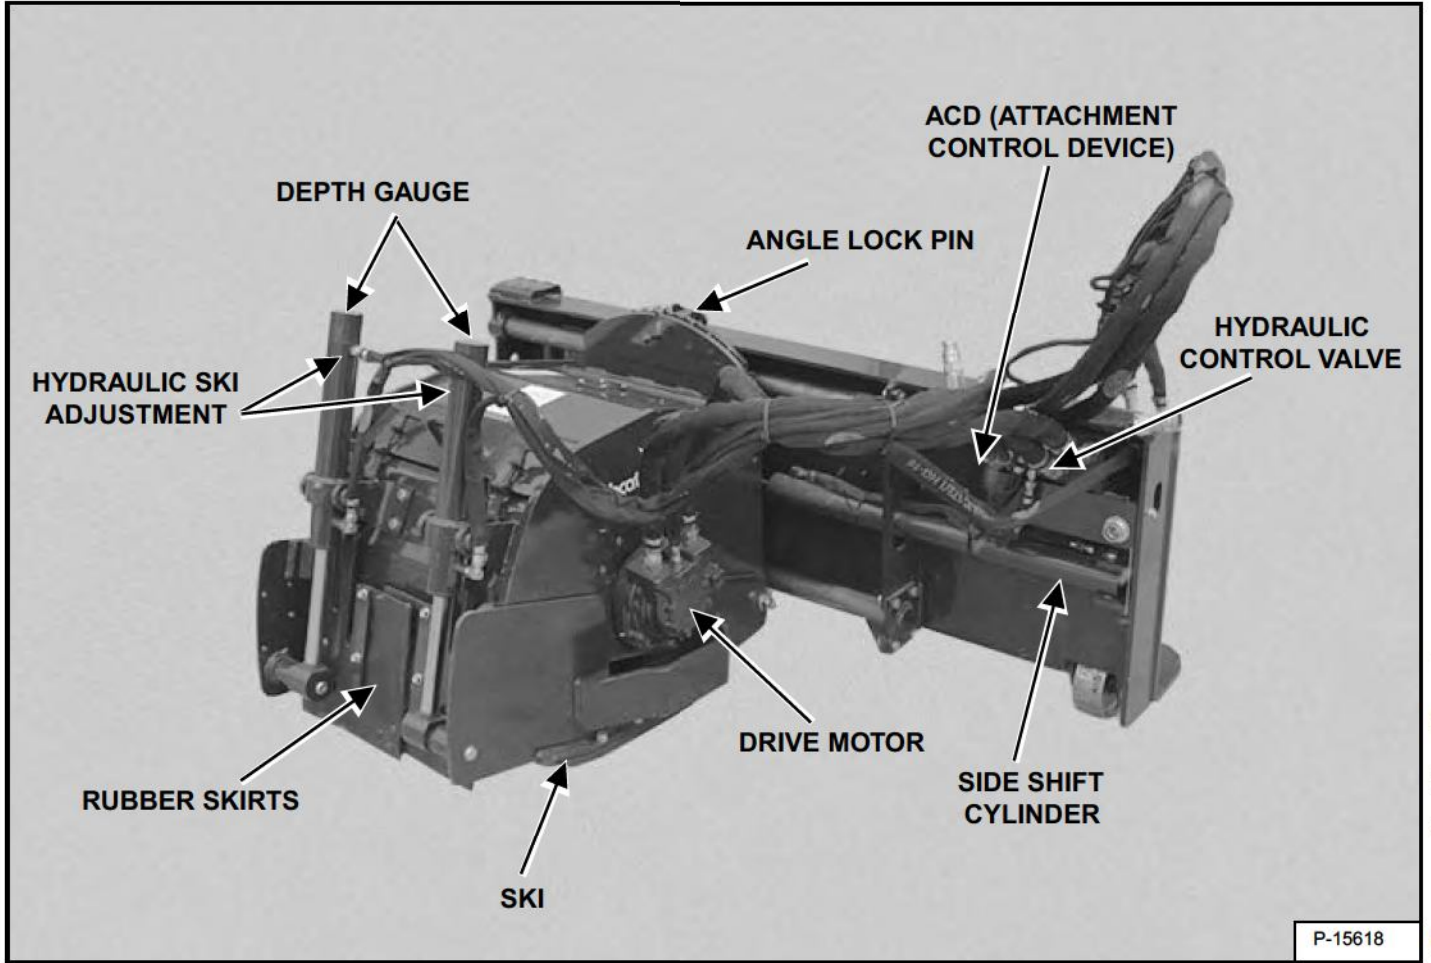

Dealer Copy -- Not for Resale

ATTACHMENT IDENTIFICATION (CONT'D)


 
(40 Inch) High Flow Planer (S/N 991400101 & Above)

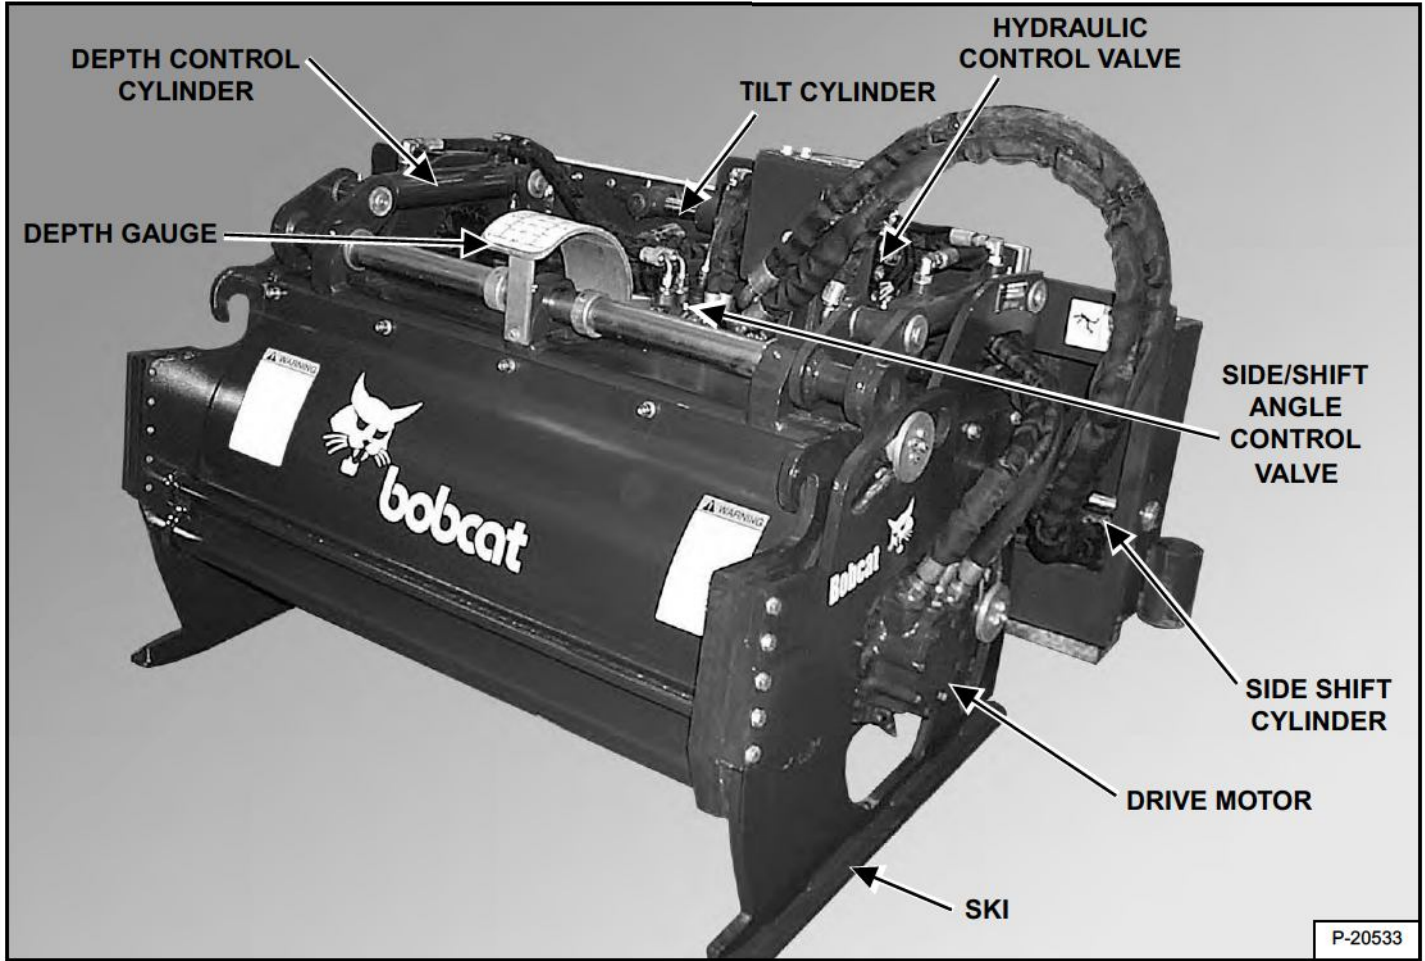

Dealer Copy -- Not for Resale

ATTACHMENT IDENTIFICATION (CONT'D)

  Curb Planer (S/N 234000101 & Above)

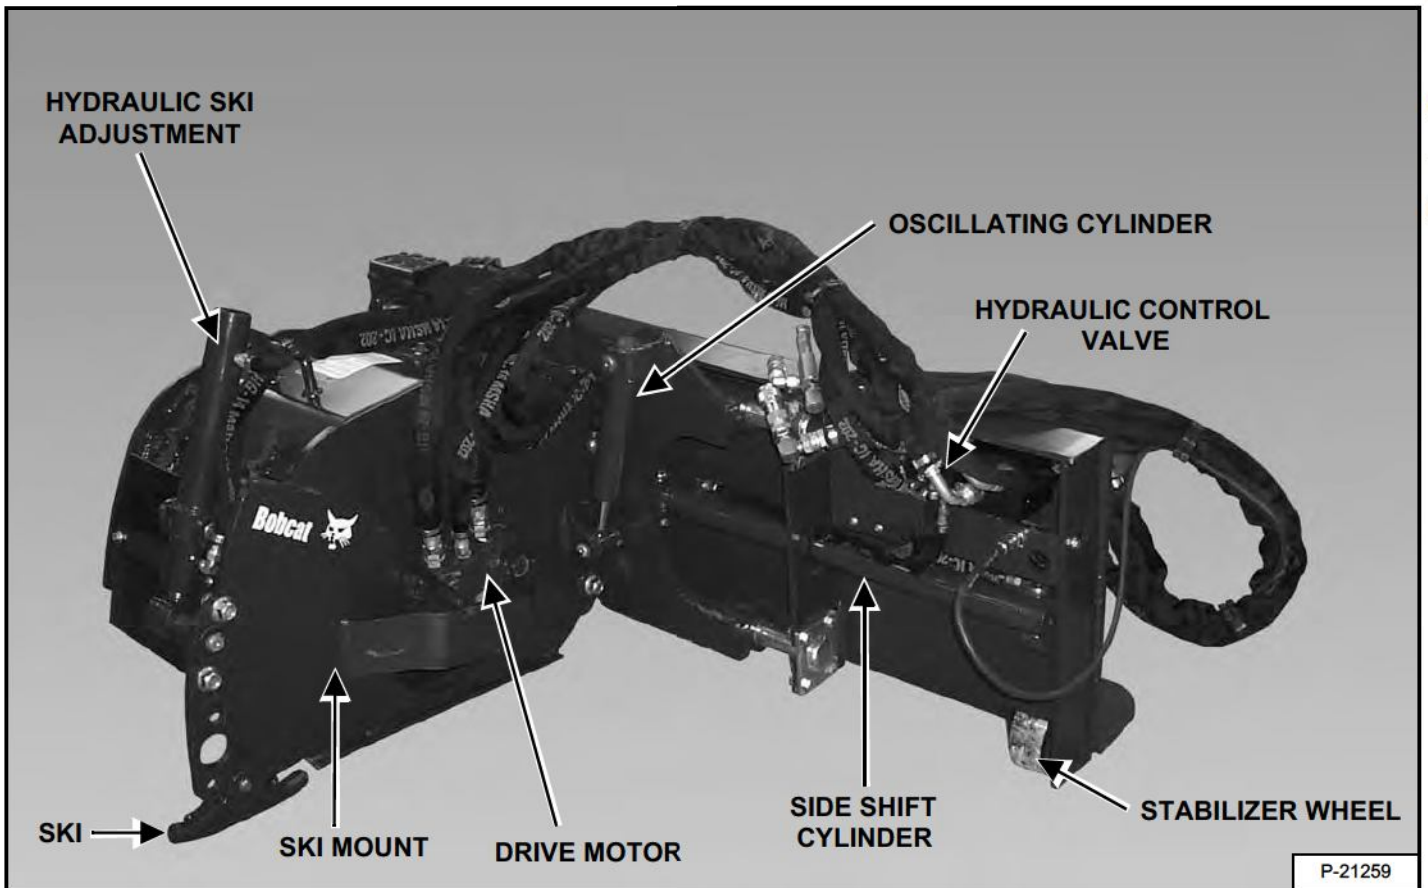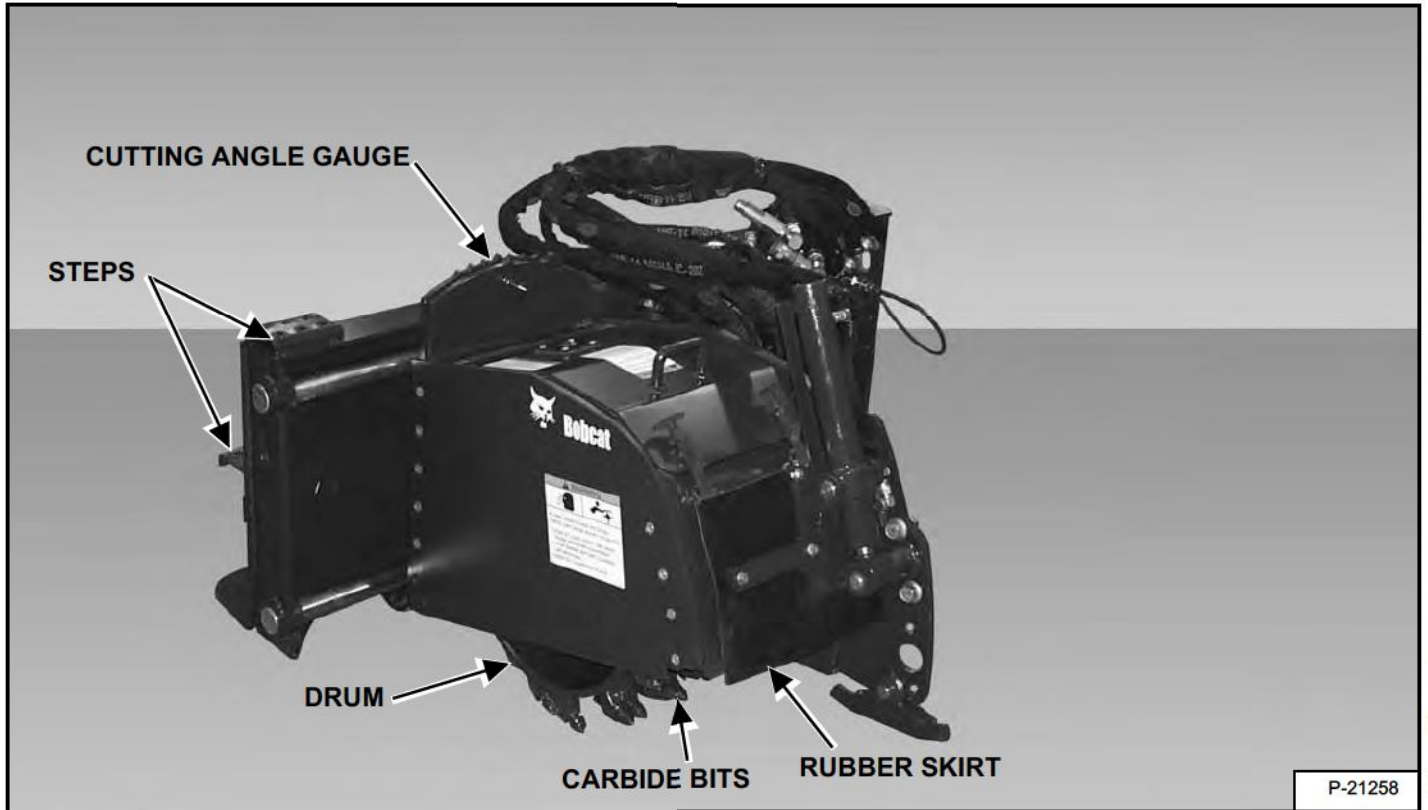

Dealer Copy -- Not for Resale

SAFETY AND MAINTENANCE

TRUBLESHOOTING	10-10-1
Chart (14 Inch Standard Flow)	10-10-1
Chart (18 And 24 Inch High Flow)	10-10-2
Chart (16 Inch Surface)	10-10-3
Chart (40 Inch High Flow)	10-10-4
Chart (Curb)	10-10-5
INSPECTION	10-20-1
Bob-Tach™	10-20-1
Planer Mount Inspection (14 Inch Standard Flow)	10-20-3
Planer Mount Inspection (18 And 24 Inch High Flow) (16 Inch Surface)	10-20-3
Planer Mount Inspection (40 Inch High Flow)	10-20-3
Planer Mount Inspection (Curb)	10-20-3
Rubber Skirt Inspection (14 Inch Standard Flow)	10-20-4
Rubber Skirt Inspection (18 And 24 Inch High Flow)	10-20-4
Rubber Skirt Inspection (16 Inch Surface)	10-20-4
Rubber Skirt Inspection (Curb)	10-20-4
LUBRICATING THE ATTACHMENT	10-30-1
Lubrication Locations (14 Inch Standard Flow)	10-30-1
Lubrication Locations (40 Inch High Flow)	10-30-2
DRUM	10-40-1
Checking The Carbide Bits (14 Inch Standard Flow) (18 And 24 Inch High Flow) (16 Inch Surface) (40 Inch High Flow)	10-40-1
Checking The Carbide Bits (Curb)	10-40-1
Replacing The Carbide Bits (14 Inch Standard Flow) (18 And 24 Inch High Flow) ..	10-40-2
Replacing The Carbide Bits (16 Inch Surface)	10-40-3
Replacing The Carbide Bits (40 Inch High Flow)	10-40-4
Replacing The Carbide Bits (Curb)	10-40-6
Installing The Bits (14 Inch Standard Flow) (18 And 24 Inch High Flow)	10-40-7
Installing The Bits (40 Inch High Flow)	10-40-7
Hardening The Wheel And Carbide Holders (14 Inch Standard Flow)	10-40-7
Hardening The Wheel And Carbide Holders (18 And 24 Inch High Flow)	10-40-8
Removal And Installation (16 Inch Surface)	10-40-8
Removal And Installation (Curb)	10-40-10
RUBBER SKIRT	10-50-1
Replacement (14 Inch Standard Flow)	10-50-1
Replacement (18 And 24 Inch High Flow)	10-50-1
Replacement (16 Inch Surface)	10-50-2
Replacement (Curb)	10-50-2
DRIVE CARRIER	10-60-1
Oil Change (14 Inch Standard Flow)	10-60-1
Oil Change (18 And 24 Inch High Flow) (16 Inch Surface)	10-60-1
Oil Change (Curb)	10-60-2

Buy Now



Our support email:

ebooklibonline@outlook.com