

V623



Bobcat®

VersaHANDLER

Service Manual

(S/N 367111001 - 367113000)
(S/N 367211001 - 367213000)



Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.



MAINTENANCE SAFETY



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

CORRECT



B-10731a

⚠ Never service the Bobcat VersaHANDLER without instructions.



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

CORRECT



B-16082

⚠ Cleaning and maintenance are required daily.

 
WRONG



B-16080

⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause boom to drop. Do not go under boom when raised unless supported by an approved boom stop. Replace if damaged.

WRONG

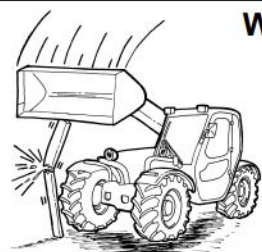

B-16079

⚠ Never work on VersaHANDLER with boom up unless boom is held by an approved boom stop. Replace if damaged.
⚠ Never modify equipment or add attachments not approved by Bobcat Company.

WRONG



B-16081

⚠ Have good ventilation when welding or grinding painted parts.
⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

WRONG



B-16078

⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.

WRONG



B-6589

⚠ Lead-acid batteries produce flammable and explosive gases.
⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts.

MSW12-0805

ALPHABETICAL INDEX

AIR CLEANER	70-01	HYDRAULIC CONNECTION SPECIFICATION	SPEC-01
AIR CLEANER SERVICE	10-01	HYDRAULIC CONTROL VALVE	20-01
AIR CONDITIONING SERVICE	80-01	HYDRAULIC/HYDROSTATIC FLUID	
AIR CONDITIONING SYSTEM FLOW	80-01	SPECIFICATIONS	SPEC-01
ALTERNATOR	60-01	HYDRAULIC/HYDROSTATIC SYSTEM	10-01
AXLE AND DIFFERENTIAL	40-01	HYDRAULIC RESERVOIR	20-01
AXLE PIVOT FRAME	40-01	HYDRAULIC SYSTEM INFORMATION	20-01
AXLES (FRONT AND REAR)	10-01	HYDROSTATIC DRIVE MOTOR	30-01
AXLE TOE-IN	40-01	HYDROSTATIC PUMP	30-01
		HYDROSTATIC SYSTEM INFORMATION	30-01
BASIC TROUBLESHOOTING	80-01		
BATTERY	60-01	INCHING SWITCH	60-01
BOOM ASSEMBLY	50-01	INNER BOOM	50-01
BOOM STOP	10-01	INSTRUMENT PANEL	60-01
BRAKE LIGHT SWITCH	60-01		
BRAKE VALVE	20-01	JOYSTICK	20-01, 60-01
BUCKET POSITIONING CYLINDER	20-01	JOYSTICK PANEL	60-01
COMPONENTS	80-01	LIFT CYLINDER	20-01
COMPRESSOR	80-01	LIFTING AND BLOCKING THE VersaHANDLER ...	10-01
CONDENSER	80-01	LIGHTS	60-01
CONVERSIONS	SPEC-01	LUBRICATION	10-01
DASH COVERING/STEERING COLUMN COVER	60-01	MACHINE TORQUE SPECIFICATIONS	SPEC-01
DRIVE BOX	20-01	MAIN RELIEF VALVE	20-01
DRIVE SHAFT	40-01	MUFFLER	70-01
ELECTRICAL SYSTEM INFORMATION	60-01	OIL COOLER	30-01
ENGINE AND ENGINE MOUNTS	70-01	OPERATOR CAB	10-01, 50-01
ENGINE COOLING SYSTEM	10-01	OPERATOR SEAT	50-01
ENGINE COMPONENTS AND TESTING	70-01		
ENGINE COVER	10-01, 50-01	PARKING BRAKE	40-01
ENGINE/HYDROSTAT ASSEMBLY	70-01	PEDAL ASSEMBLY	60-01
ENGINE LUBRICATION SYSTEM	10-01	PIVOT LINK	50-01
ENGINE SPECIFICATIONS	SPEC-01	PRESSURE SWITCH	80-01
ENGINE SPEED CONTROL	70-01		
EVAPORATOR/BLOWER UNIT	80-01	QUICK TACH	50-01
EXPANSION VALVE	80-01	QUICK TACH CYLINDER	20-01
EXTENSION CYLINDER	20-01		
FAN MOTOR	20-01	RADIATOR	70-01
FENDER	50-01	REAR WEIGHTS	50-01
FLYWHEEL AND HOUSING	70-01	REAR WIPER MOTOR	60-01
FRAME LEVELING CYLINDER	20-01	RECEIVER/DRIER	80-01
FRONT AXLE	40-01	RECONDITIONING THE ENGINE	70-01
FRONT AXLE WITH FRAME LEVELING	40-01	REGULAR MAINTENANCE	80-01
FRONT WIPER MOTOR	60-01		
FUEL SYSTEM	10-01	SAFETY	80-01
FUEL TANK	50-01	SERVICE SCHEDULE	10-01
		SPARK ARRESTOR MUFFLER	10-01
GEAR PUMP	20-01	STARTER	60-01
GENERAL AIR CONDITIONING SERVICE		STEERING ANGLE ADJUSTMENTS	40-01
GUIDELINES	80-01	STEERING CYLINDER	20-01
		STEERING MODE VALVE BLOCK	20-01
HEATER ASSEMBLY	80-01	STEERING VALVE	20-01
		SWITCH PANEL	60-01
		SYSTEM CHARGING & RECLAMATION	80-01

Dealer Copy -- Not for Resale

ALPHABETICAL INDEX (CONT'D)

SYSTEM TROUBLESHOOTING.....	80-01
TEMPERATURE/PRESSURE	80-01
TIRE MAINTENANCE	10-01
TILT CYLINDER	20-01
TOP WIPER MOTOR	60-01
TORQUE SPECIFICATIONS FOR BOLTS.....	SPEC-01
TOWING THE VersaHANDLER	10-01
TRANSPORTING THE VersaHANDLER.....	10-01
TRAVEL/SIGNAL LEVER	60-01
TROUBLESHOOTING.....	40-01, 70-01
VersaHANDLER SPECIFICATIONS.....	SPEC-01
WEAR PADS (FRONT).....	50-01
WEAR PADS (REAR)	50-01

CONTENTS

FOREWORD.....	II
SAFETY INSTRUCTIONS	V
SERIAL NUMBER LOCATIONS	IX
DELIVERY REPORT.....	X
BOBCAT VERSAHANDLER IDENTIFICATION	X
SAFETY AND MAINTENANCE.....	10-01
HYDRAULIC SYSTEM	20-01
HYDROSTATIC SYSTEM.....	30-01
DRIVE SYSTEM	40-01
MAIN FRAME	50-01
ELECTRICAL SYSTEM AND ANALYSIS	60-01
ENGINE SERVICE	70-01
HEATING, VENTILATION, AIR CONDITIONING	80-01
SPECIFICATIONS.....	SPEC-01

**SAFETY &
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**HYDROSTATIC
SYSTEM**

**DRIVE
SYSTEM**

MAIN FRAME

**ELECTRICAL
SYSTEM &
ANALYSIS**

**ENGINE
SERVICE**

HVAC

 
SPECIFICATIONS

FOREWORD

This manual is for the Bobcat VersaHANDLER mechanic. It provides necessary servicing and adjustment procedures for the Bobcat VersaHANDLER and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, Starting procedure, daily checks, etc.

A general inspection of the following items must be made after the VersaHANDLER has had service or repair:

1. Check that ROPS/FOPS (including right side window) is in good condition and is not modified.

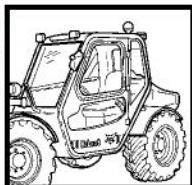


2. Check that ROPS mounting hardware is tightened and is Bobcat approved.



3. The seat belt must be correctly installed, functional and in good condition.



 4. Check boom support device, replace if damaged.

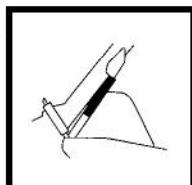

5. Machine signs must be legible and in the correct location.



6. Check tires for wear and pressure. Use only approved tires.



7. Check for correct function of the work lights.




8. The parking brake must function correctly.



9. Enclosure door latches must open and close freely.



 
10. Attachment locking pins must function correctly and be in good condition.

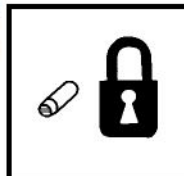

11. Safety treads must be in good condition.



 
12. Check for correct function of indicator lamps and gauges.

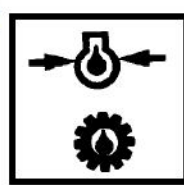

13. Check hydraulic fluid level, engine oil level and fuel supply.



 
14. Inspect for fuel, oil or hydraulic fluid leaks.

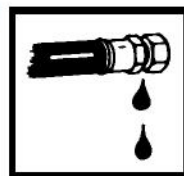

15. Lubricate the VersaHANDLER.




 16. Check the condition of the battery and cables.

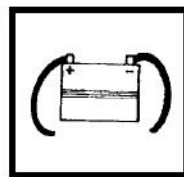

Dealer Copy -- Not for Resale

 
17. Inspect the air cleaner for damage or leaks. Check the condition of the element.

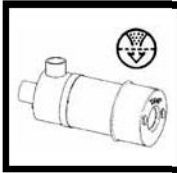

20. Operate the VersaHANDLER and check all functions.



 
18. Check the electrical charging system.

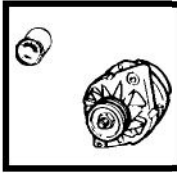

21. Check for any field modification not completed.



 19. Inspect for loosen or broken parts or connections.

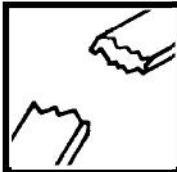

22. Recommend to the owner that all necessary corrections be made before the machine is returned to service.



**CALIFORNIA
PROPOSITION 65 WARNING**

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

SAFETY INSTRUCTIONS (CONT'D)

Fire Prevention

The machine and attachments have components that are at high temperature under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.


Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it will increase fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential hazard.

The spark arrestor muffler is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

- Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.
- The operator cab, engine compartment, and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazard and overheating.
- Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part.
- Check fuel and hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Tighten or replace any parts that show leakage. Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.
- Do not use ether or starting fluids on any engine which has glow plugs. These starting aids can cause explosion and injure you or bystanders.
- Always clean the machine, disconnect the battery, and disconnect the wiring from the controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding. Have good ventilation when grinding or welding painted parts. Wear a dust mask when grinding painted parts. Toxic dust or gas can be produced.
- Stop the engine and let it cool before adding fuel. **NO SMOKING!**

- Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.
- Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler (if equipped).

 Figure 1

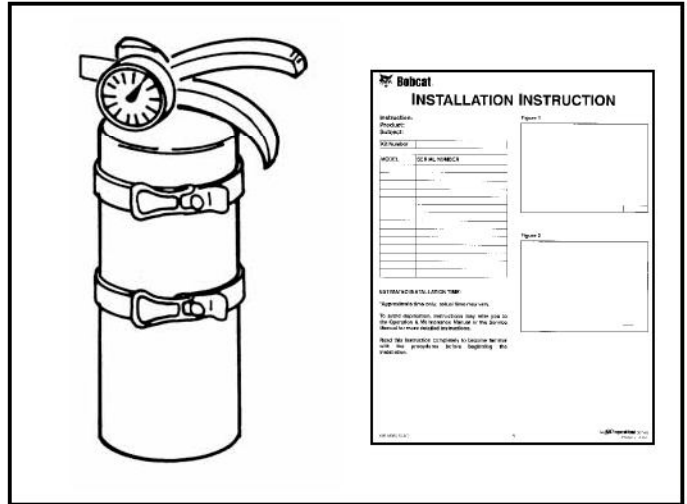

- Know where fire extinguishers and first aid kits are located and how to use them. Fire extinguishers are available from your Bobcat dealer [Figure 1].

Dealer Copy -- Not for Resale

SERIAL NUMBER LOCATIONS

Always use the serial number of the VersaHANDLER when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

VersaHANDLER Serial Number


Figure 2



The front, on the right side of the chassis [Figure 2].

Engine Serial Number

 Figure 3

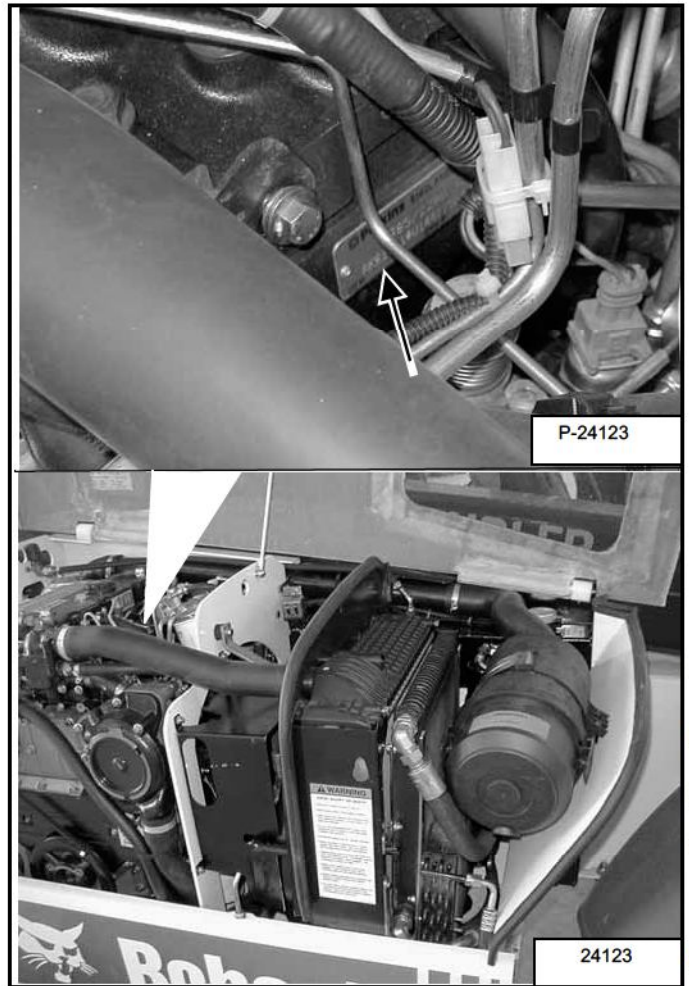

The engine serial number is stamped on a plate near the injection pump or at the rear of the cylinder block [Figure 3]. Always use the full number when ordering replacement parts.

Other Serial Numbers

Some components may also have serial numbers. Always use these serial numbers when requesting parts.

Dealer Copy -- Not for Resale

DELIVERY REPORT

The Delivery Report must be filled out by the dealer and signed by the owner or operator when the VersaHANDLER is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely [Figure 4].


Figure 4

DELIVERY REPORT

WARNING

B-16315

 BOBCAT VersaHANDLER IDENTIFICATION

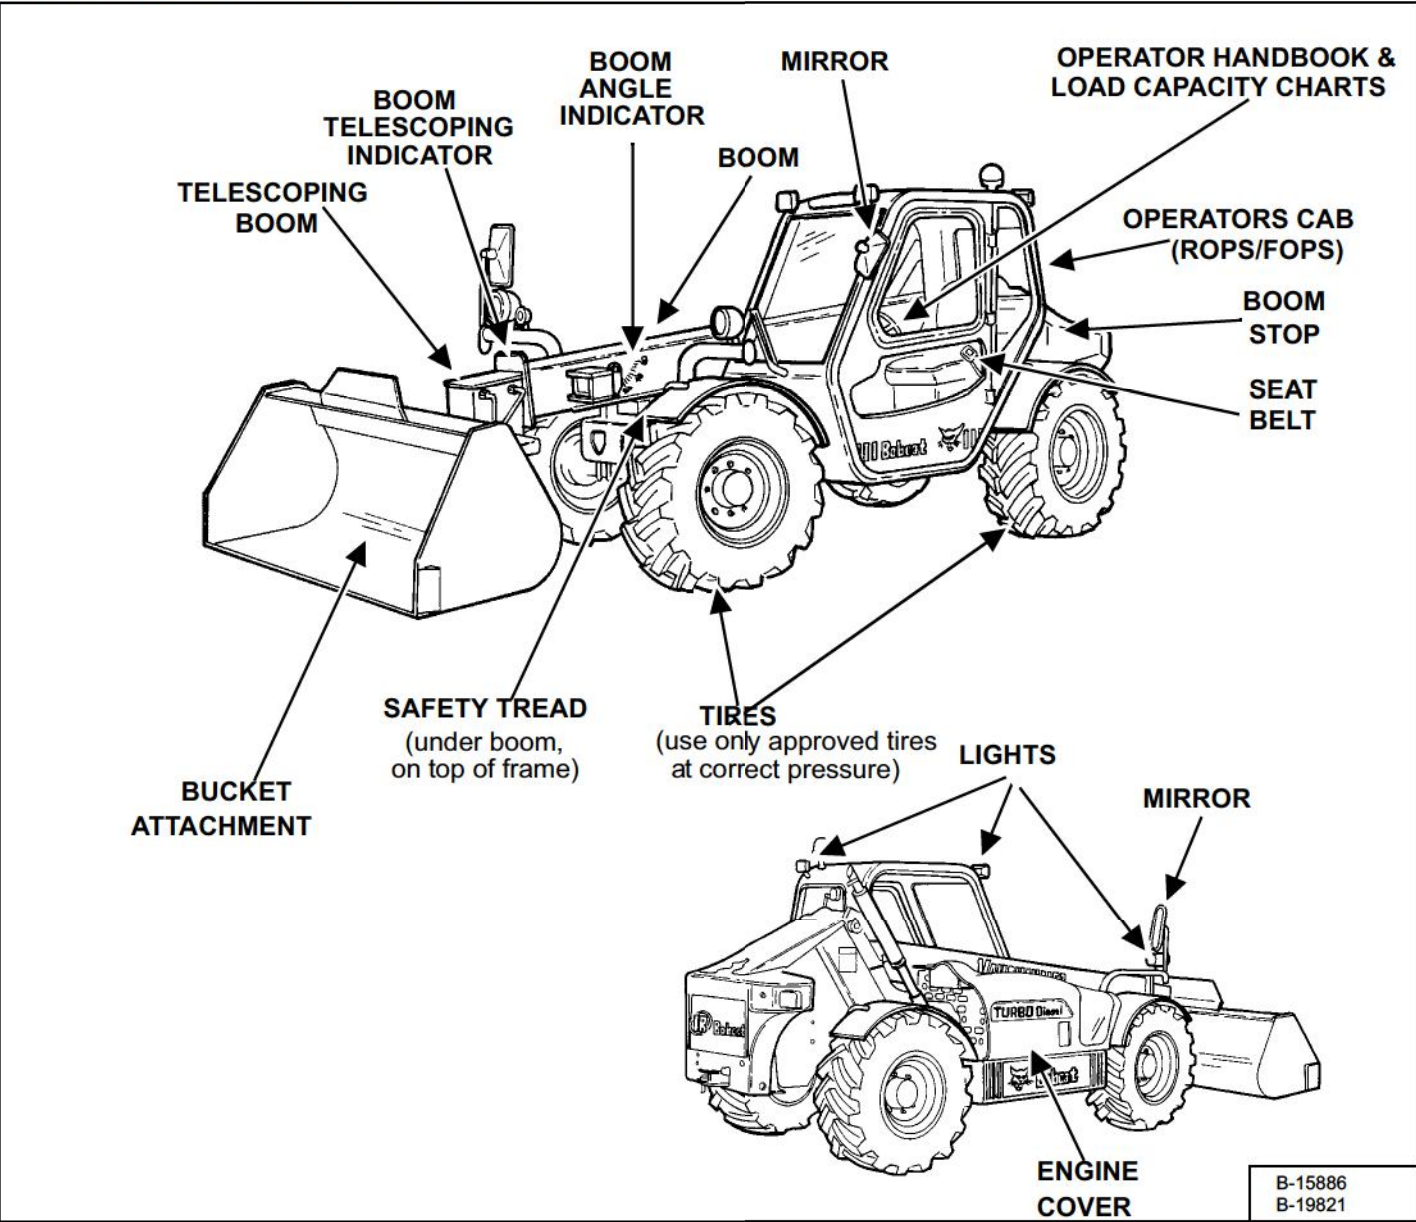

Dealer Copy -- Not for Resale

AIR CLEANER SERVICE	10-60-1
Replacing Filter Element	10-60-1
AXLES (FRONT AND REAR)	10-110-1
Checking Oil Level (Front Differential)	10-110-2
Checking Oil Level (Planetary Carrier)	10-110-1
Checking Oil Level (Rear Differential)	10-110-2
Draining Oil (Front Differential)	10-110-2
Draining Oil (Planetary Carrier)	10-110-1
Draining Oil (Rear Differential)	10-110-2
BOOM STOP	10-150-1
Installing Boom Stop	10-150-1
Removing Boom Stop	10-150-1
ENGINE COOLING SYSTEM	10-70-1
Checking The Coolant Level	10-70-1
Cleaning The Cooling System	10-70-1
Replacing The Coolant	10-70-2
ENGINE COVER	10-160-1
Adjusting The Latch	10-160-1
Opening And Closing The Engine Cover	10-160-1
ENGINE LUBRICATION SYSTEM	10-90-1
Checking Engine Oil	10-90-1
Oil Chart	10-90-1
Replacing Oil And Filter	10-90-1
FUEL SYSTEM	10-80-1
Filling The Fuel Tank	10-80-1
Fuel Filter	10-80-1
Fuel Specifications	10-80-1
HYDRAULIC/HYDROSTATIC SYSTEM	10-100-1
Checking And Adding Fluid	10-100-1
Replacing Hydraulic Fluid	10-100-2
Replacing Hydraulic/Hydrostatic Filter	10-100-1
LIFTING AND BLOCKING THE VERSAHANDLER	10-10-1
Procedure	10-10-1
LUBRICATION	10-120-1
Procedure	10-120-1

Continued On Next Page

Dealer Copy -- Not for Resale

SAFETY AND MAINTENANCE (CONT'D)


OPERATOR CAB	10-20-1
Cab Door	10-20-1
Cab Door Window	10-20-1
Emergency Exit	10-20-1
SERVICE SCHEDULE	10-50-1
Chart	10-50-1
SPARK ARRESTOR MUFFLER	10-140-1
TIRE MAINTENANCE	10-130-1
Tire Mounting	10-130-1
Tire Rotation	10-130-1
Wheel Nuts	10-130-1
TOWING THE VERSAHANDLER	10-40-1
Procedure	10-40-1
TRANSPORTING THE VERSAHANDLER	10-30-1
Procedure	10-30-1

Dealer Copy -- Not for Resale

LIFTING AND BLOCKING THE VERSAHANDLER

Procedure


Always park the machine on a level surface.

**WARNING**

Put jackstands under the front axles and rear corners of the frame before running the engine for service. Failure to use jackstands can allow the machine to fall or move and cause injury or death.


W-2017-0286

 Figure 10-10-1

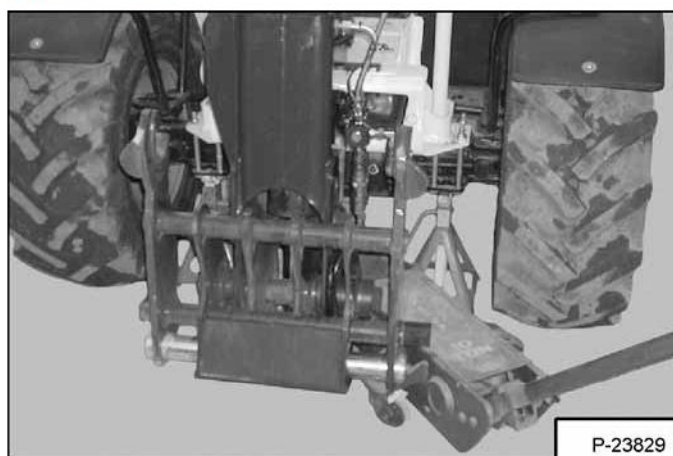

STOP the engine. Put the floor jack under the center of the front axle. Lift the Versa HANDLER and install jackstands [Figure 10-10-1].

 Figure 10-10-2

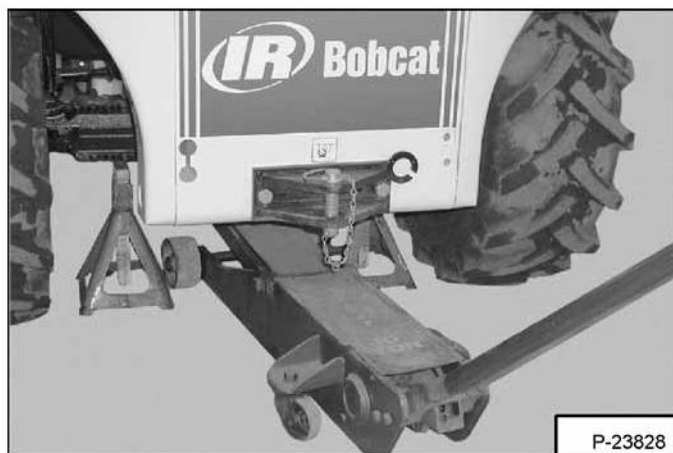

Put the floor jack under the center of the rear axle. Lift the Versa HANDLER and install jackstands [Figure 10-10-2].

Dealer Copy -- Not for Resale

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com