

**I 021F  
I 121F  
TIER IV**

**Service Manual**

Print No. 84571203B

**CASE**  
CONSTRUCTION

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.202] Air cleaners and lines .....	10.2
[10.218] Fuel injection system .....	10.3
[10.304] Engine lubrication system .....	10.4
[10.310] Aftercooler.....	10.5
[10.414] Fan and drive .....	10.6
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment .....	10.7
Transmission.....	21
[21.113] Powershift transmission .....	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.145] Gearbox internal components.....	21.3
[21.155] Powershift transmission internal components.....	21.4
Four-Wheel Drive (4WD) system .....	23
[23.314] Drive shaft.....	23.1
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
Brakes and controls .....	33
[33.110] Parking brake or parking lock .....	33.1
[33.202] Hydraulic service brakes .....	33.2
Hydraulic systems.....	35

[35.000] Hydraulic systems .....	35.1
[35.106] Variable displacement pump .....	35.2
[35.204] Remote control valves .....	35.3
[35.300] Reservoir, cooler, and filters.....	35.4
[35.357] Pilot system .....	35.5
[35.359] Main control valve .....	35.6
[35.525] Auxiliary hydraulic valves and lines .....	35.7
[35.701] Front loader arm hydraulic system .....	35.8
[35.820] Hydraulic driven cooling fans .....	35.9
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.910] Auxiliary steering .....	41.2
<b>Wheels.....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
<b>Cab climate control .....</b>	<b>50</b>
[50.200] Air conditioning.....	50.1
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.010] Fuel injection system.....	55.2
[55.011] Fuel tank system .....	55.3
[55.012] Engine cooling system .....	55.4
[55.013] Engine oil system .....	55.5
[55.014] Engine intake and exhaust system.....	55.6
[55.015] Engine control system.....	55.7
[55.020] Transmission speed sensors .....	55.8
[55.022] Transmission temperature sensors .....	55.9
[55.024] Transmission control system .....	55.10
[55.030] Service brake electrical system .....	55.11
[55.031] Parking brake electrical system .....	55.12

[55.036] Hydraulic system control .....	55.13
[55.047] Steering control system .....	55.14
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.15
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.16
[55.100] Harnesses and connectors.....	55.17
[55.201] Engine starting system .....	55.18
[55.202] Cold start aid .....	55.19
[55.301] Alternator .....	55.20
[55.302] Battery.....	55.21
[55.404] External lighting .....	55.22
[55.405] External lighting switches and relays .....	55.23
[55.408] Warning indicators, alarms, and instruments .....	55.24
[55.415] Loader arm and bucket control system .....	55.25
[55.510] Cab or platform harnesses and connectors.....	55.26
[55.512] Cab controls.....	55.27
[55.514] Cab lighting .....	55.28
[55.518] Wiper and washer system.....	55.29
[55.519] Cab brake controls .....	55.30
[55.524] Cab controls (Lift arm, Boom, Dipper, Bucket).....	55.31
[55.525] Cab engine controls .....	55.32
[55.988] Selective Catalytic Reduction (SCR) electrical system .....	55.33
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.105] Machine shields and guards .....	90.1
[90.118] Protections and footboards.....	90.2
[90.124] Pneumatically-adjusted operator seat.....	90.3
[90.150] Cab.....	90.4



## **INTRODUCTION**

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)