

1080/1080B EXCAVATOR TABLE OF CONTENTS

DIVISION/SECTION	SECTION NO.	FORM NO.
1 GENERAL		
Safety Rules, Service Manual Introduction, and Torque Specifications	1001	8-42680
Maintenance and Lubrication	1002	8-42680
General Engine Specifications (Case Engine) - 1080	1010	8-25780
General Engine Specifications (Case Engine) - 1080B	1010	8-27550
Detailed Engine Specifications (Case Engine) - 1080B	1020	8-22760
Detailed Engine Specifications (Case Engine) - 1080	1320	8-20040
2 ENGINE		
Engine and Radiator Removal and Installation	2000	8-42680
Engine Accessories (Air Cleaner, Ether Injection System, Turbocharger, Pump Drive Plate, Exhaust System)	2001	8-42680
Engine Tune-Up	2002	9-76379
Cylinder Head, Valve Train, and Camshaft	2015	8-22560
Cylinder Block, Sleeves, Pistons and Rods	2025	9-76176
Crankshaft, Main Bearings, Flywheel, and Oil Seals	2035	9-76187
Lubrication System (1080B)	2045	9-78046
Lubrication System (1080)	2046	8-22780
Cooling System	2055	9-76337
Engine Troubleshooting	2201	8-20111
Reconditioning Large Bore Case Engine Blocks	2290	8-21170
Turbocharger Failure Analysis	2565	9-78235
Detroit Diesel Engine Manual - In Line 71		6-SE-250
3 FUEL SYSTEM		
Fuel Lines, Fuel Tank, and Engine Controls	3001	8-42680
Fuel System and Filters	3010	9-75297
Robert Bosch Fuel Injection Pump	3012	9-74937
17 mm Fuel Injectors	3213	8-20240
4 ELECTRICAL		
Electrical System Specifications and Troubleshooting	4002	8-42681
Wiring Schematics	4003	8-42681
Batteries	4005	8-42680
Starter	4006	8-41430
Alternator	4007	8-42680
5 TRACK AND SUSPENSION		
Troubleshooting the Track System	5502	8-42680
Track Chain and Shoes	5503	8-42681
Track Rollers, Carriers Rollers, Idlers, Track Adjuster Cylinders, and Sprockets	5506	8-42681
6 POWER TRAIN		
Troubleshooting	6302	8-38240
Drive Motor Circuit and Lines	6311	8-42680
Drive Motor	6312	8-42680
Final Drive Transmission (1080)	6317	8-42681
Final Drive Transmission (1080B)	6318	8-42680

DIVISION/SECTION

SECTION NO.

FORM NO.

7 BRAKES

House Brakes	7011	8-38240
Drive Brakes	7012	8-42680

8 HYDRAULICS

Maintenance and Service	8201	8-42680
Hydraulic System Specifications, Schematics, Troubleshooting, Pressure Checks, and Flowmeter Tests	8202	8-42681
Hydraulic Pump	8205	8-42680
Control Valves	8207	8-42680
Swing Hydraulic Circuit, Swing Motor, and Swing Relief Valve	8210	8-42681
Boom Hydraulic Circuit	8211	8-42681
Dipper Hydraulic Circuit	8212	8-42681
Bucket Hydraulic Circuit	8213	8-42681
Leveler Hydraulic Circuit	8215	8-42681
Hydraulic Swivel	8218	8-42681
Pilot Control System	8220	8-42681
Power Sensing Valve	8221	8-38240
Cylinders	8290	8-42681

9 MOUNTED EQUIPMENT

Troubleshooting (Swing Mechanism)	9202	8-38240
Swing Gearbox	9210	8-42681
Boom	9211	8-42681
Attachments (Wrist-O-Twist, Buckets)	9213	8-42681
Turntable Leveler	9215	8-38230
Turntable Bearing and Related Parts	9216	8-42681
Decals and Painting	9221	8-42681

REAR POCKET

Electrical Schematic (1080)	830882A
Electrical Schematic (1080B)	860505
Hydraulic Schematic (Pilot Controls Two Speed Drive Motor) - 1080 and 1080B	840970
Hydraulic Schematic (Pilot Controls Single Speed Drive Motor) - 1080	840971
Hydraulic Schematic (Hydraulic Circuits) - 1080 and 1080B	840972

1001

SAFETY RULES, SERVICE MANUAL INTRODUCTION, AND TORQUE SPECIFICATIONS

TABLE OF CONTENTS

Safety Rules	1001-2
Service Manual Introduction	1001-4
Torque Specifications - U.S. Hardware	1001-5
Torque Specifications - Metric Hardware	1001-6
Torque Specifications - Steel Hydraulic Fittings	1001-7

Written In *Clear
And
Simple
English*

SAFETY RULES




This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death. 1-1-C

NOTE: To prevent injury on job, follow the Warning, Caution, and Danger notes in this section and other sections throughout this manual. Follow the instructions carefully.

The procedures recommended and shown in this manual are good, effective service methods. However, all possible procedures and service hazards may not be covered. Therefore, if you use a tool or procedure not recommended, you must make sure that the method you select is a safe method.

Put the warning tag shown below on the key for the key switch when you are servicing or repairing this machine. One warning tag is on every new machine. You can buy additional warning tags, part number 331-4614, from Service Parts Supply.

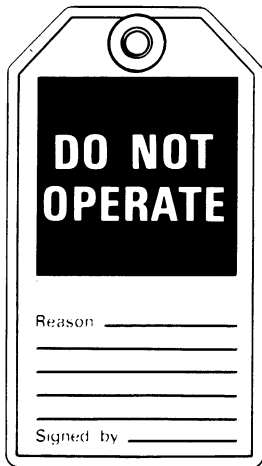

780449



WARNING: Read operator's manual to familiarize yourself with control lever functions.

46-27



WARNING: Operate tractor and equipment controls from the seat position only. Any other method could result in serious injury.

48-55



WARNING: This is a one man machine, no riders allowed.

35-8



WARNING: Before starting engine, study operator's manual safety messages. Read all safety signs on machine. Clear the area of other persons. Learn and practice safe use of controls before operating.

It is your responsibility to understand and follow manufacturer's instructions on machine operation, service, and to observe pertinent laws and regulations. Operator's and service manuals may be obtained from your J I Case dealer.

45-2



WARNING: If you wear clothing that is too loose or do not use the correct safety equipment for your job, you can be injured. Always wear clothing that will not catch on objects. Extra safety equipment that can be required includes hard hat, safety shoes, ear protection, eye or face protection, heavy gloves and reflector clothing.

45-3-A



CORRECT



WARNING: When working in the area of the fan belt with the engine running, avoid loose clothing if possible, and use extreme caution.

35-4

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com