

1150C CRAWLER TABLE OF CONTENTS AND SERVICE MANUAL INTRODUCTION

SERIES/SECTION	SECTION NO.	FORM NO.
10 SERIES - GENERAL		
General Engine Specifications	1010	9-46241
Decals and Painting	1012	9-67861
Detailed Engine Specifications	1021	9-77075
Maintenance and Lubrication	1050	9-67861
Torque Charts	1051	9-67861
Noise Control	1052	9-67861
20 SERIES - ENGINE		
Engine Diagnosis	2001	9-76365
Engine Tune-Up	2002	9-76379
Cylinder Head, Valve Train, and Camshaft	2015	9-76166
Cylinder Block, Sleeves, Pistons and Rods	2025	9-76176
Crankshaft, Main Bearings, Flywheel, and Oil Seals	2035	9-76187
Lubrication System	2046	9-76805
Maintenance and Lubrication	2050	9-67861
General Engine Information	2051	9-67861
Ether Injection	2053	9-67861
Turbocharger Removal and Installation	2065	9-67861
Reconditioning Case Engine Blocks	2290	8-21170
Turbocharger Failure Analysis	2565	9-78235
30 SERIES - FUEL SYSTEM		
Fuel System and Filters	3010	9-75297
Robert Bosch Fuel Injection Pump	3012	9-74937
Roosa Master Fuel Injectors	3013	9-74959
Engine Controls, Fuel Lines and Fuel Tank	3052	9-67861
40 SERIES - ELECTRICAL SYSTEM		
Electrical System Specifications and Troubleshooting	4002	9-67861
Wiring Diagrams	4003	9-67861
Gauges, Tachometer and Hourmeter	4004	9-67861
Batteries	4005	9-67861
Starter and Starter Solenoid	4006	9-67861
Alternator	4007	9-67861
Electrical Accessories	4015	9-67861
50 SERIES - TRACK SYSTEM		
Track and Track Frame	5506	9-67861
Idler, Track Adjuster, and Recoil Housing	5508	9-67861
Sprocket	5509	9-67861
Carrier Rollers	5510	9-67861
Track Rollers	5511	9-67861

SERIES/SECTION	SECTION NO.	FORM NO.
60	SERIES - POWER TRAIN	
	General Transmission Information	6002 9-67861
	Transmission Diagrams and Operation	6003 9-67861
	Charging Pump	6005 9-67861
	Transmission Control Valve	6007 9-67861
	Torque Converter	6010 9-67861
	Transmission	6016 9-67861
	Final Drives	6017 9-67861
	Transmission Controls	6018 9-67861
	Drive Shafts	6021 9-67861
70	SERIES - BRAKES	
	Brakes	7001 9-67861
80	SERIES - HYDRAULIC SYSTEM	
	General Hydraulic System Information	8002 9-67861
	Hydraulic Pump	8005 9-67861
	Equipment Control Valve	8007 9-67861
	Selector Valve	8021 9-67861
	Cylinders	8090 9-67861
90	SERIES - MOUNTED EQUIPMENT	
	Loader	9010 9-67861
	Dozer	9020 9-67861
	Ripper	9031 9-67861
	ROPS Cab and ROPS Canopy	9061 9-67861
	Winch	9300 9-67861

Section 1010

GENERAL ENGINE SPECIFICATIONS 1150C CRAWLER LOADER AND DOZER

DIESEL ENGINES

General

Type	6 Cylinder, 4 Stroke Cycle, Valve-in-Head
Firing Order	1-5-3-6-2-4
Bore	4-3/8 Inches
Stroke	5 Inches
Piston Displacement	16.5 to 1
No Load Governed Speed	2285 - 2315 RPM
Rated Engine Speed	2100 RPM
Engine Idling Speed	725 to 775 RPM
Exhaust Valve Rotators	Positive Type
Valve Tappet Clearance (Exhaust)	0.025 Inch
(Intake)	0.015 Inch

Piston and Connecting Rods

Rings per Piston	3
Number of Compression Rings	2
Number of Oil Rings	1
Type Pins	Full Floating Type
Type Bearing	Replaceable Precision Steel Back, Copper-Lead or Aluminum Alloy Liners.

Main Bearings

Number of Bearings	7
Type Bearings	Replaceable Precision Steel Back, Copper-Lead or Aluminum Alloy Liners.

Engine Lubricating System

 
Crankcase Capacity	14 Quarts
With Filter Change	15 Quarts
Oil Pressure	45 to 55 PSI with Engine Warm and Operating at Rated Engine Speed
Type System	Pressure and Spray Circulation
Oil Pump	Gear Type
Oil Filter	Full Flow Spin on Type

Fuel System

Fuel Injection Pump	Robert Bosch, Type PES Multiple Plunger
Pump Timing	30 Degrees Before Top Center (Port Closing)
Fuel Injectors	Pencil Type (Opening Pressure 3200 PSI)
Fuel Transfer Pump	Plunger Type, Integral Part of Injection Pump
Governor	Variable Speed, Fly-Weight Centrifugal Type, Integral Part of Injection Pump
1st Stage Fuel Filter	Full Flow Spin on Type
2nd Stage Fuel Filter	Full Flow Spin on Type


GENERAL INFORMATION

1. All decals about operation of the machine and/or attachments must be in a condition so that you can read the decals easily. Replace any decal that has damage or cannot be read.
2. All decals that start with the words WARNING, CAUTION, or DANGER must be in a condition so that you can read the decals easily. Replace any decal that has damage or cannot be read.
3. When you paint the machine or attachment, put covers over the good decals and remove the decals which have damage or cannot be read easily. Use enamel thinner to make the decal easier to remove.
4. Remove the old decal before you install a new decal. Use enamel thinner to make the old decal easier to remove.
5. When you paint the machine or attachment, use standard procedure. Remove the grease, wash the area, use sandpaper to prepare the surface for paint, and put covers over all good decals and parts which you do not want to paint.
6. The following pages show decals installed on the machine or attachments. Part numbers of the decals are shown also. Check the parts catalog to make sure that the part number is correct before you make an order for the decals. Decals are available separately or in a kit for the machine.

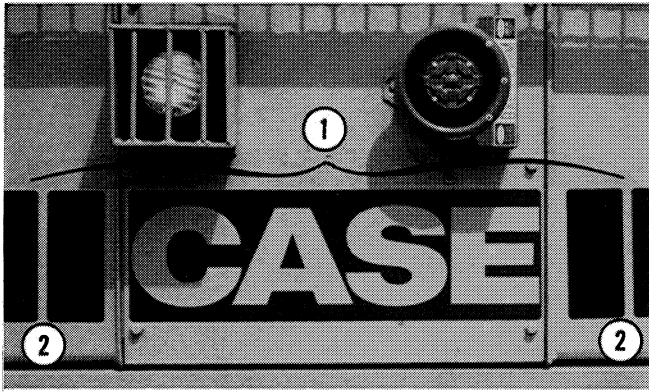


- 1. 321-5273 - Case and Treadmarks
- 2. 321-3122 - Treadmarks

 Figure 1

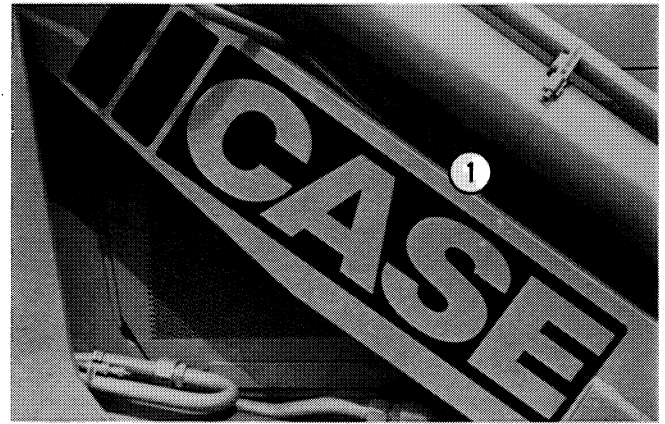


- 1. 321-5274

 Figure 5

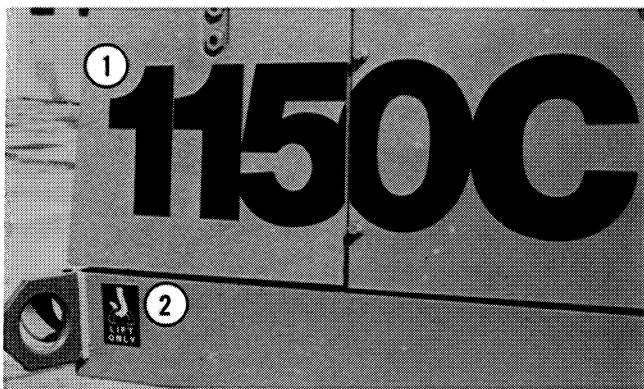


- 1. 321-4627
- 2. 321-3587

 Figure 2

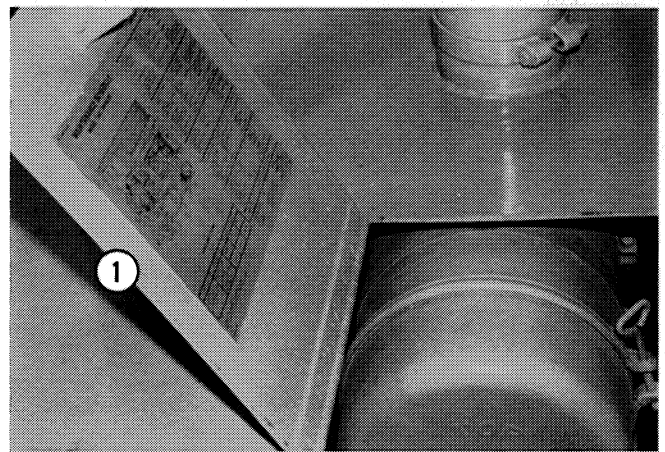


- 1. 321-4689 Location Shown is for Engines Without Turbocharger. Maintenance Decal for Engines With Turbocharger is on Door Right Side of Hood

 Figure 6

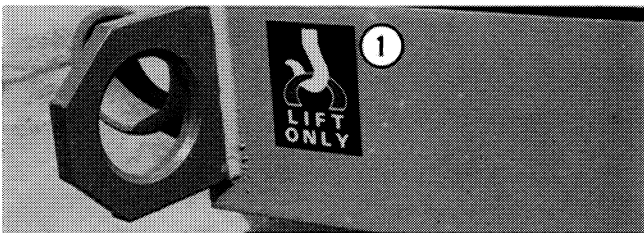


- 1. 321-3587

 Figure 3

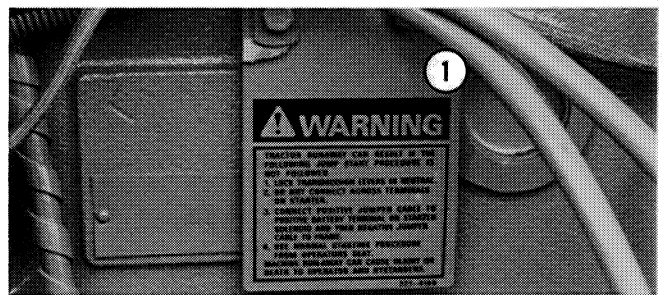

- 1. 321-4189

 Figure 7

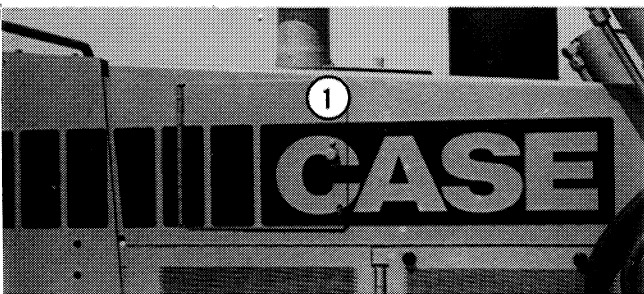

- 1. 321-5276

Figure 4

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com