

1150H CRAWLER

Service Manual

7-16200

Table of Contents

Description	Section No.	Publication Form No.
General		Tab 1
Section Index - General		7-18400
Standard Torque Specifications	1001	8-71602
Fluids and Lubricants	1002	7-17480
Loctite Product Chart		8-98902
Engines		Tab 2
Section Index - Engines		7-18410
Stall Tests	2001	7-17490
Engine and Radiator Removal and Installation	2002	7-18420
Fuel System		Tab 3
Section Index - Fuel System		7-18430
Electrical		Tab 4
Section Index - Electrical		7-18440
Removal and Installation of Electrical Components	4000	7-18450
Electrical Troubleshooting	4001	7-17980
Battery	4003	8-11361
Instrument Panel	4004	7-17650
Alternator	4007	7-18070
Tracks		Tab 5
Section Index - Tracks		7-18460
Undercarriage Fundamentals	5001	7-17690
Inspection of Track System Components	5501	7-18470
Case Lubricated Track	5504	7-17700
Track Frame and Suspension	5507	7-18490
Idler, Track Adjuster, and Recoil Housing	5508	7-18500
Sprocket	5509	7-18510
Track Roller	5511	7-18520
Power Train		Tab 6
Section Index - Power Train		7-18530
Removal and Installation of Power Train Components	6000	7-18540
Transmission Schematic and Troubleshooting	6002	7-17510
Transmission Charging Pump	6005	7-18550
Transmission Control Valve	6007	7-17790
High/Low Range Control Valve	6008	7-18560

CASE CORPORATION
700 State Street
Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION
3350 South Service Road
Hamilton, ON L7N 3M6 CANADA

Bur 7-18390

Reprinted

Copyright © 2000 Case Corporation
Printed in U.S.A.
September, 2000

Table of Contents

Description	Section No.	Publication Form No.
Torque Converter	6010	7-18570
Transmission	6016	7-18580
Final Drives	6017	7-18590
Brakes	Tab 7	
Section Index - Brakes		7-18600
Removal and Installation of Brake Valve and Removing Air from Brake System	7001	7-17850
Brake Valve	7002	7-17860
Brakes	7003	7-18620
Hydraulics	Tab 8	
Section Index - Hydraulics		7-18630
Removal and Installation of Hydraulic Components	8001	7-18640
Hydraulic Schematic and Troubleshooting	8002	7-17520
Cleaning the Hydraulic System	8003	7-49640
Equipment Pump	8005	7-18650
Dozer Control Valve	8007	7-18660
Cylinders	8008	7-18670
Mounted Equipment	Tab 9	
Section Index - Mounted Equipment		7-18680
Pedals, Levers, and Linkages	9002	7-17530
Air Conditioning Troubleshooting and System Checks for Systems with HFC134a Refrigerant	9003	7-18290
Air Conditioning System Service - Refrigerant Recovery, System Evacuation, and Recharging for Systems with HFC134a Refrigerant	9004	7-18300
Removal and Installation of Air Conditioning System Components for Systems with HFC134a Refrigerant	9005	7-18310
Air Conditioning Compressor and Clutch for Systems with HFC134a Refrigerant	9006	7-18320
Dozer Blade	9007	7-18690
ROPS Cab, ROPS Canopy, Seat Mounting, and Seat Belts	9008	7-18700
Ripper	9011	7-18710
Schematic Set		
Electrical and Hydraulic Schematic Foldout	In Rear Pocket	7-17540

NOTE: Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

SECTION INDEX

GENERAL

Section Title	Section Number
Standard Torque Specifications	1001
Fluid and Lubricants	1002
Loctite Product Chart	

CASE CORPORATION
700 State Street
Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION
3350 South Service Road
Hamilton, ON L7N 3M6 CANADA

Bur 7-18400


Copyright © 2000 Case Corporation
Printed in U.S.A.
September, 2000


Section 1001

GENERAL TORQUE SPECIFICATIONS

TORQUE SPECIFICATIONS - DECIMAL HARDWARE

Use the torques in this chart when special torques are not given. These torques apply to fasteners with both UNC and UNF threads as received from suppliers dry, or when lubricated with engine oil. Not applicable if special graphities, Molydisulfide greases, or other extreme pressure lubricants are used.

Grade 5 Bolts, Nuts, and Studs		
		
Size	Pound-Inches	Newton metres
1/4 inch	108 to 132	12 to 15
5/16 inch	204 to 252	23 to 28
3/8 inch	420 to 504	48 to 57
Size	Pound-Feet	Newton metres
7/16 inch	54 to 64	73 to 87
1/2 inch	80 to 96	109 to 130
9/16 inch	110 to 132	149 to 179
5/8 inch	150 to 180	203 to 244
3/4 inch	270 to 324	366 to 439
7/8 inch	400 to 480	542 to 651
1.0 inch	580 to 696	787 to 944
1-1/8 inch	800 to 880	1085 to 1193
1-1/4 inch	1120 to 1240	1519 to 1681
1-3/8 inch	1460 to 1680	1980 to 2278
1-1/2 inch	1940 to 2200	2631 to 2983

Grade 8 Bolts, Nuts, and Studs		
		
Size	Pound-Inches	Newton metres
1/4 inch	144 to 180	16 to 20
5/16 inch	288 to 348	33 to 39
3/8 inch	540 to 648	61 to 73
Size	Pound-Feet	Newton metres
7/16 inch	70 to 84	95 to 114
1/2 inch	110 to 132	149 to 179
9/16 inch	160 to 192	217 to 260
5/8 inch	220 to 264	298 to 358
3/4 inch	380 to 456	515 to 618
7/8 inch	600 to 720	814 to 976
1.0 inch	900 to 1080	1220 to 1465
1-1/8 inch	1280 to 1440	1736 to 1953
1-1/4 inch	1820 to 2000	2468 to 2712
1-3/8 inch	2380 to 2720	3227 to 3688
1-1/2 inch	3160 to 3560	4285 to 4827

NOTE: Use thick nuts with Grade 8 bolts.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com