

**1150M**  
**Stage IIIB**  
**Crawler Dozer**

*PIN NGC105100 and above*

**SERVICE MANUAL**

Part number 48080034

1<sup>st</sup> edition English

April 2017

© 2017 CNH Industrial America LLC. All Rights Reserved.

**CASE**  
CONSTRUCTION



## **SERVICE MANUAL**

**1150M Long Track (LT) - Tier 4B (final) and Stage IIIB [NGC105100 - ]  
1150M Wide Track (WT) / Low Ground Pressure (LGP) - Tier 4B (final) and  
Stage IIIB [NGC105100 - ]**

# Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
1150M Long Track (LT) - Tier 4B (final) and Stage IIIB [NGC105100 - ]	Europe	F4HFE613F*A002
1150M Wide Track (WT) / Low Ground Pressure (LGP) - Tier 4B (final) and Stage IIIB [NGC105100 - ]	Europe	F4HFE613F*A002

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.202] Air cleaners and lines .....	10.2
[10.206] Fuel filters .....	10.3
[10.216] Fuel tanks .....	10.4
[10.304] Engine lubrication system.....	10.5
[10.310] Aftercooler.....	10.6
[10.400] Engine cooling system .....	10.7
[10.414] Fan and drive .....	10.8
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.9
<b>Hydrostatic drive</b> .....	<b>29</b>
[29.218] Pump and motor components.....	29.1
<b>Brakes and controls</b> .....	<b>33</b>
[33.110] Parking brake or parking lock .....	33.1
[33.202] Hydraulic service brakes .....	33.2
<b>Hydraulic systems</b> .....	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.105] Charge pump.....	35.4
[35.359] Main control valve .....	35.5
[35.741] Dozer blade cylinders .....	35.6
<b>Tracks and track suspension</b> .....	<b>48</b>
[48.130] Track frame and driving wheels .....	48.1
[48.100] Tracks .....	48.2

[48.134] Track tension units .....	48.3
[48.138] Track rollers .....	48.4
[48.140] Dropbox and final drive .....	48.5
[48.AAA] Tracks and track suspension generic sub-group .....	48.6
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating .....	50.1
[50.104] Ventilation .....	50.2
[50.200] Air conditioning .....	50.3
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.011] Fuel tank system .....	55.2
[55.014] Engine intake and exhaust system.....	55.3
[55.015] Engine control system.....	55.4
[55.030] Service brake electrical system .....	55.5
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.6
[55.100] Harnesses and connectors.....	55.7
[55.201] Engine starting system .....	55.8
[55.202] Cold start aid .....	55.9
[55.301] Alternator.....	55.10
[55.302] Battery.....	55.11
[55.408] Warning indicators, alarms, and instruments .....	55.12
[55.512] Cab controls.....	55.13
[55.518] Wiper and washer system.....	55.14
[55.988] Selective Catalytic Reduction (SCR) electrical system .....	55.15
[55.DTC] FAULT CODES.....	55.16
<b>Dozer blade and arm.....</b>	<b>86</b>
[86.110] Dozer blade .....	86.1
[86.124] Dozer pushbeams and struts .....	86.2

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)