

1188 Hydraulic Wheeled and Crawler Excavators

Table of Contents

DIVISION/SECTION	SECTION N°	REFERENCE N°
1 GENERAL INFORMATION		
Safety, general Information and torque specifications	1001	7-56942GB
Specifications (Crawler excavators)	1002	7-79021GB
Specifications (Wheeled excavators)	1002	7-79031GB
2 ENGINE		
Engine removal and installation	2002	7-79040GB
Engine specifications	2401	**
Cylinder head and valve assembly	2415	**
Engine block	2425	**
Lubrication system	2445	**
Cooling system	2455	**
Turbocharger	2465	**
Turbocharger failure analysis	2565	**
3 FUEL SYSTEM		
Fuel system and filter	3410	**
CAV injection pump	3411	**
BOSCH injection pump	3412	**
Fuel injector	3413	**
BOSCH ANEROID fuel injection pump	3416	**
4 ELECTRICAL SYSTEM		
Electrical schematic (Crawler excavators) - (before November 1999)	4001	*
Electrical schematics (Wheeled excavators)	4001	*
Electrical schematic (Crawler excavators) - (November 1999 and after)	4001	*
Electrical schematics (Wheeled excavators)	4001	*
Electronic system and troubleshooting (Crawler excavators)	4002	*
Electronic system and troubleshooting (Wheeled excavators)	4002	*
Starter motor	4003	7-58691GB
Alternator	4004	7-58701GB
Powersensor diagnostic tool	4010	7-79991GB
Anti - start device tool	4020	7-29370GB
5 UNDERCARRIAGE		
Track group (Crawler excavators)	5002	7-79070GB
6 DRIVE TRAIN		
Travel reduction gear and brake (Crawler excavators)	6002	7-79080GB
Swing reduction gear and brake	6003	7-79091GB
Front axle and service brake (Wheeled excavators)	6004	7-79100GB
Rear axle and service brake (Wheeled excavators)	6005	7-79110GB
Gearbox and parking brake (Wheeled excavators)	6008	7-80701GB
Twin wheels (Wheeled excavators)	6020	7-26170GB
7 UNDERCARRIAGE HYDRAULICS		
Hydraulic travel motor (Mono-speed crawler excavators)	7002	7-80711GB
Hydraulic travel motor (Two-speed crawler excavators)	7003	7-80721GB
Hydraulic travel motor (Wheeled excavators)	7003	7-80731GB
Travel control valve (Crawler excavators)	7030	7-80741GB
Travel, stabilizer and dozer blade control valve (wheeled excavators)	7031	7-79170GB
Steering, stabilizer, dozer blade and front axle locking cylinders (wheeled excavators)	7080	7-79180GB

* Consult the Schematic Set

** Consult the engine Service Manual.

DIVISION/SECTION	SECTION N°	REFERENCE N°
8 UPPERSTRUCTURE HYDRAULICS		
Hydraulic inspection, adjustment and schematics (Wheeled excavators).....	8001	*
Hydraulic inspection, adjustment and schematics (Crawler excavators)	8001	*
Hydraulic swivel (Crawler excavators)	8011	7-80791GB
Hydraulic swivel (Wheeled excavators)	8011	7-80801GB
High Pressure Hydraulic pumps	8020	7-58862GB
Swing Hydraulic pumps	8021	7-79220GB
Attachment control valve.....	8031	7-79230GB
Swing control valve	8033	7-79240GB
Rotary control valve (Orbitrol) (Wheeled excavators)	8037	7-80841GB
Hydraulic swing motor and forced-feed safety block	8040	7-80851GB
Attachment and swing control block (Control lever).....	8050	7-80261GB
Travel and option control block (Foot pedal).....	8051	7-80270GB
Travel hand control block (Inching, wheeled excavators)	8052	7-80870GB
Direction of travel inverter control block (Inching, crawler excavators)	8053	7-80290GB
Travel control block (wheeled excavators)	8054	7-80301GB
Brake module	8060	7-80882GB
Parking brake electro-control valve.....	8061	7-80952GB
Electro-control valve block (Crawler excavators).....	8070	7-79331GB
Electro-control valve block (wheeled excavators)	8071	7-79341GB
Attachment cylinders.....	8080	7-79351GB
9 UPPERSTRUCTURE		
Upperstructure and turntable bearing	9002	7-79361GB
Cab	9004	7-58191GB

* Consult the Schematic Set

NOTE: CASE Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

Section 1001

**SAFETY, GENERAL INFORMATION
AND TORQUE SPECIFICATIONS**

SAFETY



WARNING: This symbol means **WARNING ! BE VIGILANT ! YOUR SAFETY IS AT RISK**. The message that follows the symbol contains important safety information. Read it carefully. Be sure you understand the possible risks of injury or even death.

To avoid all risks, always follow the safety notes contained in this section and throughout this manual.

Put the warning tag shown below on the key for the keyswitch when servicing or repairing the machine. One warning tag is supplied with each machine. Additional tags, Part Number 321-4614, are available from your service parts supplier.



PDG0328



WARNING: Read the Operator's Manual carefully and make sure you understand how to operate the controls correctly.



WARNING: Never operate the machine and attachment controls unless you are seated in the operator's seat. If you are not in the operator's seat, you run the risk of serious injury.



WARNING: The machine is built to carry the operator only. Do not allow passengers to ride on the machine.



WARNING : Prior to starting up the engine read the safety messages contained in the operator's manual carefully. Read all safety stickers on the machine. Have people move back from the machine. Learn how to use the controls before starting up the machine. It is your responsibility to follow the manufacturer's instructions on how to operate and maintain the machine. It is your responsibility to follow applicable rules and regulations. Service and Operator's Manuals are available from your J.I. Case Dealer.



WARNING: If you wear loose clothing or if you omit to use safety equipment for your work, you risk injury. Always wear clothes that do not risk getting caught in the machine. Other safety equipment may be necessary, in particular : helmets, safety shoes, ear plugs, safety glasses, protection mask, thick gloves and reflecting clothes.



WARNING: When working close to the fan with the engine running, avoid wearing loose clothing and operate with extreme caution.



WARNING: When checking the hydraulic circuits, follow procedures to the letter. **DO NOT CHANGE** procedures.



WARNING: Prior to operating the hydraulic cylinders of this machine for setting or to bleed the circuit, have all people standing around the machine move away.



WARNING: Wear gloves or insulated mittens when working on hot parts.



WARNING: Lower all attachments to the ground or rest them on stands before carrying out maintenance jobs.



WARNING: Fine sprays of hydraulic oil under pressure can penetrate the skin and cause serious infection. If hydraulic oil under pressure penetrates the skin, see a doctor immediately. Maintain all hoses and pipes in good condition. Make sure that all connections are properly tightened. Change all hoses or pipes that have been damaged or that are suspect. **DO NOT CHECK** for leaks with bare hands. Use a piece of cardboard or wood.



WARNING: To remove a hardened pin such as a pivot pin, or a hardened shaft, use a soft head hammer (brass or bronze) or a brass or bronze strip and a steel head hammer.



WARNING: When using a hammer to remove or reassemble pivot pins, or when using compressed air, or when using a grinder make sure to wear safety glasses that protect the eyes from all sides.



WARNING: Use proper lifting/hoisting equipment to lift wheels or tracks and always work on safe ground. Prevent the machine from moving using correct safety chocks.



WARNING: When performing maintenance or repair operations on the machine, make sure that the work shop floor, the cab and the steps of the excavator are free from oil, water, grease, tools etc. Use oil absorbing material or rags as necessary. Always think safety.



WARNING: Certain components of this machine are very heavy. Use hoisting tools or additional assistance as recommended in this manual.



WARNING: Exhaust fumes can cause death. If it is necessary to start up the engine in a closed building, evacuate exhaust fumes using an exhaust pipe extension. Open the doors and let fresh air into the building.



WARNING: When battery liquid is frozen, the battery can explode if : (1) you try to charge the battery or (2) you try to start the engine by connecting an auxiliary power source. To prevent battery electrolyte from freezing keep the battery fully charged. If you do not follow these instructions, you or others nearby may be injured.



WARNING: Batteries contain acid and explosive gases. A spark, a flame or an improper cable connection may cause an explosion. For proper connection of cables to the battery of this machine see the Operator's Manual. If you do not follow these instructions, you risk severe injury.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com