

1845C SKID STEER

Service Manual 8-42913

Table of Contents

Description	Section No.	Publication Form No.
General		
	Tab 1	
Loctite Product Chart		8-98900
Safety Rules, Service Manual Introduction and Torque Specifications	1001	8-42910
Fluids and Lubricants	1002	8-17742
Engines		
	Tab 2	
Engine and Radiator Removal and Installation	2000	8-42910
Engine Accessories (Air Cleaner, Ether Injection System and Mufflers)	2001	8-42910
Detailed Engine Specifications	2402	8-24163
Cylinder Head and Valve Train	2415	8-24173
Cylinder Block, Crankshaft, Pistons, Rods, Camshaft, Main Bearings, Oil Seals and Flywheel	2425	8-24183
Lubrication System	2445	8-24193
Cooling System	2455	8-24203
Fuel System		
	Tab 3	
Fuel System and Filters	3410	8-24212
Fuel Injectors	3413	8-24233
CAV Injection Pump (4-390)1	3414	7-37131
Electrical		
	Tab 4	
Electrical "How it Works"	4000	7-14060
Removal and Installation of Starter and Alternator	4001	8-42910
Electrical Specifications and Troubleshooting and Schematics	4002	8-17753
Battery	4005	8-44360
Starter and Starter Solenoid	4006	8-42910
65 Ampere Alternator A187873	4007	8-15670
65 Ampere Alternator A186125	4019	8-11381
Power Train		
	Tab 6	
Hydrostatic How It Works and Troubleshooting	6000	7-14070
Removal and Installation of Piston Pumps, Motor, Planetary and Drive Coupling	6001	8-44170
Hydrostatic Drive System Troubleshooting	6002	8-17762
Piston Pump	6004	8-44180

CASE CORPORATION
700 State Street
Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION
3350 South Service Road
Burlington, ON L7N 3M6 CANADA

Reprinted

Bur 8-18953

Copyright © 2001 Case Corporation
Printed in U.S.A.
Issued August, 1992 (Revised February, 2001)

Table of Contents

Description	Section No.	Publication Form No.
Motor	6005	8-44190
Controls	6006	8-44200
Sprockets, Chains and Axle Housings	6007	8-44210
Planetaries	6009	8-42910
Drive Coupling	6010	8-42910
Wheels and Tires	6011	8-44220
Hydraulics		Tab 8
How It Works	8000	7-14080
Removal and Installation of Hydraulic Components	8001	8-42910
Hydraulic System Specifications and Troubleshooting and Schematics	8002	8-17773
Cleaning the Hydraulic System and Hydrostatic System	8003	8-42910
Pump	8004	8-42910
Loader Control Valve	8005	8-44230
Auxiliary Control Valve	8006	8-42910
D125 Backhoe Control Valve -NA Only	8007	7-44240
Cylinders	8009	8-99470
Mounted Equipment		Tab 9
Control Linkages, Pedals and Levers "How it Works"	9000	7-14090
Pedals and Levers	9001	8-17782
Loader	9001	8-44250
ROPS Canopy, Seat, Seat Belts, and Operators Compartment	9003	8-44260
Auxiliary Hydraulic Installation	9004	8-42910
Backhoe (D125 Backhoe)	9005	7-44270
Rear Pocket		
Hydraulic and Electrical Schematic Foldout	In Rear Pocket	7-11941

NOTE: Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

1001

SAFETY RULES SERVICE MANUAL INTRODUCTION AND TORQUE SPECIFICATIONS

TABLE OF CONTENTS

Safety Rules	1001-2	Illustrations and Photos	1001-4
Service Manual Introduction	1001-4	Clear and Simple English	1001-4
Right, Left, Front, and Rear	1001-4	Special Tools	1001-4
Text	1001-4	Product Identification Number (PIN) and Serial Numbers	1001-5
Table of Contents	1001-4	Torque Specifications	1001-6
Page Numbers	1001-4		

SAFETY RULES




This symbol means **ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED.** The message that follows the symbol contains important information about safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death. 1-1-C

IMPORTANT: To prevent injury on the job, follow the Warning, Caution, and Danger notes in this section and other sections throughout this manual. Follow the instructions carefully.

The procedures recommended and shown in this manual are good, effective service methods. However, all possible procedures and service hazards may not be covered. Therefore, if you use a tool or procedure not recommended, you must make sure that the method you select is a safe method.

Put the warning tag shown below on the key for the key switch when you are servicing or repairing this machine. One warning tag is on every new machine. You can buy additional warning tags, part number 331-4614, from Service Parts Supply.

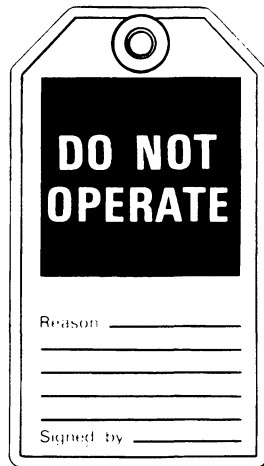

780449



WARNING: Read operator's manual to familiarize yourself with control lever functions.

46-27



WARNING: Operate tractor and equipment controls from the seat position only. Any other method could result in serious injury.

48-55



WARNING: This is a one man machine, no riders allowed.

35-8



WARNING: If you wear clothing that is too loose or do not use the correct safety equipment for your job, you can be injured. Always wear clothing that will not catch on objects. Extra safety equipment that can be required includes hard hat, safety shoes, ear protection, eye or face protection, heavy gloves and reflector clothing.

45-3-A



750213



DANGER: Engine exhaust fumes can cause death. If it is necessary to start the engine in a closed place, remove the exhaust fumes from the area with an exhaust pipe extension. If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

48-56



WARNING: Operate controls from the operator's seat only.

35-7



WARNING: When working in the area of the fan belt with the engine running, avoid loose clothing if possible, and use extreme caution.

35-4

WARNING: Whenever the bucket must be raised to aid in servicing, block the loader arms in place with lift cylinder support strut or a suitable safety stand.

23-7-B



1. Lift Cylinder Support Strut

855871

WARNING: When doing checks and tests on the equipment hydraulics, follow the procedures as they are written. **DO NOT** change the procedure. 47-44

WARNING: When putting the hydraulic cylinders on this machine through the necessary cycles to check operation or to remove air from a circuit, make sure all people are out of the way. 47-45

WARNING: Use insulated gloves or mittens when working with hot parts. 47-41A

CAUTION: Pin sized and smaller streams of hydraulic oil under pressure can penetrate the skin and result in serious infection. If hydraulic oil under pressure does penetrate the skin, seek medical treatment immediately. Maintain all hoses and tubes in good condition. Make sure all connections are tight. Make a replacement of any tube or hose that is damaged or thought to be damaged. **DO NOT** use your hand to check for leaks; use a piece of cardboard or wood. 40-6-A

CAUTION: When removing hardened pins such as a pivot pin, or a hardened shaft, use a soft head (brass or bronze) hammer or use a driver made from brass or bronze and a steel head hammer. 46-17

CAUTION: When using a hammer to remove and install pivot pins or separate parts, using compressed air or using a grinder, wear eye protection that completely encloses the eyes (approved goggles or other approved eye protectors). 46-13

CAUTION: When servicing or repairing the machine, keep the shop floor and operator's compartment and steps free of oil, water, grease, tools, etc. Use an oil absorbing material and/or shop cloths as required. Use safe practices at all times. 40-8

CAUTION: Use suitable floor (service) jacks or chain hoists to raise wheels or track off the floor. Always block machine in place with suitable safety stands. 40-7-A

CAUTION: Some components of this machine are very heavy. Use suitable lifting equipment or additional help as instructed in this service manual. 40-10

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com