

2050M
Tier 4B (final)
Crawler Dozer
PIN NGC109000 and above

SERVICE MANUAL

Part number 48048570

1st edition English

April 2017





SERVICE MANUAL

2050M Extra Long Track (XLT), Bulldozer (BD) Blade - Tier 4B (final) and Stage IIIB [NGC109000 -], 2050M Extra Long Track (XLT), Power Angle Tilt (PAT) Blade - Tier 4B (final) and Stage IIIB [NGC109000 -], 2050M Long Track (LT), Bulldozer (BD) Blade - Tier 4B (final) and Stage IIIB [NGC109000 -], 2050M Long Track (LT), Power Angle Tilt (PAT) Blade - Tier 4B (final) and Stage IIIB [NGC109000 -], 2050M Wide Track (WT) / Low Ground Pressure (LGP), Bulldozer (BD) Blade - Tier 4B (final) and Stage IIIB [NGC109000 -], 2050M Wide Track (WT) / Low Ground Pressure (LGP), Power Angle Tilt (PAT) Blade - Tier 4B (final) and Stage IIIB [NGC109000 -]

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.206] Fuel filters	10.3
[10.202] Air cleaners and lines	10.4
[10.250] Turbocharger and lines.....	10.5
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.6
[10.400] Engine cooling system	10.7
[10.414] Fan and drive	10.8
[10.310] Aftercooler.....	10.9
[10.304] Engine lubrication system.....	10.10
Hydrostatic drive.....	29
[29.218] Pump and motor components.....	29.1
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35
[35.300] Reservoir, cooler, and filters.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.106] Variable displacement pump	35.3
[35.105] Charge pump.....	35.4
[35.359] Main control valve.....	35.5
[35.741] Dozer blade cylinders	35.6
[35.525] Auxiliary hydraulic valves and lines	35.7
[35.752] Hydraulic fan drive cooling system.....	35.8

[35.000] Hydraulic systems	35.9
Frames and ballasting	39
[39.100] Frame	39.1
Tracks and track suspension	48
[48.130] Track frame and driving wheels	48.1
[48.100] Tracks	48.2
[48.134] Track tension units	48.3
[48.138] Track rollers	48.4
[48.AAA] Tracks and track suspension generic sub-group	48.5
[48.140] Dropbox and final drive	48.6
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.011] Fuel tank system	55.2
[55.015] Engine control system	55.3
[55.030] Service brake electrical system	55.4
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.5
[55.100] Harnesses and connectors	55.6
[55.201] Engine starting system	55.7
[55.202] Cold start aid	55.8
[55.301] Alternator	55.9
[55.302] Battery	55.10
[55.408] Warning indicators, alarms, and instruments	55.11
[55.512] Cab controls	55.12
[55.518] Wiper and washer system	55.13

[55.988] Selective Catalytic Reduction (SCR) electrical system	55.14
[55.DTC] FAULT CODES.....	55.15
Dozer blade and arm.....	86
[86.110] Dozer blade	86.1
[86.124] Dozer pushbeams and struts	86.2
Tools	89
[89.128] Ripper assembly	89.1
Platform, cab, bodywork, and decals.....	90
[90.150] Cab.....	90.1
[90.114] Operator protections	90.2
[90.124] Pneumatically-adjusted operator seat.....	90.3
[90.100] Engine hood and panels	90.4

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com