



1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

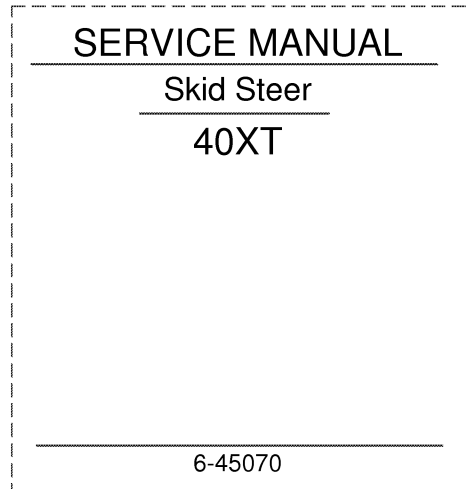


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

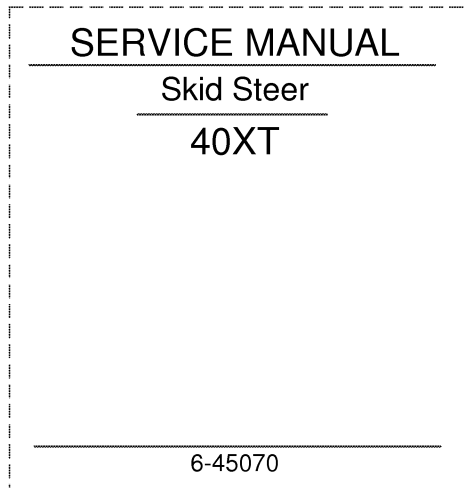

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

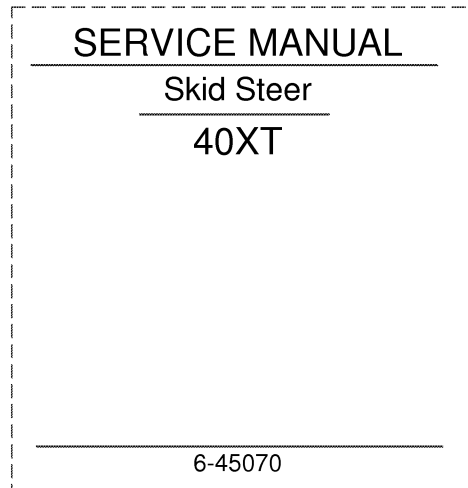

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

40XT SKID STEER

Service Manual

Bur 6-45070

Table of Contents

Description	Section Number	Publication Form Number
General	Tab 1	
Section Index - General		6-45090
Fluids and Lubricants	1001	6-43320
Standard Torque Specifications	1002	7-52931
Metric Conversion Chart	1003	7-52950
Loctite Product Chart		8-98902
Engines	Tab 2	
Section Index - Engines		6-45100
Engine and Radiator Removal and Installation	2000	6-45590
For Engine Repair - See Engine Service Manual		
Fuel Systems	Tab 3	
Section Index - Fuel Systems		6-45110
For Fuel System Repair - See the Engine Service Manual		
Electrical	Tab 4	
Section Index - Electrical		6-45120
Electrical System - "How It Works"	4000	6-43331
Electrical Specifications and Troubleshooting	4001	6-43340
Battery	4005	7-51310
Starter and Starter Solenoid	4006	7-53090
Alternator	4007	7-53100
Power Train	Tab 6	
Section Index - Power Train		6-45140
Hydrostatic System - "How It Works"	6000	6-43350
Hydrostatic System Troubleshooting	6001	6-43360
Removal and Installation of Hydrostatic Components	6002	6-45190
Drive Coupling	6003	6-45200
Piston Pump	6004	6-45210
Drive Motors	6005	6-45220
Sprocket, Chains, and Axle Assemblies	6007	6-45180
Wheels and Tires	6011	6-45230

40XT SKID STEER

Service Manual

Bur 6-45070

Table of Contents (Continued)

Description	Section Number	Publication Form Number
Brakes	Tab 7	
Section Index - Brakes		6-45150
Brake System - "How It Works"	7000	6-45250
Brake System Troubleshooting	7001	6-45260
Removal and Installation of Park Brake Components	7002	6-45270
Brake Solenoid Valve	7003	7-11740
Brakes - Spring Applied - Hydraulic Release (European and Optional North American Machines)	7004	6-41320
Brakes - Pin Lock - Cable Release	7005	6-45510
Brake Pump	7006	6-45650
Hydraulics	Tab 8	
Section Index - Hydraulics		6-45160
Hydraulic System - "How It Works"	8000	6-43370
Hydraulic System Troubleshooting	8001	6-43380
Cleaning the Hydraulic System and Hydrostatic System	8002	6-45290
Removal and Installation of Hydraulic Components	8003	6-45320
Gear (Equipment) Pump	8004	7-11800
Loader Control Valve	8005	6-45330
Cylinders	8006	6-45340
Flat Faced Couplers	8007	7-54740
High Flow Valve	8008	6-45580
D-125 Backhoe Control Valve - NA Only	8012	7-54690
Accumulator for Ride Control	8013	6-45550
Mounted Equipment	Tab 9	
Section Index - Mounted Equipment		6-45170
Pedals and Levers	9001	6-43391
Loader	9002	6-45350
Attachment Coupler	9003	6-45360
ROPS Canopy, Seat, Seat Belts, and Operators Compartment	9004	6-45370
Heater	9006	6-45380
Backhoe (D125 Backhoe)	9007	6-45630
Schematic Set		
Hydraulic and Electrical Schematic Foldout	In Rear Pocket	6-43400

SECTION INDEX

GENERAL

Section Title	Section Number
Fluids and Lubricants	1001
Standard Torque Specifications	1002
Metric Conversion Chart	1003
Loctite Product Chart	

Section 1001

FLUIDS AND LUBRICANTS

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.
You can download the most
perfect and complete manual in
the world immediately.

Our support email:
ebooklibonline@outlook.com