

The CASE logo is displayed in white, bold, italicized capital letters. It is positioned on a black trapezoidal background that tapers to the right. A horizontal orange bar is located directly beneath the letters.

REPAIR MANUAL

SKID STEER/COMPACT TRACK LOADER

410
420
420CT
SERIES 3

87634765 NA

Issued 01Jan08

410/420 SKID STEER AND 420CT COMPACT TRACK LOADER

Repair Manual

Mechanical and Pilot Control Machines (Tier 3 and Cab Up-Grade Machines)

Bur 87634765
Table of Contents

Description	Section Number	Publication Form Number
General	Tab 1	
Section Index - General		6-79041
Fluids and Lubricants	1001	6-79031
Fluids and Lubricants Tier 3 Engines	1001	5-7580
Standard Torque Specifications	1002	7-52931
Metric Conversion Chart	1003	7-52950
Engines	Tab 2	
Section Index - Engines		6-79051
Engine and Radiator Removal and Installation	2000	6-79130
Engine and Radiator Removal and Installation (410 Tier 3 Engines)	2000	5-7650
Engine and Radiator Removal and Installation (420/420CT Tier 3 Engines)	2000	5-7660
For Engine Repair - See Engine Repair Manual		6-79550
For 420/420CT Tier 3 Engine Repair - See Tier 3 Engine Repair Manual		87693888
Fuel Systems	Tab 3	
Section Index - Fuel Systems		6-79061
For Fuel System Repair - See the Engine Repair Manual		6-79550
For 420/420CT Tier 3 Fuel System Repair - - See Tier 3 Engine Repair Manual		87693888
Electrical	Tab 4	
Section Index - Electrical		6-79071
Electrical Specifications and Troubleshooting and Schematics	4001	6-79540
Electrical Specifications and Troubleshooting and Schematics (Tier 3 Cab Up-Grade Machines)	4001	5-9590
Battery	4005	7-51310
Starter and Starter Solenoid	4006	7-53091
Tracks	Tab 5	
Section Index - Tracks		5-2631
Tracks	5001	5-2610
Drive Sprocket, Idler Wheels, and Rollers	5002	5-2620
Track Drive Motor	5003	5-7630

410/420 SKID STEER AND 420CT COMPACT TRACK LOADER

Repair Manual

Mechanical and Pilot Control Machines (Tier 3 and Cab Up-Grade Machines)

Bur 87634765

Table of Contents (Continued)

Description	Section Number	Publication Form Number
Power Train	Tab 6	
Section Index - Power Train		6-79081
Hydrostatic System "How it Works" (ISO and H-Pattern Pilot Control Machines)	6000	5-4930
Hydrostatic System Troubleshooting	6001	6-79331
Hydrostatic System Troubleshooting (Machines Equipped with Pilot Controls)	6001	5-7610
Removal and Installation of Hydrostatic Components	6002	6-79532
Drive Coupling	6003	6-79120
Drive Coupling - Tier 3 Engines	6003	5-9440
Piston Pump	6004	6-49580
Piston Pump (Machines Equipped with Pilot Controls)	6004	5-7600
Drive Motors (Eaton)	6005	6-79020
Drive Motors -Single Speed	6005	6-79000
Sprocket, Chains, and Axle Assemblies	6007	6-79300
Wheels and Tires	6011	6-79310
Load Management System	6012	5-7590
Brakes	Tab 7	
Section Index - Brakes		6-79091
Removal and Installation of Park Brake Components	7002	6-79571
410 Brakes - Spring Applied - Hydraulic Release (Refer to Section 6005 - Single Speed Drive Motor)		
420 Brakes - Spring Applied - Hydraulic Release	7004	6-79580
420CT Brakes - Refer to Section 5003 Track Drive Motor		
Hydraulics	Tab 8	
Section Index - Hydraulics		6-79102
Hydraulic System Troubleshooting and Schematics (Mechanical and Pilot Control Machines)	8001	6-79512
Cleaning the Hydraulic System and Hydrostatic System	8002	6-45290
Removal and Installation of Hydraulic Components	8003	6-79520
Gear Pump (Equipment and High Flow)	8004	6-79350
Loader Control Valve	8005	5-2640
Cylinders	8006	6-79360
Flat Faced Couplers	8007	7-54740
Accumulator for Ride Control	8013	6-45550

410/420 SKID STEER AND 420CT COMPACT TRACK LOADER
Repair Manual
Mechanical and Pilot Control Machines
(Tier 3 and Cab Up-Grade Machines)
Bur 87634765

Table of Contents (Continued)

Description	Section Number	Publication Form Number
Mounted Equipment	Tab 9	
Section Index - Mounted Equipment		6-79111
Pedals and Levers	9001	6-79500
Pedals and Levers (Cab Up-Grade Machines)	9001	5-7670
Loader	9002	6-79390
Attachment Coupler	9003	6-79400
ROPS Canopy, Seat, Seat Belts, and Operators Compartment	9004	6-79410
ROPS Canopy, Seat, Seat Belts, and Operators Compartment (Cab Up-Grade Machines)	9004	5-9460
Heater	9006	6-79450
Air Conditioning Troubleshooting for Systems with R134A Refrigerant (Cab Up-Grade Machines)	9011	5-9480
Air Conditioner System Gauges and Testing for Systems with R134A Refrigerant (Cab Up-Grade Machines)	9012	5-9490
Refrigerant Recovery, Compressor Removal and System Evacuation and Recharging (Cab Up-Grade Machines)	9013	5-9500
Air Conditioner System Gauges and Testing for Systems with R134A Refrigerant (Cab Up-Grade Machines)	9014	5-9510
Schematic Set		
Hydraulic and Electrical Schematic Foldout	In Rear Pocket	6-78971
Hydraulic and Electrical Schematic Foldout (Tier 3 - Cab Up-Grade and Machines Equipped with Pilot Controls)	In Rear Pocket	5-9610

410/420 SKID STEER AND 420CT COMPACT TRACK LOADER
Repair Manual
Mechanical and Pilot Control Machines
(Tier 3 and Cab Up-Grade Machines)
Bur 87634765

Table of Contents (Continued)

NOTES

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com