

# 430/440 SKID STEER AND 440CT COMPACT TRACK LOADER

## Repair Manual Mechanical and Pilot Control Machines (Tier 3 and Cab Up-Grade Machines)

Bur 87634767

### Table of Contents

Description	Section Number	Publication Form Number
<b>General</b>	<b>Tab 1</b>	
Section Index - General		6-79151
Fluids and Lubricants	1001	6-79031
Fluids and Lubricants Tier 3 Engines	1001	5-9520
Standard Torque Specifications	1002	7-52931
Metric Conversion Chart	1003	7-52950
<b>Engines</b>	<b>Tab 2</b>	
Section Index - Engines		6-79161
Engine and Radiator Removal and Installation	2000	6-79290
Engine and Radiator Removal and Installation (430 Tier 3 Engine)	2000	5-9540
Engine and Radiator Removal and Installation (440/440CT Tier 3 Engine)	2000	5-9550
For Engine Repair - See Engine Service Manual		6-74500
For 430 Tier 3 Engine Repair - See Tier 3 Engine Repair Manual		87693888
For 440/440CT Tier 3 Engine Repair - See Tier 3 Engine Repair Manual		87630273
<b>Fuel Systems</b>	<b>Tab 3</b>	
Section Index - Fuel Systems		6-79171
For Fuel System Repair - See the Engine Service Manual		6-74500
For 430 Tier 3 Fuel System Repair - See Tier 3 Engine Repair Manual		87693888
For 440/440CT Tier 3 Fuel System Repair - See Tier 3 Engine Repair Manual		87630273
<b>Electrical</b>	<b>Tab 4</b>	
Section Index - Electrical		6-79182
Electrical System Specifications, Troubleshooting, and Schematics (Mechanical and Pilot Control Machines)	4001	6-79371
Electrical System Specifications, Troubleshooting, and Schematics (Tier 3 and Cab Up-Grade Machines)	4001	5-9600
Battery	4005	7-51310
Starter and Starter Solenoid	4006	7-53091

# 430/440 SKID STEER AND 440CT COMPACT TRACK LOADER

## Repair Manual Mechanical and Pilot Control Machines (Tier 3 and Cab Up-Grade Machines)

Bur 87634767

### Table of Contents (Continued)

Description	Section Number	Publication Form Number
<b>Tracks</b> <span style="float: right;"><b>Tab 5</b></span>		
Section Index - Tracks		5-2630
Tracks	5001	5-2610
Drive Sprocket, Idler Wheels, and Rollers	5002	5-2620
<b>Power Train</b> <span style="float: right;"><b>Tab 6</b></span>		
Section Index - Power Train		6-79192
Hydrostatic System "How it Works" (ISO- Pattern and H-Pattern Pilot Control Machines)	6000	5-4930
Hydrostatic System Troubleshooting	6001	6-79331
Hydrostatic System Troubleshooting (Machines Equipped with Pilot Controls)	6001	5-4910
Removal and Installation of Hydrostatic Components (Mechanical and Pilot Control Machines)	6002	6-79322
Drive Coupling	6003	6-79230
Drive Coupling Tier 3 Engines	6003	5-9530
Piston Pump	6004	6-49580
Piston Pump (Machines Equipped with Pilot Controls)	6004	5-4921
Drive Motors Single Speed	6005	6-79000
Drive Motors Two Speed	6005	6-79010
Sprocket, Chains, and Axle Assemblies	6007	6-79300
Wheels and Tires	6011	6-79310
<b>Brakes</b> <span style="float: right;"><b>Tab 7</b></span>		
Section Index - Brakes		6-79200
Removal and Installation of Park Brake Components	7002	6-79441
<b>Hydraulics</b> <span style="float: right;"><b>Tab 8</b></span>		
Section Index - Hydraulics		6-79212
Hydraulic System Troubleshooting and Schematics (Mechanical and Pilot Control Machines)	8001	6-79342
Cleaning the Hydraulic System and Hydrostatic System	8002	6-45290
Removal and Installation of Hydraulic Components	8003	6-79431
Gear Pump (Equipment and High Flow)	8004	6-79350
Loader Control Valve	8005	5-2640
Cylinders	8006	6-79360
Flat Faced Couplers	8007	7-54740
Accumulator for Ride Control	8013	6-45550

# 430/440 SKID STEER AND 440CT COMPACT TRACK LOADER

## Repair Manual Mechanical and Pilot Control Machines (Tier 3 and Cab Up-Grade Machines)

Bur 87634767

### Table of Contents (Continued)

Description	Section Number	Publication Form Number
<b>Mounted Equipment</b>		
	<b>Tab 9</b>	
Section Index - Mounted Equipment		6-79221
Pedals and Levers	9001	6-79421
Pedals and Levers (Cab Up-Grade Machines)	9001	5-9560
Loader	9002	6-79390
Attachment Coupler	9003	6-79400
ROPS Canopy, Seat, Seat Belts, and Operators Compartment	9004	6-79410
ROPS Canopy, Seat, Seat Belts, and Operators Compartment (Cab Up-Grade Machines)	9004	5-9460
Heater	9006	6-79450
Air Conditioning Troubleshooting for Systems with R-134A Refrigerant	9011	6-79460
Air Conditioning Troubleshooting for Systems with R-134A Refrigerant (Cab Up-Grade Machines)	9011	5-9480
Air Conditioner System Gauges and Testing for Systems with R-134A Refrigerant	9012	6-79470
Air Conditioner System Gauges and Testing for Systems with R-134A Refrigerant (Cab Up-Grade Machines)	9012	5-9490
Air Conditioner System Service for Systems with R-134A Refrigerant Refrigerant Recovery, Compressor Removal and System Evacuation and Recharging	9013	6-79480
Air Conditioner System Service for Systems with R-134A Refrigerant Refrigerant Recovery, Compressor Removal and System Evacuation and Recharging (Cab Up-Grade Machines)	9013	5-9500
Air Conditioner Component Service for Systems with R-134A Refrigerant	9014	6-79490
Air Conditioner Component Service for Systems with R-134A Refrigerant (Cab Up-Grade Machines)	9014	5-9510
<b>Schematic Set</b>		
Hydraulic and Electrical Schematic Foldout	In Rear Pocket	5-5351
Hydraulic and Electrical Schematic Foldout (Tier 3 Cab Up-Grade and Pilot Control Machines)	In Rear Pocket	5-9620

**430/440 SKID STEER AND 440CT COMPACT TRACK LOADER**

**Repair Manual  
Mechanical and Pilot Control Machines  
(Tier 3 and Cab Up-Grade Machines)**

**Bur 87634767**

**Table of Contents** (Continued)

**NOTES**

**SECTION INDEX**  
**GENERAL**

<b>Section Title</b>	<b>Section Number</b>
Fluids and Lubricants .....	1001
Fluids and Lubricants Tier 3 Engines .....	1001
Standard Torque Specifications .....	1002
Metric Conversion Chart .....	1003

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)