

521E Wheel Loader Repair Manual 84186213 A - EU

Table of Contents

Description	Section No.
General Tab 1	
Section Index - General	
Standard Torque Specifications	1001
Fluids and Lubricants	1002
Metric Conversion Chart	1003
Engines Tab 2	
Section Index - Engines	
Engine and Radiator Removal and Installation	2000
Stall Tests	2002
After Cooler	2003
For Engine Repair, See the Engine Service Manual 87630273	
Fuel System Tab 3	
Section Index - Fuel System	
For Fuel System Repair, See the Engine Service Manual 87630273	
Electrical Tab 4	
Section Index - Electrical	
Removal and Installation of Starter and Alternator	4001
Electrical Specifications and Troubleshooting	4002
Batteries	4003
Instrument Cluster	4005
Steering Tab 5	
Section Index - Steering	
Removal and Installation of Steering Components	5001
Steering Specifications, Pressure Checks, and Troubleshooting	5002
Steering Cylinders	5005
Center Pivot	5006
Auxiliary Steering Motor and Pump	5008
Joystick Steering System (JSS) (option)	5009

521E Wheel Loader Repair Manual 84186213 A - EU

Table of Contents

	Description	Section No.
Power Train		Tab 6
Section Index - Power Train		
Removal and Installation of Power Train Components		6001
Transmission Specifications, Pressure Checks, and Troubleshooting		6002
Transmission		6003
Front Axle		6004
Rear Axle		6004
Drive Shafts, Center Bearing, and Universal Joints		6005
Wheels and Tires		6006
Transmission Control Valve		6007
Brakes		Tab 7
Section Index - Brakes		
Removal and Installation of Brake Components		7001
Hydraulic Brake Troubleshooting		7002
Brake Pump		7003
Brake Accumulators		7004
Parking Brake		7008
Hydraulics		Tab 8
Section Index - Hydraulics		
How to Read Hydraulic Schematics		8000
Removal and Installation of Hydraulic Components		8001
Hydraulic Specifications, Troubleshooting, and Pressure Checks		8002
Cleaning the Hydraulic System		8003
Loader Control Valve		8005
Cylinders		8006
Coupler Solenoid Locking Valve		8007
Ride Control Accumulator		8013
Ride Control Valve		8014

521E Wheel Loader Repair Manual 84186213 A - EU

Table of Contents

Description	Section No.
Mounted Equipment	Tab 9
Section Index - Mounted Equipment	
Air Conditioning Troubleshooting and System Checks	9002
Air Conditioner System Service	9003
Removal And Installation Of Air Conditioning And Heater Components	9004
Loader	9006
Roll Over Protective Structure (ROPS), Cab Structural Frame (CSF)	9007
Cab Glass Installation	9010
Electrical Schematic Foldouts and Hydraulic Schematic Foldout	In Rear Pocket

SECTION INDEX

GENERAL

Section Title	Section Number
Standard Torque Specifications	1001
Fluids and Lubricants	1002
Metric Conversion Chart	1003

Section 1001

GENERAL TORQUE SPECIFICATIONS

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com