

**521F**  
**Tier 4**  
Wheel Loader

**SERVICE MANUAL**

**Part number 47462778**  
1<sup>st</sup> edition English  
January 2013



# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.310] Aftercooler.....	10.2
[10.400] Engine cooling system .....	10.3
[10.414] Fan and drive .....	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.5
Transmission.....	21
[21.113] Powershift transmission .....	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.145] Gearbox internal components.....	21.3
[21.155] Powershift transmission internal components.....	21.4
Four-Wheel Drive (4WD) system .....	23
[23.314] Drive shaft.....	23.1
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.310] Final drives .....	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives .....	27.3
Brakes and controls .....	33
[33.110] Parking brake or parking lock .....	33.1
[33.202] Hydraulic service brakes .....	33.2
Hydraulic systems.....	35

[35.000] Hydraulic systems .....	35.1
[35.106] Variable displacement pump .....	35.2
[35.300] Reservoir, cooler, and filters.....	35.3
[35.357] Pilot system .....	35.4
[35.359] Main control valve .....	35.5
[35.701] Front loader arm hydraulic system .....	35.6
[35.752] Hydraulic fan drive cooling system.....	35.7
<b>Frames and ballasting .....</b>	<b>39</b>
[39.100] Frame .....	39.1
<b>41 - Steering .....</b>	<b>41</b>
[41.200] Hydraulic control components.....	41.1
[41.216] Cylinders .....	41.2
[41.910] Auxiliary steering .....	41.3
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating .....	50.1
[50.200] Air conditioning.....	50.2
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.011] Fuel tank system .....	55.2
[55.012] Engine cooling system .....	55.3
[55.015] Engine control system.....	55.4
[55.030] Service brake electrical system .....	55.5
[55.031] Parking brake electrical system .....	55.6
[55.036] Hydraulic system control .....	55.7
[55.047] Steering control system .....	55.8
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.9
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.10
[55.100] Harnesses and connectors.....	55.11
[55.201] Engine starting system .....	55.12

[55.202] Cold start aid .....	55.13
[55.301] Alternator .....	55.14
[55.302] Battery.....	55.15
[55.404] External lighting .....	55.16
[55.405] External lighting switches and relays .....	55.17
[55.408] Warning indicators, alarms, and instruments .....	55.18
[55.415] Loader arm and bucket control system .....	55.19
[55.510] Cab/Platform harnesses and connectors .....	55.20
[55.512] Cab controls.....	55.21
[55.514] Cab lighting .....	55.22
[55.518] Wiper/Washer system.....	55.23
[55.519] Cab brake controls .....	55.24
[55.524] Cab controls (Lift arm, Boom, Dipper, Bucket).....	55.25
[55.988] Selective Catalytic Reduction (SCR) electrical system .....	55.26
[55.DTC] FAULT CODES.....	55.27
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.124] Pneumatically-adjusted operator seat.....	90.1



## **INTRODUCTION**

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)