

**521F**  
**Tier 4B (final)**  
Wheel Loader

**SERVICE MANUAL**

**Part number 47955970**

1<sup>st</sup> edition English  
February 2016



# Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
521F TIER4B Z-BAR	North America	F4HFE413N*B001
521F TIER4B XT	North America	F4HFE413N*B001
521F TIER4B XR	North America	F4HFE413N*B001

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.202] Air cleaners and lines .....	10.2
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment .....	10.3
[10.400] Engine cooling system .....	10.4
[10.414] Fan and drive .....	10.5
[10.310] Aftercooler.....	10.6
[10.304] Engine lubrication system.....	10.7
<b>Transmission</b> .....	<b>21</b>
[21.113] Powershift transmission .....	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.155] Powershift transmission internal components.....	21.3
<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.314] Drive shaft.....	23.1
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.310] Final drives .....	25.4
<b>Rear axle system</b> .....	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
[27.120] Planetary and final drives .....	27.3
[27.124] Final drive hub, steering knuckles, and shafts .....	27.4
<b>Brakes and controls</b> .....	<b>33</b>

[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.106] Variable displacement pump .....	35.3
[35.359] Main control valve.....	35.4
[35.357] Pilot system .....	35.5
[35.752] Hydraulic fan drive cooling system.....	35.6
[35.355] Hydraulic hand control .....	35.7
[35.701] Front loader arm hydraulic system .....	35.8
[35.723] Front loader bucket hydraulic system .....	35.9
[35.734] Tool quick coupler hydraulic system .....	35.10
<b>Frames and ballasting .....</b>	<b>39</b>
[39.100] Frame .....	39.1
<b>Steering.....</b>	<b>41</b>
[41.200] Hydraulic control components.....	41.1
[41.216] Cylinders .....	41.2
[41.910] Auxiliary steering .....	41.3
<b>Wheels .....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating.....	50.1
[50.200] Air conditioning .....	50.2
<b>Electrical systems.....</b>	<b>55</b>
[55.000] Electrical system .....	55.1

[55.100] Harnesses and connectors.....	55.2
[55.015] Engine control system.....	55.3
[55.201] Engine starting system .....	55.4
[55.301] Alternator.....	55.5
[55.302] Battery.....	55.6
[55.202] Cold start aid .....	55.7
[55.011] Fuel tank system .....	55.8
[55.988] Selective Catalytic Reduction (SCR) electrical system .....	55.9
[55.989] Exhaust Gas Recirculation (EGR) electrical system .....	55.10
[55.012] Engine cooling system .....	55.11
[55.024] Transmission control system.....	55.12
[55.519] Cab brake controls .....	55.13
[55.030] Service brake electrical system .....	55.14
[55.031] Parking brake electrical system .....	55.15
[55.512] Cab controls.....	55.16
[55.036] Hydraulic system control .....	55.17
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.18
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.19
[55.047] Steering control system .....	55.20
[55.524] Cab controls (Lift arm, Boom, Dipper, Bucket).....	55.21
[55.415] Loader arm and bucket control system .....	55.22
[55.518] Wiper and washer system.....	55.23
[55.404] External lighting .....	55.24
[55.405] External lighting switches and relays .....	55.25
[55.514] Cab lighting .....	55.26
[55.510] Cab or platform harnesses and connectors.....	55.27
[55.408] Warning indicators, alarms, and instruments .....	55.28
[55.DTC] FAULT CODES.....	55.29
<b>Front loader and bucket.....</b>	<b>82</b>

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)