

580N
580SN-WT
580SN
590SN
Tractor Loader Backhoe

SERVICE MANUAL

Part number 84516378

English

July 2011

Replaces part number 84390833



Contents

INTRODUCTION

HYDRAULIC, PNEUMATIC, ELECTRICAL, ELECTRONIC SYSTEMS A

PRIMARY HYDRAULIC POWER SYSTEM.....	A.10.A
SECONDARY HYDRAULIC POWER SYSTEM.....	A.12.A
ELECTRICAL POWER SYSTEM	A.30.A
FAULT CODES	A.50.A

ENGINE AND PTO IN B

ENGINE	B.10.A
FUEL AND INJECTION SYSTEM.....	B.20.A
EXHAUST SYSTEM.....	B.40.A
ENGINE COOLANT SYSTEM	B.50.A
STARTING SYSTEM	B.80.A

TRANSMISSION, DRIVE AND PTO OUT C

TRANSMISSION Power Shuttle.....	C.20.C
TRANSMISSION Powershift	C.20.E

AXLES, BRAKES AND STEERING..... D

FRONT AXLE	D.10.A
REAR AXLE	D.12.A
STEERING Hydraulic.....	D.20.C
SERVICE BRAKE Hydraulic.....	D.30.C
PARKING BRAKE Mechanical	D.32.B
WHEELS AND TRACKS Wheels.....	D.50.C

FRAME AND CAB E

FRAME Primary frame	E.10.B
SHIELD	E.20.A
USER CONTROLS AND SEAT	E.32.A
USER CONTROLS AND SEAT Operator seat	E.32.C
USER PLATFORM	E.34.A

ENVIRONMENT CONTROL Air-conditioning system	E.40.C
FRAME POSITIONING	F
STABILISING Working stabilising	F.20.D
TOOL POSITIONING	G
LIFTING	G.10.A
HITCH AND WORKING TOOL	H
BOOM Lift	H.20.B
BOOM Swing	H.20.D
DIPPER Lift.....	H.25.B
DIPPER Extension	H.25.F
ARM TOOL ATTACHMENT Tilt.....	H.30.C
EXCAVATING AND LANDSCAPING	J
DIGGING Non-articulated digging tools	J.20.B
CARRYING Articulated tools	J.50.C



INTRODUCTION

Contents

INTRODUCTION

Safety rules	3
Safety rules	4
Safety rules	5
Safety rules	6
Battery - Basic instructions	7
ELECTRONIC SYSTEM - Basic instructions	9
Heater - Basic instructions	10
Basic instructions	11
Basic instructions	13
Torque	14
Abbreviation Measurements	18
Capacities	20
Consumables	22

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com