

580N EP
Tier 4B (final)
Tractor Loader Backhoe
PIN NFC716000 and above

SERVICE MANUAL

Part number 47830957

1st edition English

October 2015



Link Product / Engine

Product	Market Product	Engine
580N EP TWO-WHEEL DRIVE (2WD) TIER 4B (FINAL)	North America	F5HFL463D*F005
580N EP FOUR-WHEEL DRIVE (4WD) TIER 4B (FINAL)	North America	F5HFL463D*F005

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.206] Fuel filters	10.3
[10.216] Fuel tanks	10.4
[10.218] Fuel injection system.....	10.5
[10.304] Engine lubrication system.....	10.6
[10.400] Engine cooling system	10.7
[10.414] Fan and drive	10.8
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.9
Transmission	21
[21.112] Power shuttle transmission.....	21.1
[21.134] Power shuttle transmission external controls	21.2
[21.154] Power shuttle transmission internal components	21.3
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.400] Non-powered front axle	25.4
Rear axle system	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1

[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.104] Fixed displacement pump	35.3
[35.106] Variable displacement pump	35.4
[35.204] Remote control valves	35.5
[35.300] Reservoir, cooler, and filters.....	35.6
[35.350] Safety and main relief valves	35.7
[35.359] Main control valve	35.8
[35.525] Auxiliary hydraulic valves and lines	35.9
[35.703] Stabilizer hydraulic system.....	35.10
[35.723] Front loader bucket hydraulic system	35.11
[35.726] Excavator and backhoe hydraulic controls.....	35.12
[35.736] Boom hydraulic system	35.13
[35.737] Dipper hydraulic system.....	35.14
[35.738] Excavator and backhoe bucket hydraulic system.....	35.15
[35.739] Swing arm hydraulic system	35.16
[35.740] Telescopic arm hydraulic system.....	35.17
Frames and ballasting	39
[39.100] Frame	39.1
[39.129] Stabilizers	39.2
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.216] Cylinders	41.3
Wheels.....	44
[44.511] Front wheels.....	44.1

[44.520] Rear wheels	44.2
Cab climate control	50
[50.200] Air conditioning	50.1
Electrical systems	55
[55.100] Harnesses and connectors	55.1
[55.301] Alternator	55.2
[55.302] Battery	55.3
[55.404] External lighting	55.4
[55.510] Cab or platform harnesses and connectors	55.5
[55.991] Telematics	55.6
[55.DTC] FAULT CODES	55.7
Front loader and bucket	82
[82.100] Arm	82.1
[82.300] Bucket	82.2
Booms, dippers, and buckets	84
[84.100] Bucket	84.1
[84.114] Boom pivoting support	84.2
[84.910] Boom	84.3
[84.912] Dipper arm	84.4
Platform, cab, bodywork, and decals	90
[90.105] Machine shields and guards	90.1
[90.114] Operator protections	90.2
[90.124] Pneumatically-adjusted operator seat	90.3
[90.150] Cab	90.4
[90.151] Cab interior	90.5
[90.154] Cab doors and hatches	90.6

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com