

Service manual

**580SR
580SR+
590SR
695SR**
SERIES 3

Print No. 87643852B



**580SR
580SR+
590SR
695SR**
SERIES 3

Service manual

Print No. 87643852B



TO READER

This manual has been printed for a skilful engineer to supply necessary technical information to carry out service operations on this machine.

Read carefully this manual to collect correct information relevant to repair procedures.

For any question or remark, or in case of any error relevant the contents of this manual, please contact:

CNH ITALIA S.p.A.
Technical Information
Viale delle Nazioni, 55
41100 MODENA - Italy

REFERENCE

Beyond this Service Manual, also refer to documents hereunder listed:

- Operator's Manual
- Parts Catalogue

COMPLETE HANDBOOK FOR INSTRUCTIONS AND REPAIRS

The complete Service Manual consists of two volumes:

- 580SR / 580SR+ / 590SR / 695SR
Service Manual for "Loader backhoe"
- 580SR / 580SR+ / 590SR / 695SR
Service Manual "Engine"

The Service Manuals for "Loader backhoe" and "Engine" contain the necessary technical information to carry out service and repair on machine and on engine, necessary tools to carry out those operations and information on service standard, on procedures for connection, disconnection, disassembly and assembly of parts.

The complete Service Manual which covers the loader backhoe models 580SR / 580SR+ / 590SR / 695SR consists of the following volumes, which can be identified through their print number as stated below:

VOLUME	MACHINE TYPE	PRINT NUMBER
Service Manual - "Loader backhoe"	580SR / 580SR+ / 590SR / 695SR	87643852B
Service Manual - "Engine"	580SR / 580SR+ / 590SR / 695SR	87659057A

LOADER BACKHOE MODELS

The complete range of Loader Backhoe models described in this manual are identified below:

	580SR	580SR+	590SR	695SR
Powershift	/	•	•	•
Powershuttle	•	•	•	/
Stabilizer sideshift	•	•	•	•
Stabilizer center pivot	/	/	/	•
Cab	•	•	•	•
Rops	•	/	/	/
2WD	•	/	/	/
4WD	•	•	•	•
4WS	/	/	/	•
Pilot control	•	•	•	•
Mechanical control	•	•	•	•
Engine 72 kW-97 HP model F4GE948C*601 (mechanical)	•	/	/	/
Engine 72 kW-97 HP model F4HE0484C*J102 (electronic)	/	•	/	/
Engine 82 kW-110 HP model F4HE9484C*J102 (electronic)	/	/	•	/
Engine 82 kW-110 HP model F4HE9484C*J103 - 4WS (electronic)	/	/	/	•
Short dipper	/	/	/	/
Long dipper	•	•	•	•

SECTION 00 - SAFETY PRECAUTIONS

SECTION 01 - MAINTENANCE

SECTION 02 - TECHNICAL SPECIFICATIONS

1. LOADER BACKHOE MODELS	3
2. IDENTIFICATION OF MAIN COMPONENTS.....	4
3. SPECIFICATIONS	6
3.1 DIESEL ENGINE	6
3.2 TRANSMISSION.....	8
3.3 AXLES	9
3.4 BRAKES	9
3.5 STEERING.....	10
3.6 HYDRAULIC SYSTEM	10
3.7 FRONT COUNTERWEIGHT	10
3.8 NOISE AND VIBRATION LEVELS	11
3.9 BUCKETS	11
3.10 TYRES.....	12
4. DIMENSIONS AND PERFORMANCE.....	13
4.1 LOADER ATTACHMENT DIMENSIONS AND PERFORMANCE	13
4.2 DIMENSIONS AND PERFORMANCE OF LOADER ATTACHMENT WITH FORKS.....	19
4.3 BACKHOE ATTACHMENT DIMENSIONS AND PERFORMANCE	20
5. BACKHOE ATTACHMENT LIFTING CAPACITY	26
6. MAXIMUM LIFTING LOADS.....	29
6.1 LOADER ATTACHMENT MAXIMUM LIFTING LOAD TABLE	29
6.2 BACKHOE ATTACHMENT MAXIMUM LIFTING LOAD TABLE	30
7. SUPPLY SUMMARY TABLE	31

SECTION 17 - TORQUE CONVERTERS

1. POWERSHUTTLE TORQUE CONVERTER	3
1.1 DESCRIPTION AND OPERATION.....	3
1.2 SPECIFICATIONS	4
1.3 OVERHAUL	4
1.4 INSPECTION.....	4
1.5 DISASSEMBLY AND ASSEMBLY.....	5
1.6 STALL TEST.....	5
1.7 FAULT FINDING.....	6
2. POWERSHIFT TORQUE CONVERTER	7
2.1 DESCRIPTION AND OPERATION.....	7
2.2 SPECIFICATIONS	8
2.3 OVERHAUL	8
2.4 INSPECTION.....	9
2.5 DISASSEMBLY AND ASSEMBLY.....	9
2.6 STALL TEST.....	11
2.7 FAULT FINDING.....	12

SECTION 21 - TRANSMISSION

1. POWERSHUTTLE TRANSMISSION "TURNER MODEL COM-T4-2025"	3
1.1 SPECIFICATIONS	3
1.2 MOUNTING SCREW TORQUE	5
1.3 TRANSMISSION CONTROLS	6
1.4 LUBRICATION	11
1.5 TRANSMISSION OIL FLOW AND SUPPLY	12
1.6 TRANSMISSION HYDRAULIC VALVES AND PRESSURE TEST POINTS	18
1.7 TRANSMISSION POWER FLOW	19
1.8 TRANSMISSION 2WD COMPONENTS	23
1.9 TRANSMISSION 4WD COMPONENTS	26
1.10 TRANSMISSION REMOVAL	31
1.11 DISASSEMBLY AND ASSEMBLY	32
1.12 FAULT FINDING	90
1.13 SPECIAL TOOLS	93
2. POWERSHIFT TRANSMISSION "DANA T16000"	94
2.1 SPECIFICATIONS	94
2.2 CONTROLS	95
2.3 LUBRICATION	105
2.4 PRESSURE SPECIFICATIONS AND CHECK POINTS	106
2.5 TRANSMISSION COOLER	108
2.6 HYDRAULIC DIAGRAM	109
2.7 OPERATION	110
2.8 POWER FLOWS	117
2.9 GEAR AND CLUTCH LAY OUT	132
2.10 TRANSMISSION REMOVAL AND INSTALLATION	133
2.11 TRANSMISSION COMPONENTS	137
2.12 DISASSEMBLY AND ASSEMBLY	155
2.13 SPECIAL TOOLS	264
2.14 FAULT FINDING	265
2.15 FAULT FINDING	267

SECTION 25 - FRONT AXLES

1. FRONT AXLE 2WD "CARRARO"	3
1.1 SPECIFICATIONS	3
1.2 DISASSEMBLY AND ASSEMBLY	6
1.3 FAULT FINDING	24
2. FRONT AXLE 4WD "CARRARO"	26
2.1 SPECIFICATIONS	26
2.2 DISASSEMBLY AND ASSEMBLY	31
2.3 FAULT FINDING	77
3. FRONT AXLE 4WS "CARRARO"	80
3.1 SPECIFICATIONS	80
3.2 DISASSEMBLY AND ASSEMBLY	84
3.3 FAULT FINDING	137
4. SPECIAL TOOLS	140

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com