

**580ST
590ST
695ST
Stage IV
Tractor Backhoe Loader**

SERVICE MANUAL

Part number 48090752
English
February 2017

© 2017 CNH Industrial America LLC. All Rights Reserved.

CASE
CONSTRUCTION



SERVICE MANUAL

580ST STAGE IV, SIDE-SHIFT (SS), FOUR-WHEEL DRIVE (4WD), MARBLE CUTTING, 580ST STAGE IV, STRAIGHT LOADER ARM (SLA), SIDE SHIFT (SS), FOUR-WHEEL DRIVE (4WD), 580ST STAGE IV, TOOL CARRIER (TC), SIDE SHIFT (SS), TWO-WHEEL DRIVE (2WD), 590ST STAGE IV, TOOL CARRIER (TC), SIDE SHIFT (SS), FOUR-WHEEL DRIVE (4WD), 695ST STAGE IV, SIDE-SHIFT (SS), FOUR-WHEEL DRIVE (4WD), MARBLE CUTTING, 695ST STAGE IV, TOOL CARRIER (TC), CENTER PIVOT (CP), 695ST STAGE IV, TOOL CARRIER (TC), SIDE SHIFT (SS)

Link Product / Engine

Product	Market Product	Engine
580ST STAGE IV, SIDE-SHIFT (SS), FOUR-WHEEL DRIVE (4WD), MARBLE CUTTING	Europe	F5BFL413B*C002
580ST STAGE IV, STRAIGHT LOADER ARM (SLA), SIDE SHIFT (SS), FOUR-WHEEL DRIVE (4WD)	Europe	F5BFL413B*C002
580ST STAGE IV, TOOL CARRIER (TC), SIDE SHIFT (SS), TWO-WHEEL DRIVE (2WD)	Europe	F5BFL413B*C002
590ST STAGE IV, TOOL CARRIER (TC), SIDE SHIFT (SS), FOUR-WHEEL DRIVE (4WD)	Europe	F5BFL413A*B001
695ST STAGE IV, TOOL CARRIER (TC), CENTER PIVOT (CP)	Europe	F5BFL413A*B001
695ST STAGE IV, SIDE-SHIFT (SS), FOUR-WHEEL DRIVE (4WD), MARBLE CUTTING	Europe	F5BFL413A*B001
695ST STAGE IV, TOOL CARRIER (TC), SIDE SHIFT (SS)	Europe	F5BFL413A*B001

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.206] Fuel filters	10.3
[10.218] Fuel injection system.....	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.5
[10.400] Engine cooling system	10.6
[10.414] Fan and drive	10.7
Power coupling.....	19
[19.100] Drive shaft.....	19.1
Transmission.....	21
[21.112] Power shuttle transmission.....	21.1
[21.134] Power shuttle transmission external controls	21.2
[21.154] Power shuttle transmission internal components	21.3
[21.113] Powershift transmission	21.4
[21.135] Powershift transmission external controls.....	21.5
[21.105] Powershift transmission hydraulic components.....	21.6
[21.155] Powershift transmission internal components.....	21.7
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.400] Non-powered front axle	25.4
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1

[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
[27.450] Rear-powered steerable axle	27.4
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.106] Variable displacement pump	35.4
[35.102] Pump control valves.....	35.5
[35.350] Safety and main relief valves	35.6
[35.357] Pilot system	35.7
[35.128] Auxiliary hydraulic function control	35.8
[35.355] Hydraulic hand control	35.9
[35.352] Hydraulic swing system	35.10
[35.724] Front loader hydraulic system control.....	35.11
[35.701] Front loader arm hydraulic system	35.12
[35.723] Front loader bucket hydraulic system	35.13
[35.726] Excavator and backhoe hydraulic controls.....	35.14
[35.736] Boom hydraulic system	35.15
[35.737] Dipper hydraulic system.....	35.16
[35.738] Excavator and backhoe bucket hydraulic system.....	35.17
[35.739] Swing arm hydraulic system	35.18
[35.703] Stabilizer hydraulic system.....	35.19
[35.740] Telescopic arm hydraulic system.....	35.20
Frames and ballasting	39

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com