

# 588 crawler and wheeled hydraulic excavators

## Table of contents

DIVISION : SECTION	SECTION NO	REFERENCE NO
<b>1 GENERAL INFORMATION</b>		
Safety, General Information and Standard Torque Settings.....	1001	7-56942GB
Specifications (Crawler Excavators) .....	1002	7-80591GB
Specifications (Wheeled Excavators) .....	1002	7-80601GB
<b>2 ENGINE</b>		
Engine removal and installation .....	2002	7-80610GB
Radiator and oil cooler .....	2003	7-80621GB
Engine specifications .....	2401	**
Cylinder head and valve assembly .....	2415	**
Short engine block .....	2425	**
Lubrication system .....	2445	**
Cooling system .....	2455	**
Turbocharger.....	2465	**
Turbocharger troubleshooting .....	2565	**
<b>3 FUEL SYSTEM</b>		
Circuit and fuel filter .....	3410	**
CAV injection pump.....	3411	**
BOSCH injection pump .....	3412	**
Fuel injector .....	3412	**
BOSCH ANEROID injection pump.....	3416	**
<b>4 ELECTRICAL SYSTEM</b>		
Electrical schematics (Crawler Excavators) - before November 99.....	4001	7-80630GB
Electrical schematics (Wheeled Excavators) - before November 99 .....	4001	7-80640GB
Electrical schematics (Crawler Excavators) .....	4001	7-26571GB
Electrical schematics (Wheeled Excavators) .....	4001	7-26541GB
Starter motor .....	4003	7-58691GB
Alternator .....	4004	7-58701GB
Anti - start device tool .....	4020	7-29370GB
<b>5 UNDERCARRIAGE</b>		
Set of tracks (Crawler excavators).....	5002	7-80650GB
<b>6 DRIVE TRAIN</b>		
Travel reduction gear and brake (Crawler excavators) .....	6002	7-80661GB
Swing reduction gear and brake .....	6003	7-80671GB
Front axle and service brake (Wheeled excavators).....	6004	7-80681GB
Rear axle and service brake (Wheeled excavators) .....	6005	7-80691GB
Gearbox and parking brake (Wheeled excavators) .....	6008	7-80701GB
Twin Wheels.....	6020	7-26170GB
<b>7 UNDERCARRIAGE HYDRAULICS</b>		
Hydraulic travel motor (Mono-speed crawler excavators).....	7002	7-80711GB
Hydraulic travel motor (Two-speed crawler excavators) .....	7003	7-80721GB
Hydraulic travel motor (Two-speed wheeled excavators) .....	7003	7-80731GB
Travel control valve .....	7030	7-80741GB
Travel, stabilizer or dozer blade control valve (Wheeled excavators).....	7031	7-84151GB
Steering, stabilizer, dozer blade and axle locking cylinders (Wheeled excavators).....	7080	7-80761GB

\*\* Refer to the Engine Service Manual

DIVISION/SECTION	SECTION NO	REFERENCE NO
<b>8 UPPERSTRUCTURE HYDRAULICS</b>		
Checks, adjustments and hydraulic schematics (Wheeled Excavators).....	8001	7-80771GB
Checks, adjustments and hydraulic schematics (Wheeled excavators) .....	8001	7-80781GB
Hydraulic swivel (Crawler Excavators).....	8011	7-80791GB
Hydraulic swivel (Wheeled Excavators).....	8011	7-80801GB
Hydraulic pumps .....	8020	7-80810GB
Attachment control valve.....	8031	7-80821GB
Swing control valve .....	8033	7-80831GB
Rotary control valve (Orbitrol) (Wheeled excavators).....	8037	7-80841GB
Hydraulic swing motor and safety forced-feed block .....	8040	7-80851GB
Attachment and swing control block (Control lever).....	8050	7-80261GB
Travel and option control block (Pedal valve, wheeled excavators) .....	8051	7-80270GB
Travel hand control block (Inching, crawler excavators) .....	8052	7-80870GB
Direction of travel inverter control block (Inching, wheeled excavators) .....	8053	7-80290GB
Travel control block (Wheeled excavators) .....	8054	7-80301GB
Brake unit (Wheeled excavators).....	8060	7-80882GB
Parking brake solenoid valve .....	8061	7-80952GB
Electro-control valve block (Crawler excavators).....	8070	7-80891GB
Electro-control valve block (Wheeled excavators) .....	8071	7-80901GB
Attachment cylinders.....	8080	7-80910GB
Safety valves.....	8081	7-26640GB
Large format hydraulic and electrical schematic (Crawler excavators).....	Kit	7-26800GB
Large format hydraulic and electrical schematic (Wheeled excavators).....	Kit	7-26790GB
<b>9 UPPERSTRUCTURE</b>		
Upperstructure and turntable bearing .....	9002	7-58932GB
Cab .....	9004	7-58191GB

NOTA : La Société CASE se réserve le droit de modifier sans avis préalable les caractéristiques et la conception de la machine sans obligation d'y procéder sur la machine déjà vendue.

La description des modèles déclinés dans ce manuel a été établie à partir des caractéristiques techniques connues à la date de conception de ce document.

# Section 1001

**SAFETY, GENERAL INFORMATION  
AND TORQUE SPECIFICATIONS**

## SAFETY



**WARNING:** This symbol means **WARNING ! BE VIGILANT ! YOUR SAFETY IS AT RISK**. The message that follows the symbol contains important safety information. Read it carefully. Be sure you understand the possible risks of injury or even death.

To avoid all risks, always follow the safety notes contained in this section and throughout this manual.

Put the warning tag shown below on the key for the keyswitch when servicing or repairing the machine. One warning tag is supplied with each machine. Additional tags, Part Number 321-4614, are available from your service parts supplier.



PDG0328



**WARNING:** Read the Operator's Manual carefully and make sure you understand how to operate the controls correctly.



**WARNING:** Never operate the machine and attachment controls unless you are seated in the operator's seat. If you are not in the operator's seat, you run the risk of serious injury.



**WARNING:** The machine is built to carry the operator only. Do not allow passengers to ride on the machine.



**WARNING :** Prior to starting up the engine read the safety messages contained in the operator's manual carefully. Read all safety stickers on the machine. Have people move back from the machine. Learn how to use the controls before starting up the machine. It is your responsibility to follow the manufacturer's instructions on how to operate and maintain the machine. It is your responsibility to follow applicable rules and regulations. Service and Operator's Manuals are available from your J.I. Case Dealer.



**WARNING:** If you wear loose clothing or if you omit to use safety equipment for your work, you risk injury. Always wear clothes that do not risk getting caught in the machine. Other safety equipment may be necessary, in particular : helmets, safety shoes, ear plugs, safety glasses, protection mask, thick gloves and reflecting clothes.



**WARNING:** When working close to the fan with the engine running, avoid wearing loose clothing and operate with extreme caution.



**WARNING:** When checking the hydraulic circuits, follow procedures to the letter. **DO NOT CHANGE** procedures.



**WARNING:** Prior to operating the hydraulic cylinders of this machine for setting or to bleed the circuit, have all people standing around the machine move away.



**WARNING:** Wear gloves or insulated mittens when working on hot parts.



**WARNING:** Lower all attachments to the ground or rest them on stands before carrying out maintenance jobs.



**WARNING:** Fine sprays of hydraulic oil under pressure can penetrate the skin and cause serious infection. If hydraulic oil under pressure penetrates the skin, see a doctor immediately. Maintain all hoses and pipes in good condition. Make sure that all connections are properly tightened. Change all hoses or pipes that have been damaged or that are suspect. **DO NOT CHECK** for leaks with bare hands. Use a piece of cardboard or wood.



**WARNING:** To remove a hardened pin such as a pivot pin, or a hardened shaft, use a soft head hammer (brass or bronze) or a brass or bronze strip and a steel head hammer.



**WARNING:** When using a hammer to remove or reassemble pivot pins, or when using compressed air, or when using a grinder make sure to wear safety glasses that protect the eyes from all sides.



**WARNING:** Use proper lifting/hoisting equipment to lift wheels or tracks and always work on safe ground. Prevent the machine from moving using correct safety chocks.



**WARNING:** When performing maintenance or repair operations on the machine, make sure that the work shop floor, the cab and the steps of the excavator are free from oil, water, grease, tools etc. Use oil absorbing material or rags as necessary. Always think safety.



**WARNING:** Certain components of this machine are very heavy. Use hoisting tools or additional assistance as recommended in this manual.



**WARNING:** Exhaust fumes can cause death. If it is necessary to start up the engine in a closed building, evacuate exhaust fumes using an exhaust pipe extension. Open the doors and let fresh air into the building.



**WARNING:** When battery liquid is frozen, the battery can explode if : (1) you try to charge the battery or (2) you try to start the engine by connecting an auxiliary power source. To prevent battery electrolyte from freezing keep the battery fully charged. If you do not follow these instructions, you or others nearby may be injured.



**WARNING:** Batteries contain acid and explosive gases. A spark, a flame or an improper cable connection may cause an explosion. For proper connection of cables to the battery of this machine see the Operator's Manual. If you do not follow these instructions, you risk severe injury.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)