

621C/721C Loaders Service Manual

Table of Contents

Description	Section No.	Form No.
General		
	Tab 1	
Section Index - General		7-12120
Standard Torque Specifications	1001	8-71601
Fluids and Lubricants	1002	7-12131
Loctite Product Chart		8-98902
Engines		
	Tab 2	
Section Index - Engines		7-12140
Engine and Radiator Removal and Installation - 621C	2000	7-12150
Engine and Radiator Removal and Installation - 721C	2000	7-12160
Stall Tests	2002	7-12171
For Engine Repair, See the Engine Service Manual		
Fuel System		
	Tab 3	
Section Index - Fuel System		7-12180
For Fuel System Repair, See the Engine Service Manual		
Electrical		
	Tab 4	
Section Index - Electrical		7-12190
Removal and Installation of Starter and Alternator - 621C	4001	7-12210
Removal and Installation of Starter and Alternator - 721C	4001	7-15380
Electrical Specifications and Troubleshooting	4002	7-12221
Batteries	4003	7-49440
Starter and Starter Solenoid - 621C	4004	7-12230
Starter and Starter Solenoid - 721C	4004	7-12240
Information and Diagnostic Center	4005	7-12251
Alternator	4007	7-12260
Steering		
	Tab 5	
Section Index - Steering		7-12270
Removal and Installation of Steering Components	5001	7-12290
Steering Specifications, Pressure Checks, and Troubleshooting	5002	7-12300
Steering Control Valve	5003	7-12310
Steering Priority Valve	5004	7-12320
Steering Cylinders	5005	7-12330
Center Pivot	5006	7-12340

621C/721C Loaders Service Manual

Table of Contents

Description	Section No.	Form No.
Power Train		Tab 6
Section Index - Power Train		7-12362
Transmission Specifications, Pressure Checks, and Troubleshooting	6002	7-12391
Transmission - 621C	6003	7-12401
Transmission - 721C	6003	7-12411
621C Front and Rear Axle - 721C Rear Axle	6004	6-41400
721C Front Axle	6004	6-41410
Drive Shaft, Center Bearing, and Universal Joints	6005	7-12430
Wheels and Tires	6006	7-12440
Transmission Control Valve	6007	7-12450
Brakes		Tab 7
Section Index - Brakes		7-12460
Removal and Installation of Brake Components	7001	7-12480
Hydraulic Brake Troubleshooting	7002	7-12490
Brake Accumulators	7004	7-12510
Brake Actuator Valve	7005	7-12520
Brake Accumulator Valve	7007	7-12530
Parking Brake	7008	7-12540
NOTE: For parking brake and brake pedal adjustments, see Section 9001.		
Hydraulics		Tab 8
Section Index - Hydraulics		7-12550
Removal and Installation of Hydraulic Components	8001	7-12571
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	7-12581
Cleaning the Hydraulic System	8003	7-49640
Hydraulic Pump	8004	7-12601
Loader Control Valve	8005	7-12611
Cylinders	8006	7-12620
Coupler Lock Valve	8007	7-12630
Remote Control Valves	8010	7-12640
Combination Valve	8011	7-12650
Accumulator for Ride Control	8013	7-13471
Solenoid Valve and Accumulator Valve for Ride Control	8014	7-13480

621C/721C Loaders Service Manual

Table of Contents

Description	Section No.	Form No.
Mounted Equipment		
	Tab 9	
Section Index - Mounted Equipment		7-12660
Pedals and Levers	9001	7-12670
Air Conditioning Troubleshooting and System Checks For Systems with HFC-134a Refrigerant	9002	7-14150
Air Conditioner System Service	9003	7-14160
Removal and Installation of Air Conditioning Components For Systems with HFC-134a Refrigerant	9004	7-14170
Air Conditioning Compressor and Clutch For Systems with HFC-134a Refrigerant	9005	7-14180
Loader	9006	7-12680
ROPS Cab and ROPS Canopy	9007	7-12690
Cab Glass Installation	9010	7-14290
621C - Hydraulic Schematic Foldout and Electrical Schematic Foldout	In Rear Pocket	7-12721
721C - Hydraulic Schematic Foldout and Electrical Schematic Foldout	In Rear Pocket	7-12731

NOTE: Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

Section 1001

STANDARD TORQUE SPECIFICATIONS

CASE CORPORATION
700 State Street
Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION
3350 South Service Road
Burlington, ON L7N 3M6 CANADA

Rac 8-71601

© 1994 Case Corporation
Printed in U.S.A.
Issued November, 1991

TABLE OF CONTENTS

TORQUE SPECIFICATIONS - DECIMAL HARDWARE 2


TORQUE SPECIFICATIONS - METRIC HARDWARE 3


TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS 4

TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS 5

TORQUE SPECIFICATIONS - DECIMAL HARDWARE

Use the torques in this chart when special torques are not given. These torques apply to fasteners with both UNC and UNF threads as received from suppliers dry, or when lubricated with engine oil. Not applicable if special graphities, Molydisulfide greases, or other extreme pressure lubricants are used.

Grade 5 Bolts, Nuts, and Studs		
		
Size	Pound-Inches	Newton metres
1/4 inch	108 to 132	12 to 15
5/16 inch	204 to 252	23 to 28
3/8 inch	420 to 504	48 to 57
Size	Pound-Feet	Newton metres
7/16 inch	54 to 64	73 to 87
1/2 inch	80 to 96	109 to 130
9/16 inch	110 to 132	149 to 179
5/8 inch	150 to 180	203 to 244
3/4 inch	270 to 324	366 to 439
7/8 inch	400 to 480	542 to 651
1.0 inch	580 to 696	787 to 944
1-1/8 inch	800 to 880	1085 to 1193
1-1/4 inch	1120 to 1240	1519 to 1681
1-3/8 inch	1460 to 1680	1980 to 2278
1-1/2 inch	1940 to 2200	2631 to 2983

Grade 8 Bolts, Nuts, and Studs		
		
Size	Pound-Inches	Newton metres
1/4 inch	144 to 180	16 to 20
5/16 inch	288 to 348	33 to 39
3/8 inch	540 to 648	61 to 73
Size	Pound-Feet	Newton metres
7/16 inch	70 to 84	95 to 114
1/2 inch	110 to 132	149 to 179
9/16 inch	160 to 192	217 to 260
5/8 inch	220 to 264	298 to 358
3/4 inch	380 to 456	515 to 618
7/8 inch	600 to 720	814 to 976
1.0 inch	900 to 1080	1220 to 1465
1-1/8 inch	1280 to 1440	1736 to 1953
1-1/4 inch	1820 to 2000	2468 to 2712
1-3/8 inch	2380 to 2720	3227 to 3688
1-1/2 inch	3160 to 3560	4285 to 4827

NOTE: Use thick nuts with Grade 8 bolts.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com