

**621G**  
**721G**  
**Tier 4B (final)**  
Wheel Loader

**SERVICE MANUAL**

**Part number 51428265**  
2<sup>nd</sup> edition English  
December 2017





## **SERVICE MANUAL**

**621G WHEEL LOADER XR-EH, NEW CAB TIER4B NA, 621G WHEEL LOADER XT-EH, NEW CAB TIER4B NA, 621G WHEEL LOADER ZBAR-EH, NEW CAB TIER4B NA, 721G WHEEL LOADER XR-EH, NEW CAB TIER4B NA, 721G WHEEL LOADER XT-EH, NEW CAB TIER4B NA, 721G WHEEL LOADER ZBAR-EH, NEW CAB TIER4B NA**

# Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
621G WHEEL LOADER ZBAR-EH, NEW CAB TIER4B NA	North America	F4HFE613W*B002
621G WHEEL LOADER XT-EH, NEW CAB TIER4B NA	North America	F4HFE613W*B002
621G WHEEL LOADER XR-EH, NEW CAB TIER4B NA	North America	F4HFE613W*B002
721G WHEEL LOADER ZBAR-EH, NEW CAB TIER4B NA	North America	F4HFE613T*B001
721G WHEEL LOADER XT-EH, NEW CAB TIER4B NA	North America	F4HFE613T*B001
721G WHEEL LOADER XR-EH, NEW CAB TIER4B NA	North America	F4HFE613T*B001

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.202] Air cleaners and lines .....	10.2
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment .....	10.3
[10.400] Engine cooling system .....	10.4
[10.414] Fan and drive .....	10.5
[10.310] Aftercooler.....	10.6
[10.304] Engine lubrication system.....	10.7
<b>Transmission</b> .....	<b>21</b>
[21.113] Powershift transmission .....	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.105] Powershift transmission hydraulic components .....	21.3
[21.155] Powershift transmission internal components.....	21.4
[21.109] Transmission cooler and lines.....	21.5
[21.700] Torque converter .....	21.6
[21.182] Differential.....	21.7
<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.314] Drive shaft.....	23.1
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
<b>Rear axle system</b> .....	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential .....	27.2

[27.120] Planetary and final drives .....	27.3
<b>Brakes and controls .....</b>	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.106] Variable displacement pump .....	35.3
[35.359] Main control valve .....	35.4
[35.357] Pilot system .....	35.5
[35.204] Remote control valves .....	35.6
[35.752] Hydraulic fan drive cooling system.....	35.7
[35.820] Hydraulic driven cooling fans .....	35.8
[35.355] Hydraulic hand control .....	35.9
[35.701] Front loader arm hydraulic system .....	35.10
[35.723] Front loader bucket hydraulic system .....	35.11
[35.734] Tool quick coupler hydraulic system .....	35.12
<b>Frames and ballasting .....</b>	<b>39</b>
[39.100] Frame .....	39.1
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.200] Hydraulic control components.....	41.2
[41.216] Cylinders .....	41.3
[41.910] Auxiliary steering .....	41.4
<b>Wheels .....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
<b>Cab climate control .....</b>	<b>50</b>

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)