



1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

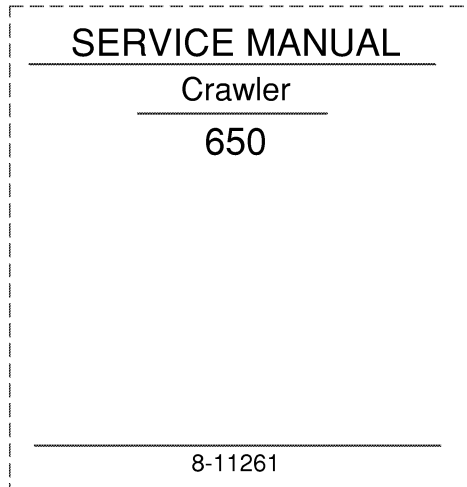


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

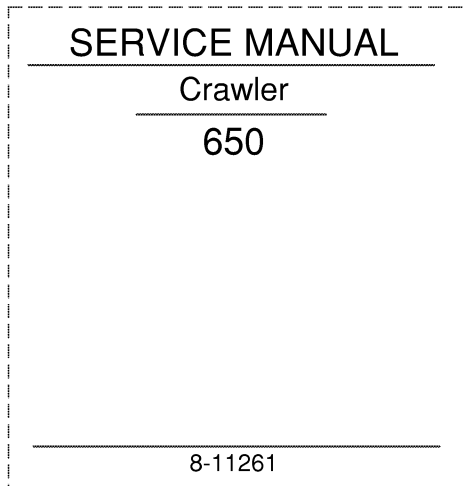

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

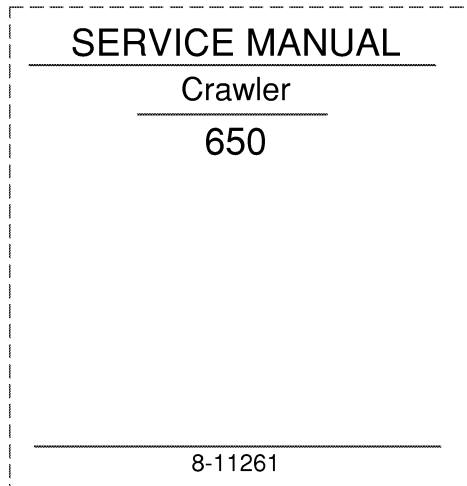

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

650 Crawler  
Service Manual

Table of Contents

Description	Section No	Form No.
<b>General</b>	<b>Tab 1</b>	
<b>Section Index - General</b> .....		<b>8-14420</b>
Standard Torque Specifications... ..	1001	8-71600
<b>Fluids and Lubricants</b> .....	<b>1002</b>	<b>8-14430</b>
<b>Engine</b>	<b>Tab 2</b>	
<b>Section Index - Engine</b> .....		<b>8-14440</b>
Engine Stall Tests .. ..	2000	8-14450
<b>Engine Removal and Installation and Radiator</b>		
<b>Removal and Installation</b> .....	<b>2001</b>	<b>8-14460</b>
Specification Details.....	2402	8-24163
<b>Cylinder Head and Valve Train</b> .....	<b>2415</b>	<b>8-24173</b>
Cylinder Block .. ..	2425	8-24183
<b>Lubrication System</b> .....	<b>2445</b>	<b>8-24193</b>
Cooling System .. ..	2455	8-24203
<b>Turbocharger</b> .....	<b>2465</b>	<b>8-25550</b>
Turbocharger Failure Analysis .. ..	2565	9-78235
<b>Fuel System</b>	<b>Tab 3</b>	
<b>Section Index - Fuel System</b> .....		<b>8-14470</b>
Fuel System and Filters .. .	3410	8-24212
<b>Fuel Injection Pump and Drive Gear</b> .....	<b>3415</b>	<b>7-37141</b>
Fuel Injectors .. ..	3413	8-24233
<b>Electrical</b>	<b>Tab 4</b>	
<b>Section Index - Electrical</b> .....		<b>8-14480</b>
Removal and Installation of Electrical Components.....	4001	8-14490
<b>Electrical Specifications, Troubleshooting and Schematic</b> .....	<b>4002</b>	<b>8-14800</b>
Batteries .. .	4003	8-11360
Instrument Panel and Gauges .....	4004	8-14510
<b>Starter and Starter Solenoid</b> .....	<b>4006</b>	<b>8-72280</b>
Alternator .. ..	4019	8-12901
<b>Track</b>	<b>Tab 5</b>	
<b>Section Index - Track</b> .....		<b>8-14520</b>
Inspection of Track System Components .....	5501	8-14950
<b>Case Lubricated Track</b> .....	<b>5504</b>	<b>8-14530</b>
Sealed Track and Track Frame .....	5506	8-14540
<b>Idler, Track Adjuster and Recoil Housing</b> .....	<b>5508</b>	<b>8-14550</b>
Sprocket .....	5509	8-14560
<b>Carrier Roller</b> .....	<b>5510</b>	<b>8-14570</b>
Track Roller .....	5511	8-14580

**Reprinted**

650 Crawler  
Service Manual  
Table of Contents

Description	Section No.	Form No.
<b>Power Train</b>	<b>Tab 6</b>	
<b>Section Index - Power Train</b> .....		<b>8-14590</b>
Specifications, Schematic and Troubleshooting .....	6002	8-14600
<b>Torque Converter and Torque Converter Housing</b> .....	<b>6006</b>	<b>8-14610</b>
Transmissin Control Valve .....	6007	8-13811
<b>Modulator Valve</b> .....	<b>6008</b>	<b>8-14620</b>
Transmission .....	6016	8-14630
<b>Final Drive</b> .....	<b>6017</b>	<b>8-14640</b>
 <b>Brakes</b>	 <b>Tab 7</b>	
<b>Section Index - Brakes</b> .....		<b>8-14650</b>
Removal and Installation of Master Cylinder, and Removing <b>Air from the Brake System</b> .....	<b>7001</b>	<b>8-14660</b>
Master Cylinder .....	7002	8-14670
<b>Brakes</b> .....	<b>7003</b>	<b>8-14680</b>
 <b>Hydraulics</b>	 <b>Tab 8</b>	
<b>Section Index - Hydraulics</b> .....		<b>8-14690</b>
Removal and Installation of Hydraulic Components .....	8001	8-14920
<b>Specifications, Troubleshooting and Schematics</b> .....	<b>8002</b>	<b>8-14700</b>
Cleaning the Hydraulic System.....	8003	8-14710
<b>Equipment Pump</b> .....	<b>8005</b>	<b>8-14720</b>
Equipment Control Valve .....	8007	8-14730
<b>Cylinders</b> .....	<b>8008</b>	<b>8-14741</b>
 <b>Mounted Equipment</b>	 <b>Tab 9</b>	
<b>Section Index - Mounted Equipment</b> .....		<b>8-14750</b>
Pedals and Levers .....	9001	8-14760
<b>Blade</b> .....	<b>9002</b>	<b>8-14770</b>
Ripper .....	9031	8-14780
<b>ROPS Cab and Canopy</b> .....	<b>9061</b>	<b>8-14790</b>
Suspension Seat .....	9065	8-14910

# 1001


## STANDARD TORQUE SPECIFICATIONS


### TABLE OF CONTENTS

<b>Torque Specifications - Decimal Hardware</b> .....	1001-2	<b>Torque Specifications - Steel Hydraulic Fittings</b> .....	1001-4
<b>Torque Specifications - Metric Hardware</b> ...	1001-3	<b>Torque Specifications - O-ring Face Seal Fittings</b> .....	1001-5

## TORQUE SPECIFICATIONS - DECIMAL HARDWARE

Use the torques in this chart when special torques are not given. These torques apply to fasteners with both UNC and UNF threads as received from suppliers, dry, or when lubricated with engine oil. Not applicable if special graphites, molydisulfide greases, or other extreme pressure lubricants are used.

Grade 5 Bolts, Nuts, and Studs		
		
Size	Pound-Feet	Newton metres
1/4 in	9-11	12-15
5/16 in	17-21	23-28
3/8 in	35-42	48-57
7/16 in	54-64	73-87
1/2 in	80-96	109-130
9/16 in	110-132	149-179
5/8 in	150-180	203-244
3/4 in	270-324	366-439
7/8 in	400-480	542-651
1.0 in	580-696	787-944
1-1/8 in	800-880	1085-1193
1-1/4 in	1120-1240	1519-1681
1-3/8 in	1460-1680	1980-2278
1-1/2 in	1940-2200	2631-2983

Grade 8 Bolts, Nuts, and Studs		
		
Size	Pound-Feet	Newton metres
1/4 in	12-15	16-20
5/16 in	24-29	33-39
3/8 in	45-54	61-73
7/16 in	70-84	95-114
1/2 in	110-132	149-179
9/16 in	160-192	217-260
5/8 in	220-264	298-358
3/4 in	380-456	515-618
7/8 in	600-720	814-976
1.0 in	900-1080	1220-1465
1-1/8 in	1280-1440	1736-1953
1-1/4 in	1820-2000	2468-2712
1-3/8 in	2380-2720	3227-3688
1-1/2 in	3160-3560	4285-4827

**NOTE:** Use thick nuts with Grade 8 bolts.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)