

# 688C Excavator

## Table of Contents

DIVISION/SECTION	SECTION NO.	FORM-NO
<b>1 GENERAL</b>		
Sectional Index		7-32410
Safety, General Information and Torque Specifications.....	1001 *	8-86530
Specifications.....	1002	7-32351
<b>2 ENGINE</b>		
Sectional Index		7-32420
Engine Removal and Installation.....	2000	8-89000
Radiator and Oil Cooler.....	2001	8-89010
Specifications Details.....	2402	8-24163
Cylinder Head and Valve Train.....	2415	8-24173
Cylinder Block.....	2425	8-24183
Lubrication System.....	2445	8-24193
Cooling System.....	2455	8-24203
Turbocharger.....	2465	8-25550
Turbocharger Failure Analysis.....	2565	9-78235
<b>3 FUEL SYSTEM</b>		
Sectional Index		7-32430
Fuel System and Filters.....	3410	8-24212
Fuel Injection Pump and Drive Gear.....	3412	8-27080
Fuel Injectors.....	3413	8-24233
<b>4 ELECTRICAL</b>		
Sectional Index		7-32440
Electrical Schematics and Troubleshooting.....	4001 *	8-89021
Battery Testing, Maintenance and Booster Battery Connections.....	4002	7-32080
Starter Motor.....	4003	8-89040
Alternator.....	4004	8-89050
<b>5 TRACK</b>		
Sectional Index		7-32470
Tracks, Rollers and Idlers.....	5002	7-32130
Track Troubleshooting.....	5502	7-33730
<b>6 POWER TRAIN</b>		
Sectional Index		7-32450
Drive Motor and Final Drive Transmission.....	6002	7-32290
Swing Motor and Reduction Gears.....	6003	7-32230

\* Schematic Set Sections

THIS TABLE OF CONTENTS REPLACES LEP 8-88992

DIVISION/SECTION	SECTION NO.	FORM-NO
<b>8 HYDRAULICS</b>		
Sectional Index		7-32461
Hydraulic Troubleshooting.....	8001 *	8-89093
Low Pressure Pump.....	8002	8-89100
High Pressure Pump and Regulator.....	8003	8-89110
Attachment Valve Bank.....	8004	8-89130
Drive Control Valve.....	8005	7-32120
Option Control Valve.....	8006	7-32150
Counter Rotation Valve.....	8007	8-89150
Swing Brake Release Valve.....	8008	7-32170
Swing Control Valve.....	8009	7-32250
Anti-surge Valve.....	8010	8-89160
Hydraulic Swivel.....	8011	7-32110
Drive Speed Limiter.....	8012	8-89200
Drive Brake Release Valve.....	8013	7-32190
Hand and Foot Control Valve.....	8015	8-89170
Hydraulic Oil Tank.....	8016	8-89080
Attachment Cylinders.....	8018	7-33600
Hydraulic Pick Hammer Control Valve.....	8222	7-34230
<b>9 MOUNTED EQUIPMENT</b>		
Sectional Index		7-32471
Upperstructure and Turntable Bearing.....	9001	8-89140
Boom, Dipper and Bucket.....	9002	7-32620
Servicing the Cab.....	9004	7-32060

\* Schematic Set Sections

## Sectional Index

	SECTION NO.
<b>1 GENERAL</b>	
<b>C Capacities</b> .....	1002
<b>D Dimensions</b> .....	1002
Drawbar Pull .....	1002
Drive Speed .....	1002
<b>E Electrical System Specifications</b> .....	1002
Engine Cooling System Specifications .....	1002
Engine Lubricant Specifications .....	1002
Engine Lubricating System Specifications .....	1002
Engine Special Torques .....	1002
Engine Specifications .....	1002
<b>F Fluids and Lubricants Specifications</b> .....	1002
Fuel Specifications .....	1002
Fuel System Specifications .....	1002
<b>G General Dimensions</b> .....	1002
General Information .....	1001
<b>H Hydraulic Systems Specifications</b> .....	1002
<b>R Run-in Instructions</b> .....	1002
<b>S Safety Warnings</b> .....	1001
<b>T Torque Data</b>	
Engine Special Torques .....	1002
Hydraulic Fittings Special Torques .....	1001
Standard Nut and Bolt Torques .....	1001
Track, Rollers and Idlers Specifications .....	1002
Transport Dimensions .....	1002
<b>W Weights</b> .....	1002

## Sectional Index

		SECTION NO.
<b>2</b>	<b>ENGINE</b>	
<b>B</b>	Bearings .....	2425
	Belt Tensioner .....	2455
<b>C</b>	Camshaft .....	2425
	Cooling System (Engine)	
	Air Removal .....	2001
	Cleaning and Maintenance .....	2455
	Radiator .....	2001
	Specifications .....	2001
	Cooling System (Hydraulic Oil)	
	Oil Cooler .....	2001
	Crankcase Pressure Check (Blow By) .....	2425
	Crankshaft .....	2425
	Cylinder Block .....	2425
	Cylinder Head .....	2415
<b>E</b>	Engine	
	Installation .....	2000
	Removal .....	2000
	Engine to Pump Drive Assembly .....	2000
	Expansion Plug Replacement	
	Cylinder Block .....	2425
	Cylinder Head .....	2415
<b>F</b>	Fan Pulley .....	2455
	Flywheel .....	2425
<b>L</b>	Lubrication System .....	2445
<b>O</b>	Oil Cooler (Engine Oil) .....	2445
	Oil Cooler (Hydraulic Oil) .....	2001
	Oil Filter Housing .....	2445
	Oil Pan .....	2445
	Oil Pressure Relief Valve .....	2445
	Oil Pump .....	2445
	Oil Seals .....	2425
<b>P</b>	Pistons .....	2425
<b>R</b>	Radiator .....	2001
	Rocker Arms .....	2415
	Rods .....	2425
<b>S</b>	Sleeves .....	2425

SECTION NO.

T	Thermostat .....	2455
	Top Dead Centre (How to Locate) .....	2415
	Turbocharger .....	2465
	Turbocharger Failure Analysis .....	2565
V	Valve Guide Replacement .....	2415
	Valves	
	Intake and Exhaust .....	2415
	Dye Pattern Analysis .....	2415
	Valve Seats .....	2415
	Valve Train .....	2415
W	Water Pump .....	2455

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)