

**Service
Manual
750
Crawler**

9-72152

**Service
Manual
750
Crawler**

9-72152

All Binders
4.75 in



Large Binder
2.85 in

Small Binder
1.63 in

TABLE OF CONTENTS

SECTION

PAGE

BASIC TRACTOR AND COMPONENTS

1. GENERAL DESCRIPTION	1
2. SPECIFICATIONS	
General Dimensions and Weights	4
Engine	6
Torque Converter	7
Capacities	7
Tractor Steering	8
Tractor Speeds	8
Illustrated Dimensions	9
Fuel Specifications	11
Fuel Storage	11
Lubrication	13
Serial Numbers	20
3. INSTRUMENTS	23
4. COOLING SYSTEM	
General Description	25
General Maintenance	26
Thermostat	26
Draining and Filling	27
Cleaning	27
Radiator and Shroud	28
Water Pump	31
Fan and Fan Belts	33
5. ELECTRICAL SYSTEM	
General Description	34
Circuits	35
Batteries	36
Starter	40
Generator	45
Voltage Regulator	49
Lights	55
6. ENGINE AIR INTAKE SYSTEM	
Air Cleaner Cap	56
Air Cleaner	56
Air Pre-Cleaner	58
7. ENGINE, TRACK, AND EQUIPMENT CONTROLS	
Hand and Foot Throttle	59
Control Levers and Linkage	62
8. TORSION BAR AND SUSPENSION SYSTEM	
General Description	64
Disassembly	64
Assembly	66

9. TRACK SYSTEM	
Chains	68
Track Rollers	72
Support Rollers	74
Front Idler	77
Track Adjuster	78
Recoil Assembly	81
Frame	82
10. TORQUE CONVERTER	
General Description	83
Removal	86
Disassembly	86
Assembly	91
Installation	92
Charging Pump	93
11. TRANSMISSION AND FINAL DRIVE	
Specifications	99
Special Tools	99
Transmission	100
Forward-Reverse Shaft Assembly	102
High-Low Shaft Assembly	104
Pinion Shaft Assembly	106
Final Drive	108
Pinion Sleeve and Carrier	110
Control Valve	112
Installing Transmission Subassemblies	114
Setting the Pinion Shaft	116
Brakes	118
Master Cylinder	121
12. MISCELLANEOUS TRACTOR COMPONENTS	
Rear Counterweight	122
Front Counterweight	122
Seat and Tank Assembly	123
Drawbar	124
Frame - Cowl - Hood	125
Mud Pans	126
13. HYDRAULIC SYSTEM	
Description	127
Filters	128
Primary Circuit	129
Loader Circuit	131
Dozer Circuits	132
Ripper Circuit	134
Backhoe Circuit	135
Pump	137
Control Valves	143
Diverter Valve	160
Relief Valve Pressure Settings	161
Checking and Adjusting Relief Valves	161
Checking and Adjusting Secondary Relief Valves	163
Cylinders	168
Trouble Shooting Chart	175

14. ALLIED EQUIPMENT	
Loader	181
Tilt-Crown Dozer	185
Angle Dozer	187
Ripper	189
Backhoe	190
15. GENERAL SERVICE INFORMATION	
Bearings	197
Bushings	198
Oil Seals	198
Gears	198
Shafts and Splines	198
Shifting Forks	199
Gaskets - Wiring - Hoses	199
Batteries - Filters - Radiator	200

MODEL A-267D DIESEL ENGINE

C. ENGINE SPECIFICATIONS	C-1
I. SERVICING FUEL INJECTORS, CASE POWRCEL, FUEL INJECTION PUMP	
Fuel Injectors	I-5
Case Powrcel	I-26
Fuel Injection	I-33
K. CYLINDER HEADS, VALVE SYSTEMS, ROCKER ARMS, DECOMPRESSOR ..	K2-K15
M. ENGINE BLOCK	
Lubricating System	M-4
Pistons, Rods, Sleeves	M-16
Crankshaft, Main Bearings, Flywheel	M-30
Camshaft, Lifters	M-38
Fuel Injection Pump Drive	M-42



**be careful.....
avoid accidents**



Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com