780D Loader Backhoe Service Manual

Table of Contents

Description General	Section No. Tab 1	Form No.
Section Index - General		8-72830
Torque Specifications	1001	8-71600
Fluids and Lubricants	1002	8-72841
Loctite Product Chart		8-98900
Engines	Tab 2	
Section Index - Engines		8-72850
Engine Removal and Installation	2001	8-72861
Engine Stall Tests	2002	8-73310
Detailed Engine Specifications	2401	8-26063
Cylinder Head and Valve Train	2415	8-26073
Cylinder Block	2425	8-26084
Lubrication System	2445	8-26093
Cooling System	2455	8-26103
Turbocharger	2465	8-26110
Turbocharger Failure Analysis	2565	9-78235
		ب
Fuel System	Tab 3	
Section Index - Fuel System		8-72870
Fuel System and Filters	3410	8-26131
Fuel Injection Pump - CAV	3411	8-97711
Fuel Injection Pump - Bosch	3412	8-26143
Fuel Injectors	3413	8-26152
Electrical	Tab 4	
Section Index - Electrical		8-72880
Specifications, Schematic,	4004	0 70000
Troubleshooting, and Booster Batteries	4001	8-72892
Starter and Starter Solenoid	4002	8-72900
Batteries	4004	8-71701
Instrument Cluster	4005	8-72921 8-15670
65 Ampere Alternator A187873	4007	
65 Ampere Alternator A186125	4019	8-12902
Steering	Tab 5	
Section Index - Steering	Tab 5	8-72930
Removal and Installation of Steering Com	ponts 5000	8-10370
Specifications, Troubleshooting, and Pres		8-72940
Steering Pump	5002 5001	8-72950
Steering Control Valve	5002	8-72960
Steering Cylinder Repair	5003	8-72970
Flow Control Valve	5005	8-72980
Front Axle - Two Wheel Drive	5006	8-72990
Front Axle - Four Wheel Drive	5007	8-73001
	0007	0-10001

Section Index - Power Train 8-73010 Transmission Repair 6001 8-73020 Iransmission Repair 6002 8-73031 Differential and Planetary Repair 6003 8-73041 Wheels and Tres 6004 8-73050 Clutch Cutout Valve 6005 8-73100 Brakes Tab 7 8 Section Index - Brakes 8-73060 8-10380 Specifications and Troubleshooting 7001 8-73070 Brakes 7002 8-73080 Brake Master Cylinder 7002 8-73080 Brake Valve 7003 8-73090 Brake Valve 7005 8-73111 Parking Brake and Actuator 7006 8-73120 Selector Valve 7007 8-74630 Hydraulics Tab 8 8 Section Index - Hydraulics 8-73130 Removal and Installation of Hydraulic Components 8000 8-73150 Pump Repair 8003 8-73160 8-73160 Loader Control Valve Repair 8004 8-73170 Backhoe Control Valve Repair 8005 8-73180 <th>Devuer Trein</th> <th>Description</th> <th>Section No. Tab 6</th> <th>Form No.</th>	Devuer Trein	Description	Section No. Tab 6	Form No.
Transmission Specifications and Troubleshooting 6001 8-73020 Transmission Repair 6002 8-73031 Uheels and Tires 6003 8-73041 Wheels and Tires 6004 8-73050 Clutch Cutout Valve 6005 8-73100 Brakes Tab 7 Section Index - Brakes 8-73060 Removal and Installation of Brake Components 7001 8-73080 Specifications and Troubleshooting 7001 8-73080 Brakes 7002 8-73080 Brake Master Cylinder 7002 8-73080 Brake Valve 7005 8-73111 Parking Brake and Actuator 7006 8-73120 Selector Valve 7007 8-74630 Hydraulics Tab 8 8 Section Index - Hydraulics 8-73130 Removal and Installation of Hydraulic Components 8000 8-73140 Pump Repair 8003 8-73150 Loader Control Valve Repair 8003 8-73150 Loader Control Valve Repair 8005 8-73140 <td>Power Train</td> <td></td> <td>Tab 6</td> <td>0 70010</td>	Power Train		Tab 6	0 70010
Transmission Repair60028-73031Differential and Planetary Repair60038-73041Wheels and Tires60048-73050Clutch Cutout Valve60058-73100BrakesTab 7Section Index - Brakes8-73060Removal and Installation of Brake Components70008-10380Specifications and Troubleshooting70018-73070Brake Master Cylinder70028-73080Brakes70058-73111Parking Brake and Actuator70068-73120Selector Valve70078-74630HydraulicsTab 8Section Index - Hydraulics80008-10400Section Index - Hydraulics80008-10400Specifications, Schematic,70078-73130Troubleshooting and Pressure Checks80018-73170Backhoe Control Valve Repair80038-73160Loader Control Valve Repair80038-73180Backhoe Control Valve Repair80068-73180Backhoe Control Valve Repair80088-73220Boom Lock80088-73221Cylinders80098-73220Boom Lock80098-73221Mounted Equipment7ab 9Section Index - Mouted Equipment8003Pedals and Levers9000Pools And ROPS Canopy9003Section Index - Mouted Equipment8-73230Doom Lock9004Section Index - Mouted Equipment8-73230Section Index - Mouted Equipment <td< td=""><td></td><td></td><td>C001</td><td></td></td<>			C001	
Differential and Planetary Repair 6003 8-73041 Wheels and Tires 6004 8-73050 Clutch Cutout Valve 6005 8-73100 Brakes Tab 7 Section Index - Brakes 8-73060 Removal and Installation of Brake Components 7000 8-10380 Specifications and Troubleshooting 7001 8-73060 Brake Master Cylinder 7002 8-73080 Brakes 7003 8-73090 Brakes 7005 8-731120 Brakes 7005 8-731120 Selector Valve 7007 8-74630 Hydraulics Tab 8 Section Index - Hydraulic Components 8000 8-10400 Specifications, Schematic, Troubleshooting and Pressure Checks 8001 8-73130 Removal and Installation of Hydraulic Components 8002 8-73150 Pump Repair 8003 8-73141 Cleaning the Hydraulic System 8002 8-73150 Pump Repair 8004 8-73150 8004 8-73150 Pump Repair 8003 </td <td></td> <td></td> <td></td> <td></td>				
Wheels and Tires60048-73050Clutch Cutout Valve60058-73100BrakesTab 7Section Index - Hydraulic System70008-10380Specifications and Troubleshooting70018-73070Brake Valve70028-73080Brake Valve70038-73080Brakes70058-73111Parking Brake and Actuator70068-73120Selector Valve70078-74630HydraulicsTab 8Section Index - Hydraulic Components80008-10400Specifications, Schematic,70078-73130Iroubleshooting and Pressure Checks80018-73141Cleaning the Hydraulic System80028-73150Pump Repair80038-73160Loader Control Valve Repair80068-73190Backhoe Relief Valve Repair80068-73190Boom Lock80088-73200Boom Lock80098-73222Mounted EquipmentTab 9Section Index - Mounted Equipment8-73230Pedals and Levers90008-74721Air Conditioning Troubleshooting and Pressure Checks90018-73230Pedals and Levers90038-18930Discharging and Charging the Air Conditioning System90028-18920Compressor and Clutch90048-73270Discharging and Charging the Air Conditioning System90038-18930Loader90048-732708-73280Satandard Seat90068-73280				
Clutch Cutout Valve 6005 8-73100 Brakes Tab 7 Section Index - Brakes 8-73060 Removal and Installation of Brake Components 7000 8-10380 Specifications and Troubleshooting 7001 8-73070 Brake Master Cylinder 7002 8-73080 Brake Valve 7003 8-73090 Brake Valve 7005 8-73111 Parking Brake and Actuator 7006 8-73120 Selector Valve 7007 8-74630 Hydraulics Tab 8 Section Index - Hydraulics Components 8000 8-10400 Specifications, Schematic, Troubleshooting and Pressure Checks 8001 8-73160 Loader Control Valve Repair 8003 8-73160 1002 8-73170 Backhoe Relief Valve Repair 8004 8-73170 Backhoe Relief Valve Repair 8005 8-73180 Backhoe Control Valve Repair 8005 8-73180 8004 8-73170 Backhoe Relief Valve Repair 8005 8-73180 8004 8-73170 Backhoe Control Valve 8006 8-73180 8006 8-73180				
Brakes Tab 7 Section Index - Brakes 8-7306 0 Removal and Installation of Brake Components 7000 8-10380 Specifications and Troubleshooting 7001 8-73080 Brake Master Cylinder 7002 8-73080 Brake Valve 7003 8-73090 Brakes 7005 8-73111 Parking Brake and Actuator 7006 8-73120 Selector Valve 7007 8-74630 Hydraulics Tab 8 8 Section Index - Hydraulics 8000 8-10400 Specifications, Schematic, 1 1 1 Troubleshooting and Pressure Checks 8001 8-73140 Cleaning the Hydraulic System 8002 8-73150 Pump Repair 8003 8-73180 Backhoe Relief Valve Repair 8006 8-73180 Backhoe Relief Valve Repair 8006 8-73190 Boom Lock 8009 8-73220 Boom Lock 8008 8-73211 Cylinders 8009 8-73220 Boom Lock 8009 8-73230 Peda				
Section Index - Brakes8-73060Removal and Installation of Brake Components70008-10380Specifications and Troubleshooting70018-73070Brake Master Cylinder70028-73080Brake Valve70038-73090Brakes70058-73111Parking Brake and Actuator70068-73120Selector Valve70078-74630HydraulicsTab 8Section Index - Hydraulics8-73130Brenoval and Installation of Hydraulic Components80008-10400Specifications, Schematic,Troubleshooting and Pressure Checks80018-73141Cleaning the Hydraulic System80028-73150Pump Repair80038-73170Backhoe Control Valve Repair80048-73170Backhoe Control Valve Repair80068-73190Stabilizer Control Valve80078-73220Boom Lock80098-73221Mounted EquipmentTab 9Section Index - Mounted Equipment8009R-7322080098-73220Boom Lock90018-18910Discharging and Charging the Air Conditioning System9002B-18920Compressor and Clutch9003Compressor and Clutch90058-73280Standard Seat90068-73280Suspension Seat and Seat Belt90078-73300	Clutch Cutout Val	Ve	6005	8-73100
Removal and Installation of Brake Components70008-10380Specifications and Troubleshooting70018-73070Brake Master Cylinder70028-73080Brake Valve70038-73090Brakes70058-73111Parking Brake and Actuator70068-73120Selector Valve70078-74630HydraulicsTab 8Section Index - Hydraulics80008-10400Specifications, Schematic,70028-73130Troubleshooting and Pressure Checks80018-73141Cleaning the Hydraulic System80028-73150Pump Repair80038-73160Loader Control Valve Repair80058-73180Backhoe Relief Valve Repair80058-73180Backhoe Control Valve80078-73200Boom Lock80088-73211Cylinders80098-73220Boom Lock80088-73211Cylinders90008-74721Air Conditioning Troubleshooting and Pressure Checks90018-18810Discharging and Charging the Air Conditioning System90028-18920Compressor and Clutch90038-18930LoaderPools Cab and ROPS Canopy90058-73280Standard Seat90068-73290Suspension Seat and Seat Belt90078-73300			Tab 7	
Specifications and Troubleshooting70018-73070Brake Master Cylinder70028-73080Brake Valve70038-73090Brakes70058-73111Parking Brake and Actuator70068-73120Selector Valve70078-74630HydraulicsTab 8Section Index - Hydraulics80008-10400Specifications, Schematic,80018-73141Cleaning the Hydraulic System80028-73150Pump Repair80038-73160Loader Control Valve Repair80038-73160Loader Control Valve Repair80058-73180Backhoe Relief Valve Repair80068-73190Stabilizer Control Valve80068-73200Boom Lock80088-73211Cylinders80098-73222Mounted EquipmentTab 9Section Index - Mounted Equipment8009Pedals and Levers90008-74721Air Conditioning Troubleshooting and Pressure Checks9001Bashape and Levers9001Air Conditioning And Pressure Checks9001Bashape and Levers9004Air Conditioning And Pressure Checks9001Bashape and Levers9004Bashape and Levers9004Bashape and Levers9005Bashape and ROPS Canopy9005Standard Seat9006Bashape and ROPS Canopy9005Standard Seat9006Bashape and Rops Canopy9005Bashape and Rops Can				
Brake Master Cylinder70028-73080Brake Valve70038-73090Brakes70058-73111Parking Brake and Actuator70068-73120Selector Valve70078-74630HydraulicsTab 8Section Index - Hydraulics8-73130Removal and Installation of Hydraulic Components80008-10400Specifications, Schematic,70078-73141Toubleshooting and Pressure Checks80018-73141Cleaning the Hydraulic System80028-73150Pump Repair80038-73160Loader Control Valve Repair80058-73180Backhoe Rellef Valve Repair80058-73180Backhoe Control Valve80078-73211Oylinders80088-73211Cylinders80098-73221Mounted EquipmentTab 9Section Index - Mounted Equipment8009Pedals and Levers90008-74221Air Conditioning Troubleshooting and Pressure Checks9018-18910Discharging and Charging the Air Conditioning System90028-18920Compressor and Clutch90038-18930Loader90048-73270ROPS Cab and ROPS Canopy90058-73280Standard Seat90068-73290Suspension Seat and Seat Belt90078-73300		· · · · · · · · · · · · · · · · · · ·		
Brake Valve70038-73090Brakes70058-73111Parking Brake and Actuator70068-73120Selector Valve70078-74630HydraulicsTab 8Section Index - Hydraulics8-73130Removal and Installation of Hydraulic Components80008-10400Specifications, Schematic,Troubleshooting and Pressure Checks80018-73141Cleaning the Hydraulic System80028-731508-73160Loader Control Valve Repair80048-731708ackhoe Relief Valve Repair80058-73180Backhoe Relief Valve Repair80068-731908tabilizer Control Valve80068-73190Stabilizer Control Valve80078-7320080078-73200Boom Lock80088-73211Cylinders80098-73212Mounted EquipmentTab 980098-73222Mounted Equipment80038-742218-73230Pedals and Levers90008-7472190028-18910Discharging and Charging the Air Conditioning System90028-189202-73270ROPS Cab and ROPS Canopy90058-7328034-873280Standard Seat90068-732903-73280Standard Seat90068-732803-73280Standard Seat90068-732803-73280Standard Seat90068-732803-73280Standard Seat90068-732803-73280Standard Seat90068-73280Standa				
Brakes70058-73111Parking Brake and Actuator70068-73120Selector Valve70078-74630HydraulicsTab 8Section Index - Hydraulics80008-10400Specifications, Schematic,80008-10400Troubleshooting and Pressure Checks80018-73141Cleaning the Hydraulic System80028-73150Pump Repair80038-73170Backhoe Relief Valve Repair80048-73170Backhoe Control Valve Repair80068-73180Backhoe Control Valve80068-73180Backhoe Control Valve80078-73200Boom Lock80088-73211Cylinders80098-73222Mounted EquipmentTab 9Section Index - Mounted Equipment80098-73230Pedals and Levers90008-74721Air Conditioning Troubleshooting and Pressure Checks90018-18910Discharging and Charging the Air Conditioning System90028-18920Compressor and Clutch90038-18930Loader90048-73270Stabal Ard Seat90068-73280Standard Seat90068-73290Suspension Seat and Seat Belt90078-73280	Brake Master Cyl	inder		
Parking Brake and Actuator70068-73120Selector Valve70078-74630HydraulicsTab 8Section Index - Hydraulics8-73130Removal and Installation of Hydraulic Components8000Specifications, Schematic,1Troubleshooting and Pressure Checks8001Cleaning the Hydraulic System8002Pump Repair8003Backhoe Relief Valve Repair8005Backhoe Control Valve8006Backhoe Control Valve8006Backhoe Control Valve8007Backhoe Control Valve8008Backhoe Control Valve8007Backhoe Control Valve8007Backhoe Control Valve8008Backhoe Control Valve8007Backhoe Control Valve8007Backhoe Control Valve8008Backhoe Control Valve8008Boon Lock8008Cylinders8009Boon Lock9000Compressor and Charging the Air Conditioning System9002Pedals and Levers9004Boon Seat and Seat Belt9005Standard Seat9006Boon Seat and Seat Belt9007Boon Seat and Seat Belt9007Boon Seat and Seat Belt9007Boon Seat and Seat Belt9007	Brake Valve		7003	
Selector Valve70078-74630HydraulicsTab 8Section Index - Hydraulics8-73130Removal and Installation of Hydraulic Components80008-10400Specifications, Schematic,70078-73141Troubleshooting and Pressure Checks80018-73141Cleaning the Hydraulic System80028-73150Pump Repair80038-73160Loader Control Valve Repair80048-73170Backhoe Relief Valve Repair80058-73180Backhoe Control Valve80068-73190Stabilizer Control Valve80088-73211Cylinders80098-73222Mounted EquipmentTab 9Section Index - Mounted Equipment8-73230Pedals and Levers90008-74721Air Conditioning Troubleshooting and Pressure Checks90018-18910Discharging and Charging the Air Conditioning System90028-18920Compressor and Clutch90038-18930Loader90048-73270ROPS Cab and ROPS Canopy90058-73280Standard Seat90068-73290Suspension Seat and Seat Belt90078-73300	Brakes		7005	
HydraulicsTab 8Section Index - Hydraulics8-73130Removal and Installation of Hydraulic Components8000Specifications, Schematic,1Troubleshooting and Pressure Checks8001Pump Repair8002Loader Control Valve Repair8004Backhoe Relief Valve Repair8005Backhoe Control Valve8006Backhoe Control Valve8007Backhoe Control Valve8007Backhoe Control Valve8008Backhoe Control Valve8007Backhoe Control Valve8007Backhoe Control Valve8007Backhoe Control Valve8007Backhoe Control Valve8008Backhoe Control Valve8007Boom Lock8008Cylinders8009Boom Lock8008Cylinders8009Backhoe Charging the Air Conditioning System9002Bisharging and Charging the Air Conditioning System9002Boom Lock9003Compressor and Clutch9004Boader9004ROPS Cab and ROPS Canopy9005Standard Seat9006Standard Seat9006Backard9006Backard9006Backard9006Backard9006Backard9006Backard9006Backard9006Backard9006Backard9006Backard9006Backard9006Backard9006Backar	Parking Brake an	d Actuator	7006	8-73120
Section Index - Hydraulics8-73130Removal and Installation of Hydraulic Components80008-10400Specifications, Schematic,Troubleshooting and Pressure Checks80018-7314;1Cleaning the Hydraulic System80028-73150Pump Repair80038-73160Loader Control Valve Repair80048-73170Backhoe Relief Valve Repair80058-73180Backhoe Control Valve80068-73190Stabilizer Control Valve80078-73200Boom Lock80088-73211Cylinders80098-73222Mounted EquipmentTab 9Section Index - Mounted Equipment8-73230Pedals and Levers90008-74721Air Conditioning Troubleshooting and Pressure Checks90018-18910Discharging and Charging the Air Conditioning System90028-18920Compressor and Clutch90038-18930Loader90048-73270ROPS Cab and ROPS Canopy90058-73280Standard Seat90068-73290Suspension Seat and Seat Belt90078-73230	Selector Valve		7007	8-74630
Section Index - Hydraulics8-73130Removal and Installation of Hydraulic Components80008-10400Specifications, Schematic,Troubleshooting and Pressure Checks80018-7314i1Cleaning the Hydraulic System80028-73150Pump Repair80038-73160Loader Control Valve Repair80048-73170Backhoe Relief Valve Repair80058-73180Backhoe Control Valve80068-73190Stabilizer Control Valve80078-73200Boom Lock80088-73211Cylinders80098-73222Mounted EquipmentTab 9Section Index - Mounted Equipment80098-73230Pedals and Levers90008-74721Air Conditioning Troubleshooting and Pressure Checks90018-18910Discharging and Charging the Air Conditioning System90028-18920Compressor and Clutch90038-18930Loader90048-73270ROPS Cab and ROPS Canopy90058-73280Standard Seat90068-73290Suspension Seat and Seat Belt90078-73200	Hvdraulics		Tab 8	
Removal and Installation of Hydraulic Components80008-10400Specifications, Schematic,Troubleshooting and Pressure Checks80018-7314i1Cleaning the Hydraulic System80028-73150Pump Repair80038-73160Loader Control Valve Repair80048-73170Backhoe Relief Valve Repair80058-73180Backhoe Control Valve80068-73190Stabilizer Control Valve80068-73190Stabilizer Control Valve80078-73200Boom Lock80088-73211Cylinders80098-73222Mounted EquipmentTab 9Section Index - Mounted Equipment8001Pedals and Levers90008-74721Air Conditioning Troubleshooting and Pressure Checks90018-18910Discharging and Charging the Air Conditioning System90028-18920Compressor and Clutch90038-13230Loader90048-73270ROPS Cab and ROPS Canopy90058-73280Standard Seat90068-73290Suspension Seat and Seat Belt90078-73200		vdraulics		8-73130
Specifications, Schematic,Troubleshooting and Pressure Checks80018-7314i1Cleaning the Hydraulic System80028-73150Pump Repair80038-73160Loader Control Valve Repair80048-73170Backhoe Relief Valve Repair80058-73180Backhoe Control Valve80068-73190Stabilizer Control Valve80078-73200Boom Lock80088-73211Cylinders80098-73222Mounted Equipment8-73230Pedals and Levers90008-74721Air Conditioning Troubleshooting and Pressure Checks90018-18910Discharging and Charging the Air Conditioning System90028-18920Compressor and Clutch90038-18930Loader90048-73270ROPS Cab and ROPS Canopy90058-73280Standard Seat90068-73290Suspension Seat and Seat Belt90078-73200			8000	
Troubleshooting and Pressure Checks80018-7314j1Cleaning the Hydraulic System80028-73150Pump Repair80038-73160Loader Control Valve Repair80048-73170Backhoe Relief Valve Repair80058-73180Backhoe Control Valve80068-73190Stabilizer Control Valve80078-73200Boom Lock80088-73211Cylinders80098-73220Mounted Equipment8-73230Pedals and Levers90008-74721Air Conditioning Troubleshooting and Pressure Checks90018-18910Discharging and Charging the Air Conditioning System90028-18920Compressor and Clutch90038-18930Loader90048-73270ROPS Cab and ROPS Canopy90058-73280Standard Seat90068-73290Suspension Seat and Seat Belt90078-73300				
Cleaning the Hydraulic System80028-73150Pump Repair80038-73160Loader Control Valve Repair80048-73170Backhoe Relief Valve Repair80058-73180Backhoe Control Valve80068-73190Stabilizer Control Valve80078-73200Boom Lock80088-73211Cylinders80098-73222Mounted Equipment8-73230Pedals and Levers90008-74721Air Conditioning Troubleshooting and Pressure Checks90018-18910Discharging and Charging the Air Conditioning System90028-18920Compressor and Clutch90038-18930LoaderLoader90048-732308-73230ROPS Cab and ROPS Canopy90058-73280Standard Seat90068-73290Suspension Seat and Seat Belt90078-73300			8001	8-73141
Pump Repair80038-73160Loader Control Valve Repair80048-73170Backhoe Relief Valve Repair80058-73180Backhoe Control Valve80068-73190Stabilizer Control Valve80078-73200Boom Lock80088-73211Cylinders80098-73220Mounted Equipment80098-73230Pedals and Levers90008-74721Air Conditioning Troubleshooting and Pressure Checks90018-18910Discharging and Charging the Air Conditioning System90028-18920Compressor and Clutch90038-18930Loader90048-73270ROPS Cab and ROPS Canopy90058-73280Standard Seat90068-73290Suspension Seat and Seat Belt90078-73300				
Loader Control Valve Repair80048-73170Backhoe Relief Valve Repair80058-73180Backhoe Control Valve80068-73190Stabilizer Control Valve80078-73200Boom Lock80088-73211Cylinders80098-73222Mounted EquipmentTab 9Section Index - Mounted Equipment8-7323 0Pedals and Levers90008-74721Air Conditioning Troubleshooting and Pressure Checks90018-18910Discharging and Charging the Air Conditioning System90028-18920Compressor and Clutch90038-18930Loader90048-73270ROPS Cab and ROPS Canopy90058-73280Standard Seat90068-73290Suspension Seat and Seat Belt90078-73300				
Backhoe Relief Valve Repair80058-73180Backhoe Control Valve80068-73190Stabilizer Control Valve80078-73200Boom Lock80088-73211Cylinders80098-73222Mounted EquipmentTab 9Section Index - Mounted Equipment8-73230Pedals and Levers90008-74721Air Conditioning Troubleshooting and Pressure Checks90018-18910Discharging and Charging the Air Conditioning System90028-18920Compressor and Clutch90038-18930Loader90048-73270ROPS Cab and ROPS Canopy90058-73280Standard Seat90068-73290Suspension Seat and Seat Belt90078-73300		alve Repair		
Backhoe Control Valve80068-73190Stabilizer Control Valve80078-73200Boom Lock80088-73211Cylinders80098-73222Mounted EquipmentTab 9Section Index - Mounted Equipment8-73230Pedals and Levers90008-74721Air Conditioning Troubleshooting and Pressure Checks90018-18910Discharging and Charging the Air Conditioning System90028-18920Compressor and Clutch90038-18930Loader90048-73270ROPS Cab and ROPS Canopy90058-73280Standard Seat90068-73290Suspension Seat and Seat Belt90078-73300				
Stabilizer Control Valve80078-73200Boom Lock80088-73211Cylinders80098-73222Mounted EquipmentTab 9Section Index - Mounted Equipment8-73230Pedals and Levers90008-74721Air Conditioning Troubleshooting and Pressure Checks90018-18910Discharging and Charging the Air Conditioning System90028-18920Compressor and Clutch90038-18930Loader90048-73270ROPS Cab and ROPS Canopy90058-73280Standard Seat90068-73290Suspension Seat and Seat Belt90078-73300				
Boom Lock80088-73211Cylinders80098-73222Mounted EquipmentTab 9Section Index - Mounted Equipment8-73230Pedals and Levers90008-74721Air Conditioning Troubleshooting and Pressure Checks90018-18910Discharging and Charging the Air Conditioning System90028-18920Compressor and Clutch90038-18930Loader90048-73270ROPS Cab and ROPS Canopy90058-73280Standard Seat90068-73290Suspension Seat and Seat Belt90078-73300		·		_
Cylinders80098-73222Mounted EquipmentTab 9Section Index - Mounted Equipment8-73230Pedals and Levers90008-74721Air Conditioning Troubleshooting and Pressure Checks90018-18910Discharging and Charging the Air Conditioning System90028-18920Compressor and Clutch90038-18930Loader90048-73270ROPS Cab and ROPS Canopy90058-73280Standard Seat90068-73290Suspension Seat and Seat Belt90078-73300		10.10		
Mounted EquipmentTab 9Section Index - Mounted Equipment8-73230Pedals and Levers9000Pedals and Levers9000Air Conditioning Troubleshooting and Pressure Checks9001Discharging and Charging the Air Conditioning System9002Compressor and Clutch9003Loader9004ROPS Cab and ROPS Canopy9005Standard Seat9006Suspension Seat and Seat Belt90078-73200				
Section Index - Mounted Equipment8-73230Pedals and Levers90008-74721Air Conditioning Troubleshooting and Pressure Checks90018-18910Discharging and Charging the Air Conditioning System90028-18920Compressor and Clutch90038-18930Loader90048-73270ROPS Cab and ROPS Canopy90058-73280Standard Seat90068-73290Suspension Seat and Seat Belt90078-73300			-	v . v====
Pedals and Levers90008-74721Air Conditioning Troubleshooting and Pressure Checks90018-18910Discharging and Charging the Air Conditioning System90028-18920Compressor and Clutch90038-18930Loader90048-73270ROPS Cab and ROPS Canopy90058-73280Standard Seat90068-73290Suspension Seat and Seat Belt90078-73300			Tab 9	
Air Conditioning Troubleshooting and Pressure Checks90018-18910Discharging and Charging the Air Conditioning System90028-18920Compressor and Clutch90038-18930Loader90048-73270ROPS Cab and ROPS Canopy90058-73280Standard Seat90068-73290Suspension Seat and Seat Belt90078-73300	Section Index - M	lounted Equipment		8-73230
Discharging and Charging the Air Conditioning System90028-18920Compressor and Clutch90038-18930Loader90048-73270ROPS Cab and ROPS Canopy90058-73280Standard Seat90068-73290Suspension Seat and Seat Belt90078-73300			9000	8-74721
Compressor and Clutch 9003 8-18930 Loader 9004 8-73270 ROPS Cab and ROPS Canopy 9005 8-73280 Standard Seat 9006 8-73290 Suspension Seat and Seat Belt 9007 8-73300			9001	8-18910
Compressor and Clutch 9003 8-18930 Loader 9004 8-73270 ROPS Cab and ROPS Canopy 9005 8-73280 Standard Seat 9006 8-73290 Suspension Seat and Seat Belt 9007 8-73300	Discharging and	Charging the Air Conditioning System	9002	8-18920
ROPS Cab and ROPS Canopy90058-73280Standard Seat90068-73290Suspension Seat and Seat Belt90078-73300	Compressor and	Clutch	9003	8-18930
Standard Seat90068-73290Suspension Seat and Seat Belt90078-73300	Loader	· · · · · · · · · · · · · · · · · · ·	9004	8-73270
Standard Seat90068-73290Suspension Seat and Seat Belt90078-73300	ROPS Cab and F	OPS Canopy	9005	8-73280
Suspension Seat and Seat Belt 9007 8-73300			9006	8-73290
	Suspension Seat	and Seat Belt	9007	8-73300
Backhoe 9008 8-73320	Backhoe		9008	8-7332)0

1001

STANDARD TORQUE SPECIFICATIONS

TABLE OF CONTENTS

Torque Specifications - Decimal	Torque Specifications - Steel Hydraulic	
Hardware	Fittings1001-4	
Torque Specifications - Metric Hardware1001-3	Torque Specifications - O-ring Face Seal Fittings1001-5	

TORQUE SPECIFICATIONS - DECIMAL HARDWARE

Use the torques in this chart when special torques are not given. These torques apply to fasteners with both UNC and UNF threads as received from suppliers, dry, or when lubricated with engine oil. Not applicable if special graphites, molydisulfide greases, or other extreme pressure lubricants are used.

Grade 5 Bolts, Nuts, and Studs		
-		\prec
Size	Pound- Feet	Newton metres
1/4 in	9-11	12-15
5/16 in	17-21	23-28
3/8 in	35-42	48-57
7/16 in	54-64	73-87
1/2 in	80-96	109-130
9/16 in	110-132	149-179
5/8 in	150-180	203-244
3/4 in	270-324	366-439
7/8 in	400-480	542-651
1.0 in	580-696	787-944
1-1/8 in	800-880	1085-1193
1-1/4 in	1120-1240	1519-1681
1-3/8 in	1460-1680	1980-2278
1-1/2 in	1940-2200	2631-2983

Grade 8 Bolts, Nuts, and Studs		
$\left\{ \right\}$	\rightarrow $\langle \times \rangle$ \langle	
Size	Pound- Feet	Newton metres
1/4 in	12-15	16-20
5/16 in	24-29	33-39
3/8 in	45-54	61-73
7/16 in	70-84	95-114
1/2 in	110-132	149-179
9/16 in	160-192	217-260
5/8 in	220-264	298-358
3/4 in	380-456	515-618
7/8 in	600-720	814-976
1.0 in	900-1080	1220-1465
1-1/8 in	1280-1440	1736-1953
1-1/4 in	1820-2000	2468-2712
1-3/8 in	2380-2720	3227-3688
1-1/2 in	3160-3560	4285-4827
NOTE: Use thick nuts with Grade 8 bolts.		

811360B

TORQUE SPECIFICATIONS - METRIC HARDWARE

Use the following toques when special torques are not given.

These values apply to fasteners with coarse threads as received from supplier, plated or unplated, or when lubricated with engine oil. These values do not apply if graphite or molydisulfide grease or oil if used.

Grade 8.8 Bolts, Nuts, and Studs		
	8.8	
Size	Pound- Feet	Newton metres
M4	2-3	3-4
M5	5-6	6.5-8
M6	8-9	10.5-12
M8	19-23	26-31
M10	38-45	52-61
M12	66-79	90-107
M14	106-127	144-172
M16	160-200	217-271
M20	320-380	434-515
M24	500-600	675-815
M30	920-1100	1250-1500
M36	1600-1950	2175-2600

Grade 10.9 Bolts, Nuts, and Studs $\sqrt{10.9}$		
Size	Pound- Feet	Newton metres
M4	3-4	4-5
M5	7-8	9.5-11
M6	11-13	15-17.5
M8	27-32	37-43
M10	54-64	73-87
M12	93-112	125-15
M14	149-179	200-245
M16	230-280	310-380
M20	450-540	610-730
M24	780-940	1050-1275
M30	1470-1770	2000-2400
M36	2580-3090	3500-4200

Grade 12.9 Bolts, Nuts, and Studs

12.9

Usually the torque values specified for grade 10.9 fasteners can be used satisfactorily on grade 12.9 fasteners.

811359A

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email:

ebooklibonline@outlook.com