800/1000 Crawler

Service Manual

9-72062



800 CRAWLER, S/N 7081201 AND AFTER 1000 CRAWLER, BEFORE S/N 7103000 TABLE OF CONTENTS

| SECTION | SECTION NO. | FORM NO. |
|------------------------|-------------|----------|
| General Specifications | I | 9-72061 |
| Engine | II | 9-72061 |
| Fuel System | III | 9-72061 |
| Torque Converter | IV | 9-72061 |
| Transmission | V | 9-72061 |
| Final Drive System | VI | 9-72061 |
| Track System | VII | 9-72061 |
| Electrical System | VIII | 9-72061 |
| Hydraulic System | IX | 9-72061 |

GROUP I - GENERAL SPECIFICATIONS

| SECTION A - Model 800 Specifications | <u>Page</u> I - l |
|--|----------------------|
| SECTION B - Model 800 Loader Specifications | I - 3 |
| SECTION C - Model 800 Dozer Specifications | I - 4 |
| SECTION D - Model 1000 Specifications | I - 4 |
| SECTION E - Model 1000 Loader Specifications | I - 6 |
| SECTION F - Model 1000 Dozer Specifications | I - 7 |
| SECTION G - Ripper Specifications | I - 8 |

GENERAL SPECIFICATIONS

GROUP I

SECTION A - MODEL 800 SPECIFICATIONS

CAPACITIES (U.S.)

| Cooling Transmission a Final Drive (Ea Crankcase Air Cleaner . Hydraulic Brak Hydraulic Syst Hydraulic Syst | and Torque Convach) Se System | erter | | Dr We | y Eng et Er | gine | (new (old | filte | r elem | nent) - 9 Quarts ent) - 7 Quarts |
|--|--------------------------------|-------|------|----------|----------------|------|-----------|-------|--------|-------------------------------------|
| TRACTOR | | | | | | | | | | |
| HP (Gross) . HP (Net) Electrical Syst | tem | | | • | | | | | | |
| _ | | | | | | | | | | 1.4 |
| Radiator: No. | Tubes | | | | | | | | | 5 |
| | Fins Per Inch . ter: Make | | | | | | | | | 7 LONG |
| - | - - | | | | | | | | | SINGLE STAGE |
| | | | | | | | | | | 13 In 1550-1650 |
| | Stall Torque |) | | | | | | | | |
| Transmission: | Model | • • | | • | | | | | | 1.92 593 . HYDRAULIC |
| | No. Speeds For | | | | | | | | | |
| Dottom | No. Speeds Rev | erse | | • | | | | | | 4 |
| Battery: | | | | | | | | | | GROUP 2E |
| Generator: | Capacity - 20 H | our l | Rate | • | | | | | | 130 Amp. Hrs. Delco-Remy |
| | | | | | | | | | | 10 Amp. |

DIMENSIONS AND WEIGHTS

| | | Wide Gauge (Loaders) | | Narrow Gauge (Dozers) |
|---|---|-------------------------|---|--|
| Height Gauge Width, Overall Ground Clearance Ground Clearance Drawbar Height Drawbar Moveme Track Shoe Width Track Shoe Width Number Track Lir Length Of Track O Track Pitch Sprocket Teeth Ground Contact A Height Of Grouse Track Pin Diamet Track Bushing Di Track Bolt Diame Track Rollers, No Track Roller Diam Support Rollers, Ground Pressure | Without Drawbar Without Drawbar Without Drawbar Under Drawbar It, Lateral It, Standard It, Maximum Its Per Side On Ground Orea Per Side No Per Side Basic) Shipping I | 60 In | . 71-1/2 In 16-3/16 In 10-15/16 In 14-1/16 In 16 In 15 In 37 . 73 In 6-1/4 In 27 . 2190 Sq. In 2-1/16 In 1-1/4 In 1-7/8 In 1/2 In 5 . 7-1/4 In 1 (2 Optional) | |
| ENGINE | | | | |
| Continental Mod | el HD-277 Diesel | | | |
| Stroke Governed RPM (Finjection System Firing Order Valve Tappet Cle | full Load) | | | 5-1/2 In. 2250 . Roosa-Master 1,3,4,2 |
| PERFORMANCE D | ATA | | | |
| Speeds: | Forward | <u>1 ST</u> 1.6 | 2 ND 2.9 | 3 RD 4 TH 5.9 |
| | Reverse | 1.9 | 3.5 | 4.0 7.2 |

Thank you so much for reading.

Please click the "Buy Now!"

button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com