



SERVICE MANUAL
WHEEL LOADER
821E
TIER 3

84299244
(Replaces 87364100)

Revised December 2009
Issued September 2006

**821E Wheel Loader
Service Manual 84299244
(Replaces 87364100)**

Table of Contents

Description	Section No.	Form No.
General		
	Tab 1	
Section Index - General		5-3090
Standard Torque Specifications	1001	8-71603
Fluids and Lubricants	1002	5-3100
Metric Conversion Chart	1003	7-52950
Engines		
	Tab 2	
Section Index - Engines		5-3110
Engine and Radiator Removal and Installation	2000	5-2700
Stall Tests	2002	5-3120
After Cooler	2003	6-49850
For Engine Repair, See the Engine Service Manual		87519803
Fuel System		
	Tab 3	
Section Index - Fuel System		5-3130
For Fuel System Repair, See the Engine Service Manual		
Electrical		
	Tab 4	
Section Index - Electrical		5-3140
Removal and Installation of Starter and Alternator	4001	5-2740
Electrical Specifications and Troubleshooting	4002	5-2750
Batteries	4003	6-42330
Instrument Cluster	4005	5-2760
Steering		
	Tab 5	
Section Index - Steering		84299247 (Replaces 5-3150)
Removal and Installation of Steering Components	5001	5-2780
Steering Specifications, Pressure Checks, and Troubleshooting	5002	5-2790
Steering Cylinders	5005	5-3160
Center Pivot	5006	5-3170
Auxiliary Steering Motor and Pump	5008	6-42430
Joystick Steering	5009	5-15960

**821E Wheel Loader
Service Manual 84299244
(Replaces 87364100)**

Table of Contents

Description	Section No.	Form No.
Power Train		
	Tab 6	
Section Index - Power Train		5-3180
Removal and Installation of Power Train Components	6001	5-4010
Transmission Specifications, Pressure Checks, and Troubleshooting	6002	5-2840
Transmission	6003	5-2850
Front Axle	6004	5-3190
Rear Axle	6004	5-3200
Drive Shafts, Center Bearing, and Universal Joints	6005	5-3210
Wheels and Tires	6006	5-3220
Transmission Control Valve	6007	6-81450
Brakes		
	Tab 7	
Section Index - Brakes		5-3230
Removal and Installation of Brake Components	7001	5-3240
Hydraulic Brake Troubleshooting	7002	5-3250
Brake Pump	7003	5-2920
Brake Accumulators	7004	6-47761
Parking Brake	7008	5-2930
Hydraulics		
	Tab 8	
Section Index - Hydraulics		5-3260
Removal and Installation of Hydraulic Components	8001	5-4050
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	5-3270
Cleaning the Hydraulic System	8003	7-49641
Hydraulic Pump	8004	5-2970
Loader Control Valve	8005	5-2980
Cylinders	8006	5-3280
Coupler Solenoid Locking Valve	8007	6-42600
Ride Control Accumulator	8013	5-3000
Ride Control Valve	8014	5-3010

**821E Wheel Loader
Service Manual 84299244
(Replaces 87364100)**

Table of Contents

Description	Section No.	Form No.
Mounted Equipment	Tab 9	
Section Index - Mounted Equipment		5-3290
Air Conditioning Troubleshooting and System Checks For Systems with HFC-134a Refrigerant	9002	5-4030
Air Conditioner System Service	9003	5-3030
Removal and Installation of Air Conditioning and Heater Components	9004	5-3040
Loader	9006	5-3300
Rollover Protective Structure (ROPS) Cab Structural Frame (CSF)	9007	5-4070
Cab Glass Installation	9010	6-42710
Electrical Schematic Foldouts and Hydraulic Schematic Foldout	In Rear Pocket	5-3310

NOTE: CNH America LLC. reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

SECTION INDEX

GENERAL

Section Title	Section Number
Standard Torque Specifications	1001
Fluids and Lubricants	1002
Metric Conversion Chart	1003

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com