

821G
921G
Stage IV
Wheel Loader

SERVICE MANUAL

Part number 51428216

English

November 2017

© 2017 CNH Industrial Italia S.p.A. All Rights Reserved.

CASE
CONSTRUCTION



SERVICE MANUAL

821G WHEEL LOADER XR-EH, NEW CAB TIER4B, 821G WHEEL LOADER ZBAR-EH, NEW CAB TIER4B, 821G Wheel Loader XR-EH, New cab, Tier 4B, Multipurpose, 821G Wheel Loader ZBAR-EH, New cab, Tier 4B, Multipurpose, 921G WHEEL LOADER XR-EH, NEW CAB TIER4B, 921G WHEEL LOADER ZBAR-EH, NEW CAB TIER4B, 921G Wheel Loader XR-EH, New cab, Tier 4B, Multipurpose, 921G Wheel Loader ZBAR-EH, New cab, Tier 4B, Multipurpose

Link Product / Engine

Product	Market Product	Engine
821G WHEEL LOADER ZBAR-EH, NEW CAB TIER4B	Europe	F4HFE613S*B004
821G Wheel Loader ZBAR-EH, New cab, Tier 4B, Multipurpose	Europe	F4HFE613S*B004
821G WHEEL LOADER XR-EH, NEW CAB TIER4B	Europe	F4HFE613S*B004
821G Wheel Loader XR-EH, New cab, Tier 4B, Multipurpose	Europe	F4HFE613S*B004
921G WHEEL LOADER ZBAR-EH, NEW CAB TIER4B	Europe	F4HFE613R*B006
921G Wheel Loader ZBAR-EH, New cab, Tier 4B, Multipurpose	Europe	F4HFE613R*B006
921G WHEEL LOADER XR-EH, NEW CAB TIER4B	Europe	F4HFE613R*B006
921G Wheel Loader XR-EH, New cab, Tier 4B, Multipurpose	Europe	F4HFE613R*B006

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.202] Air cleaners and lines	10.3
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.4
[10.400] Engine cooling system	10.5
[10.414] Fan and drive	10.6
[10.310] Aftercooler.....	10.7
[10.304] Engine lubrication system.....	10.8
Transmission	21
[21.113] Powershift transmission	21.1
[21.155] Powershift transmission internal components.....	21.2
[21.700] Torque converter	21.3
Four-Wheel Drive (4WD) system	23
[23.314] Drive shaft.....	23.1
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1

[33.110] Parking brake or parking lock	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.106] Variable displacement pump	35.3
[35.359] Main control valve	35.4
[35.357] Pilot system	35.5
[35.204] Remote control valves	35.6
[35.752] Hydraulic fan drive cooling system.....	35.7
[35.701] Front loader arm hydraulic system	35.8
[35.723] Front loader bucket hydraulic system	35.9
[35.734] Tool quick coupler hydraulic system	35.10
Frames and ballasting	39
[39.100] Frame	39.1
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.216] Cylinders	41.3
[41.910] Auxiliary steering	41.4
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Cab climate control	50
[50.200] Air conditioning	50.1
Electrical systems	55
[55.100] Harnesses and connectors.....	55.1
[55.201] Engine starting system	55.2
[55.301] Alternator	55.3

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com