



1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

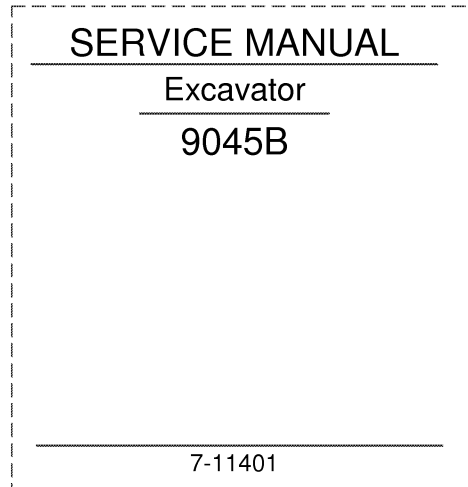


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

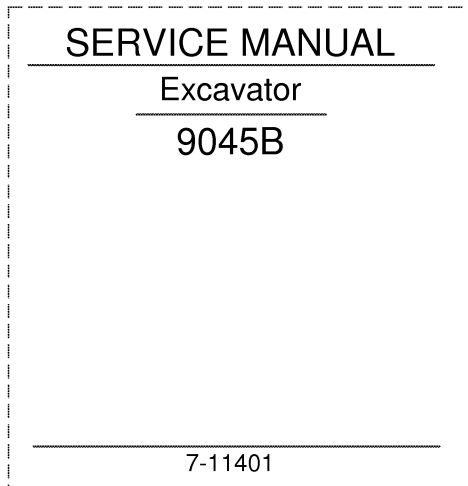

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

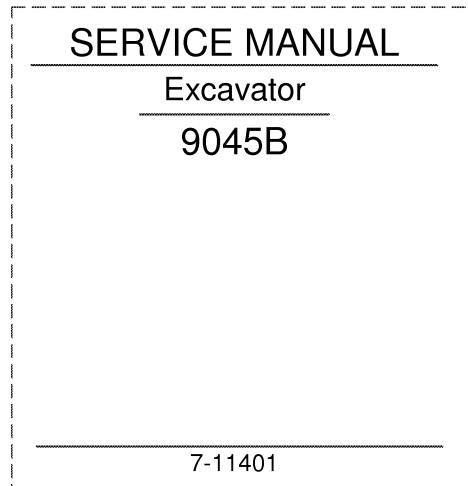

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

9045B Excavator Service Manual 7-11401

Table of Contents

Description	Section No.	Form No.
General		
	Tab 1	
Safety, General information and Standard Torque Specifications	1001	7-62010
Specifications	1002	7-11250
Loctite Product Chart		8-98900
Engines		
	Tab 2	
Engine Removal and Installation	2000	7-11260
Engine Radiator and Oil Cooler and Cooling System Reservoir	2001	7-11270
6-830 Diesel Engine Specification Details	2403	8-28426
Cylinder Head and Valve Train	2415	8-28434
Cylinder Block	2425	8-28444
Lubrication System	2445	8-28453
Cooling System	2455	8-28464
Turbocharger	2465	8-28471
Turbocharger Failure Analysis	2565	9-78325
Fuel System		
	Tab 3	
Fuel Tank, Filters and Lines	3001	7-11280
Fuel System and Filters	3410	8-28482
Injection Pump	3412	8-28494
Fuel Injectors	3413	8-28503
Electrical		
	Tab 4	
Electrical Specifications and Troubleshooting	4001	7-62401
Electrical Schematic Foldout	In Rear Pocket	7-15350
Battery Testing, Maintenance and Booster Battery Connections	4002	7-62060
Controller	4003	7-62070
Tracks		
	Tab 5	
Tracks, Rollers, and Idlers	5002	7-11290
Power Train		
	Tab 6	
Drive Motor and Final Drive Transmission	6002	7-11300
Swing Motor and Swing Reduction Gear	6003	7-62100

CASE CORPORATION
700 State Street
Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION
450 Sherman Avenue
Hamilton, ON L8N 4C4 CANADA

Bur 7-12091

© 1999 Case Corporation
Printed in U.S.A.
April 1999,

9045B Excavator Service Manual 7-11401

Table of Contents


Description	Section No.	Form No.
Hydraulics	Tab 8	
Cleaning the Hydraulic System	8000	7-11310
Hydraulic Specifications, Troubleshooting and Pressure Checks	8001	7-62411
Hydraulic Schematic Foldout (In Process)	In Rear Pocket	7-15360
Main Hydraulic Pump	8002	7-11320
Main Hydraulic Control Valve	8003	7-11330
Cylinders	8004	7-11340
Hand Control Valves, Foot Left and Right Travel Control Valves, Foot Straight Travel Control Valve, Shuttle Valve, Travel Block, and Accumulator	8005	7-62150
Eight Spool Solenoid Valve, Swing Lock and Swing Brake Solenoid Valve, Free Swing Solenoid Valve, and Quick Change Solenoid Valve	8006	7-11350
Cushion Control Valve	8007	7-62170
Auxiliary Hydraulics	8008	7-62180
Hydraulic Pilot Filter, Hydraulic Inline Filter, and Bypass Oil Filter	8011	7-62210
Hydraulic Swivel	8013	7-11360
 Mounted Equipment	 Tab 9	
Upper Structure and Counterweight	9002	7-11370
Boom, Arm, and Bucket	9003	7-11380
Operator's Seat, Operator's Seat Bracket, and Seat Belts	9004	7-62260
Cab and Cab Equipment	9005	7-11390
Air Conditioner Troubleshooting and System Checks	9006	7-62280
Air Conditioner Removal and Installation	9008	7-62300
Air Conditioner Components	9009	7-62310

NOTE: Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

Section 1001


SAFETY, GENERAL INFORMATION AND TORQUE SPECIFICATIONS

SAFETY


 *This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.* SB001


To prevent injury always follow the Warning, Caution and Danger notes in this section and throughout the manual.


Put the warning tag shown below on the key for the keyswitch when servicing or repairing the machine. One warning tag is supplied with each machine. Additional tags Part Number 331-4614 are available from your service parts supplier.

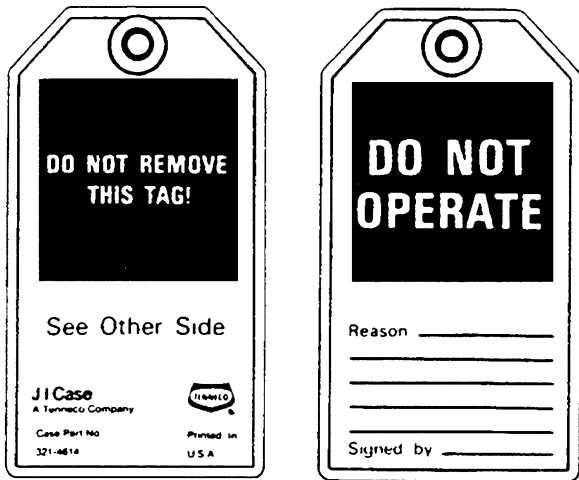



1001-01


 **WARNING:** Read the operator's manual to familiarize yourself with the correct control functions. 46-27


 **WARNING:** Operate the machine and equipment controls from the seat position only. Any other method could result in serious injury. 48-55


 **WARNING:** This is a one man machine, no riders allowed. 35-8

 **WARNING:** Before starting engine, study Operator's Manual safety messages. Read all safety signs on machine. Clear the area of other persons. Learn and practice safe use of controls before operating. It is your responsibility to understand and follow manufacturers instructions on machine operation, service and to observe pertinent laws and regulations. Operator's and Service Manuals may be obtained from your Case dealer. SA055

 **WARNING:** If you wear clothing that is too loose or do not use the correct safety equipment for your job, you can be injured. Always wear clothing that will not catch on objects. Extra safety equipment that can be required includes hard hat, safety shoes, ear protection, eye or face protection, heavy gloves and reflector clothing. 45-3A

 **WARNING:** When working in the area of the fan belt with the engine running, avoid loose clothing if possible, and use extreme caution. 35-4

 **WARNING:** When doing checks and tests on the equipment hydraulics, follow the procedures as they are written. DO NOT change the procedure. 47-44

 **WARNING:** When putting the hydraulic cylinders on this machine through the necessary cycles to check operation or to remove air from a circuit, make sure all people are out of the way. 47-45

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com