

9060B Excavator Service Manual No. 7-65272

Table of Contents

Description	Section No.	Form No.
General	Tab 1	
Loctite Product Chart		8-98900
Safety, General Information and Torque Specifications	1001	7-62010
Specifications	1002	7-65330
Engines	Tab 2	
Engine - Mitsubishi	2000	7-65380
Engine - Cummins	2000	7-51980
Radiator, Oil Cooler and Cooling System Reservoir - Mitsubishi Engine	2001	7-65390
Radiator, Oil Cooler and Cooling System Reservoir - Cummins Engine	2001	7-51990
Fuel System	Tab 3	
Fuel Tank, Filters and Lines - Mitsubishi Engine	3001	7-65450
Fuel Tank, Filters and Lines - Cummins Engine	3001	7-52000
Electrical	Tab 4	
Electrical Specifications and Troubleshooting	4001	7-65310
Electrical Schematic Foldout	In Rear Pocket	7-15330
Battery Testing, Maintenance and Booster Battery Connections	4002	7-64500
Controller	4003	7-62070
Tracks	Tab 5	
Tracks, Rollers and Idlers	5002	7-65340
Power Train	Tab 6	
Drive Motor and Final Drive Transmission	6002	7-65370
Swing Motor and Swing Reduction Gear	6003	7-65460
Hydraulics	Tab 8	
Cleaning the Hydraulic System	8000	7-64510
Hydraulic Specifications, Troubleshooting and Pressure Checks	8001	7-65321
Hydraulic Schematic Foldout	In Rear Pocket	7-15330
Main Hydraulic Pump	8002	7-63660
Main Hydraulic Control Valve	8003	7-65360
Cylinders	8004	7-65480

Reprinted

CASE CORPORATION
700 STATE STREET
RACINE, WI 53404 U.S.A.

CASE CANADA CORPORATION
450 SHERMAN AVENUE
HAMILTON, ON L8N 4C4

Bur 7-52711

Copyright © 1999 Case Corporation
Printed in U.S.A.
Issued April 1999

9060B Excavator Service Manual No. 7-65272

Table of Contents

Description	Section No.	Form No.
Hand Control Valves, Foot Left and Right Travel Control Valves, Shuttle Valve and Accumulator	8005	7-64520
Eight Spool Solenoid Valve, Swing Lock and Swing Brake Solenoid Valve	8006	7-64530
Cushion Control Valve	8007	7-64540
Auxiliary Hydraulics	8008	7-62180
Hydraulic Reservoir Pressurization System	8009	7-64710
Oil Cooler and Fan Drive Motor Hydraulic Pump - Cummins Engine	8010	7-51970
Hydraulic Pilot Filter, Hydraulic Inline Filter and Bypass Oil Filter	8011	7-65490
Hydraulic Swivel	8013	7-65500
Mounted Equipment	Tab 9	
Upper Structure Counterweight	9002	7-64720
Boom, Arm and Bucket	9003	7-64730
Operators Seat, Operators Seat Bracket and Seat Belts	9004	7-62260
Cab and Cab Equipment	9005	7-62270
Air Conditioner Troubleshooting and System Checks	9006	7-62280
Air Conditioner Components Removal and Installation	9008	7-62300
Air Conditioner Components	9009	7-62310

Section

1001

SAFETY, GENERAL INFORMATION AND TORQUE SPECIFICATIONS

SAFETY




This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

To prevent injury always follow the Warning, Caution and Danger notes in this section and throughout the manual.

Put the warning tag shown below on the key for the keyswitch when servicing or repairing the machine. One warning tag is supplied with each machine. Additional tags Part Number 331-4614 are available from your service parts supplier.

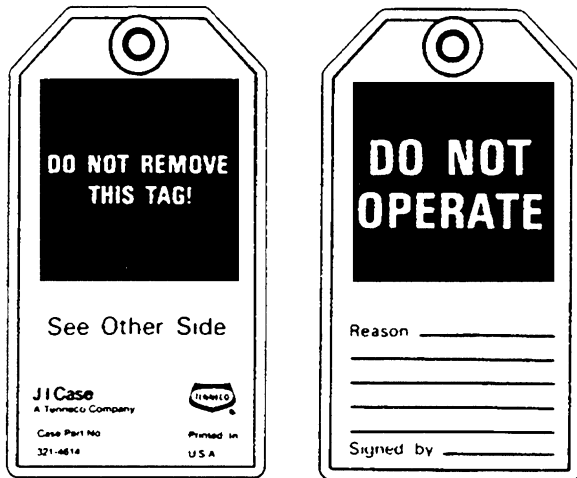

1001-01



WARNING: Read the operator's manual to familiarize yourself with the correct control functions.

46-27



WARNING: Operate the machine and equipment controls from the seat position only. Any other method could result in serious injury.

48-55



WARNING: This is a one man machine, no riders allowed.

35-8



WARNING: Before starting engine, study Operator's Manual safety messages. Read all safety signs on machine. Clear the area of other persons. Learn and practice safe use of controls before operating.

It is your responsibility to understand and follow manufacturers instructions on machine operation, service and to observe pertinent laws and regulations. Operator's and Service Manuals may be obtained from your Case dealer.

SA055



WARNING: If you wear clothing that is too loose or do not use the correct safety equipment for your job, you can be injured. Always wear clothing that will not catch on objects. Extra safety equipment that can be required includes hard hat, safety shoes, ear protection, eye or face protection, heavy gloves and reflector clothing.

45-3A



WARNING: When working in the area of the fan belt with the engine running, avoid loose clothing if possible, and use extreme caution.

35-4



WARNING: When doing checks and tests on the equipment hydraulics, follow the procedures as they are written. DO NOT change the procedure.

47-44



WARNING: When putting the hydraulic cylinders on this machine through the necessary cycles to check operation or to remove air from a circuit, make sure all people are out of the way.

47-45



WARNING: Use insulated gloves or mittens when working with hot parts. 47-41A



CAUTION: Lower all attachments to the ground or use stands to safely support the attachments before you do any maintenance or service. 49-11



CAUTION: Pin sized and smaller streams of hydraulic oil under pressure can penetrate the skin and result in serious infection. If hydraulic oil under pressure does penetrate the skin, seek medical treatment immediately. Maintain all hoses and tubes in good condition. Make sure all connections are tight. Make a replacement of any tube or hose that is damaged or thought to be damaged. **DO NOT** use your hand to check for leaks, use a piece of cardboard or wood. 40-6A



CAUTION: When removing hardened pins such as a pivot pin, or a hardened shaft, use a soft head (brass or bronze) hammer or use a driver made from brass or bronze and a steel head hammer. 46-17



CAUTION: When using a hammer to remove and install pivot pins or separate parts using compressed air or using a grinder, wear eye protection that completely encloses the eyes (approved goggles or other approved eye protectors). 46-13



CAUTION: Use suitable floor (service) jacks or chain hoist to raise wheels or tracks off the floor. Always block machine in place with suitable safety stands. 40-7A



CAUTION: When servicing or repairing the machine, keep the shop floor and operator's compartment and steps free of oil, water, grease, tools, etc. Use an oil absorbing material and/or shop cloths as required. Use safe practices at all times. 40-8



CAUTION: Some components of this machine are very heavy. Use suitable lifting equipment or additional help as instructed in this Service Manual. 40-10



DANGER: Engine exhaust fumes can cause death. If it is necessary to start the engine in a closed place, remove the exhaust fumes from the area with an exhaust pipe extension. Open the doors and get outside air into the area. 48-56



WARNING: When the battery electrolyte is frozen, the battery can explode if (1), you try to charge the battery, or (2), you try to jump start and run the engine. To prevent the battery electrolyte from freezing, try to keep the battery at full charge. If you do not follow these instructions, you or others in the area can be injured. SA033

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com