



SERVICE MANUAL  
**WHEEL LOADER**  
**921E**  
**TIER 3**

84299249  
(Replaces 87624950)

Revised December 2009  
Issued February 2007

**921E Wheel Loader  
Service Manual 84299249  
(Replaces 87624950)**

**Table of Contents**

Description	Section No.	Form No.
<b>General</b>		
	<b>Tab 1</b>	
Section Index - General		5-5380
Standard Torque Specifications	1001	8-71603
Fluids and Lubricants	1002	5-5390
Metric Conversion Chart	1003	7-52950
<b>Engines</b>		
	<b>Tab 2</b>	
Section Index - Engines		5-5400
Engine and Radiator Removal and Installation	2000	5-5410
Stall Tests	2002	5-5420
After Cooler	2003	5-5430
For Engine Repair See Your Cummins Dealer		
<b>Fuel System</b>		
	<b>Tab 3</b>	
Section Index - Fuel System		5-5440
For Fuel System Repair, See Your Cummins Dealer		
<b>Electrical</b>		
	<b>Tab 4</b>	
Section Index - Electrical		5-5450
Removal and Installation of Starter and Alternator	4001	5-5460
Electrical Specifications and Troubleshooting	4002	5-5470
Batteries	4003	6-42331
Instrument Cluster and Equipment Fault Codes	4005	5-5480
<b>Steering</b>		
	<b>Tab 5</b>	
Section Index - Steering		84299252 (Replaces 5-5490)
Removal and Installation of Steering Components	5001	5-5500
Steering Specifications, Pressure Checks, and Troubleshooting	5002	5-5510
Steering Control Valve	5003	5-5520
Steering Cylinders	5005	5-5530
Center Pivot	5006	5-5540
Auxiliary Steering Motor and Pump	5008	6-42430
Joystick Steering	5009	5-15970

# 921E Wheel Loader Service Manual 84299249 (Replaces 87624950)

## Table of Contents

Description	Section No.	Form No.
<b>Power Train</b>		
	<b>Tab 6</b>	
Section Index - Power Train		5-5550
Removal and Installation of Power Train Components	6001	5-5560
Transmission Specifications, Pressure Checks, and Troubleshooting	6002	5-5570
Transmission	6003	5-5580
Front and Rear Axle	6004	5-5590
Drive Shafts, Center Bearing, and Universal Joints	6005	5-5600
Wheels and Tires	6006	5-5610
Transmission Control Valve	6007	6-42501
<b>Brakes</b>		
	<b>Tab 7</b>	
Section Index - Brakes		5-5620
Removal and Installation of Brake Components	7001	5-5630
Hydraulic Brake Troubleshooting	7002	5-5640
Parking Brake	7008	5-5650
<b>Hydraulics</b>		
	<b>Tab 8</b>	
Section Index - Hydraulics		5-5660
How to Read Symbols in a Hydraulic Schematic	8000	5-5670
Removal and Installation of Hydraulic Components	8001	5-5680
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	5-5690
Cleaning the Hydraulic System	8003	5-5700
Hydraulic Pump	8004	5-5710
Loader Control Valve	8005	5-5720
Cylinders	8006	5-5730
<b>Mounted Equipment</b>		
	<b>Tab 9</b>	
Section Index - Mounted Equipment		5-5740
Air Conditioning Troubleshooting and System Checks	9002	5-5750
Air Conditioner System Service	9003	5-5760
Removal and Installation of Air Conditioning and Heater Components	9004	5-5770
Loader	9006	5-5780
The Rollover Protective Structure (ROPS) or Cab Structural Frame (CSF)	9007	5-5790
Cab Glass Installation	9010	6-42710

**921E Wheel Loader  
Service Manual 84299249  
(Replaces 87624950)**

**Table of Contents**

Description	Section No.	Form No.
<b>Electrical Schematic Foldouts and Hydraulic Schematic Foldout</b>	<b>In Rear Pocket</b>	<b>5-5800</b>

**NOTE:** CNH America LLC. reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

# SECTION INDEX

## GENERAL

<b>Section Title</b>	<b>Section Number</b>
Standard Torque Specifications . . . . .	1001
Fluids and Lubricants . . . . .	1002
Metric Conversion Chart . . . . .	1003

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)