



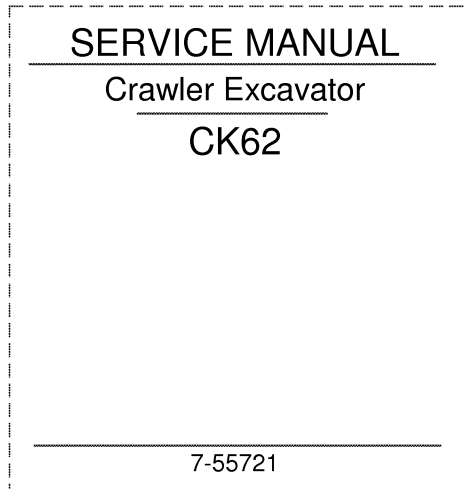


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

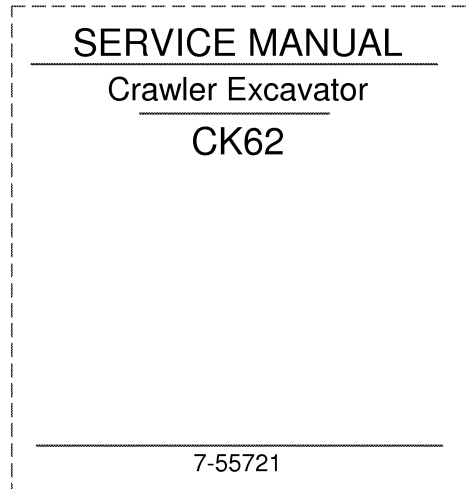


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

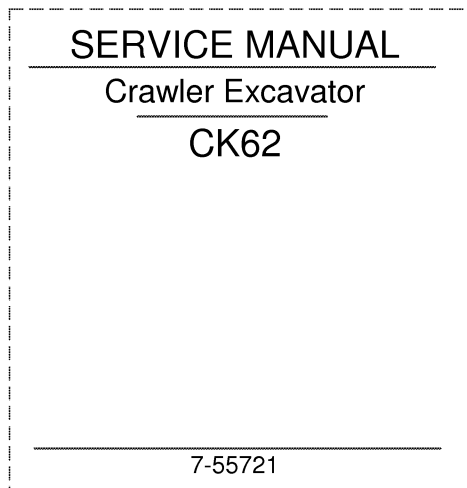

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

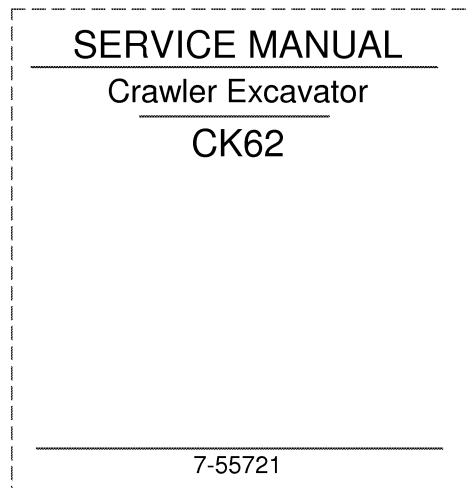

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

CK62 Crawler Excavator

Table of Contents

	SECTION N°	REFERENCE N°
1. GENERAL INFORMATION		
Safety Instructions, General Information and Torque Specifications.....	1001	7-55741
General Specifications.....	1002	7-55751
2. ENGINE		
Engine Removal and Installation.....	2002	7-55760
Engine Disassembly and Assembly, Lubrication System, Cooling System and Fuel System.....	2010	7-55770
4. ELECTRICAL SYSTEM		
Electrical Schematics and Troubleshooting.....	4001	7-55780
Starter Motor.....	4003	7-55790
Alternator.....	4004	7-55800
5. UNDERCARRIAGE		
Tracks, Rollers and Idlers.....	5002	7-55810
6. HYDRAULIC DRIVE GROUP		
Travel Reduction Gear.....	6002	7-55820
Swing Reduction Gear.....	6003	7-55830
7. UNDERCARRIAGE HYDRAULICS		
Travel Motor.....	7002	7-55840
Hydraulic Swivel.....	7004	7-55850
8. UPPERSTRUCTURE HYDRAULICS		
Pressure Setting, Troubleshooting, Hydraulic Schematic.....	8001	7-55861
Hydraulic Reservoir.....	8010	7-55870
High Pressure Pump.....	8020	7-55880
Hydraulic Swing Pump and Power Assistance Pump.....	8021	7-55890
Control Valves.....	8032	7-55900
Travel Selector Valve.....	8035	7-55910
Pressure Limiter.....	8036	7-55920
Hydraulic Swing Motor and Swing Brake Valve.....	8037	7-55930
Hand Control Valve.....	8050	7-55940
Hydraulic Swing/Offset Cylinder Flow Selector.....	8052	7-55950
Attachment cylinders.....	8081	7-55960
9. UPPERSTRUCTURE/ATTACHMENTS		
Turntable Bearing.....	9002	7-55970
Pedal and Lever Adjustments.....	9003	7-55980
Boom, Dipper, Bucket and Dozer Blade.....	9004	7-55990

THIS TABLE OF CONTENTS REPLACE LEP 7-55730

Section 1001

SAFETY INSTRUCTIONS, GENERAL INFORMATION AND TORQUE SPECIFICATIONS

TABLE OF CONTENTS

SAFETY INSTRUCTIONS.....3

GENERAL INFORMATION.....5

STANDARD FASTENER TORQUE SPECIFICATIONS.....6

HYDRAULIC CONNECTION TORQUE SPECIFICATIONS.....7

SAFETY



*This symbol means **ATTENTION ! BECOME ALERT ! YOUR SAFETY IS INVOLVED.** The message that follows the symbol contains important information about safety. Carefully read the message, Make sure you fully understand the causes of possible injury or death.*

To prevent injury always follow the Warning, Caution and Danger notes in this section and throughout the manual.

Put the warning tag shown below on the key for the keyswitch when servicing or repairing the machine. One warning tag is supplied with each machine. Additional tags Part Number 331-4614 are available from your service parts supplier.



B004



Read the operator's manual to familiarize yourself with the correct control functions.



Operate the machine and equipment controls from the seat position only. Any other method could result in serious injury.



This is a one man machine, no riders allowed.



Before starting engine, study Operator's Manual safety messages. Read all safety signs on machine. Clear the area of other persons. Learn and practise safe use of controls before operating.

It is your responsibility to understand and follow manufacturers instructions on machine operation, service, and to observe pertinent laws and regulations. Operator's and Service Manuals may be obtained from your J.I. CASE dealer.



If you wear clothing that is too loose or do not use the correct safety equipment for your job, you can be injured. Always wear clothing that will not catch on objects. Extra safety equipment that can be required includes hard hat, safety shoes, ear protection, eye or face protection, heavy gloves and reflector clothing.



When working in the area of the fan belt with the engine running, avoid loose clothing if possible, and use extreme caution.



*When doing checks and tests on the equipment hydraulics, follow the procedures as they are written. **DO NOT** change the procedure.*



When putting the hydraulic cylinders on this machine through the necessary cycles to check operation or to remove air from a circuit, make sure all people are out of the way.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com