

# CX130 Crawler Excavators

## Table of Contents

DIVISION/SECTION	SECTION N°	REFERENCE N°
<b>1 GENERAL INFORMATION</b>		
Safety, general information and standard torque data .....	1001	7-27690GB
General specifications and special torque setting.....	1002	7-27715GB
<b>2 ENGINE</b>		
Removal and installation of the engine .....	2000	7-28220GB
Radiator and oil-cooler.....	2001	7-28040GB
Engine specifications .....	*	
Disassembly and assembly of the engine.....	*	
<b>3 FUEL SYSTEM</b>		
Fuel tank .....	3001	7-27970GB
Fuel engine system.....	*	
<b>4 ELECTRICAL SYSTEM</b>		
Electrical system, electrical and electronic troubleshooting .....	4001	7-27724GB
Inspection and maintenance of batteries and connecting a booster battery ....	4002	7-27921GB
Main and engine electronic control boxes.....	4003	7-27933GB
<b>5 UNDERCARRIAGE</b>		
Removal and installation of tracks .....	5001	7-27750GB
Removal and installation of a set of rubber tracks .....	5002	7-27760GB
Rollers.....	5003	7-27772GB
Sprocket.....	5004	7-27781GB
Idle wheel and tension shock absorber .....	5005	7-27803GB
<b>6 DRIVE TRAIN</b>		
Drive motor and final drive transmission removal and installation .....	6001	7-27841GB
Drive motor and final drive transmission disassembly and assembly.....	6002	7-28750GB
Swing reduction gear, removal and installation.....	6003	7-27830GB
Swing reduction gear, disassembly and assembly .....	6004	7-28000GB
<b>7 UNDERCARRIAGE HYDRAULICS</b>		
<b>8 UPPERSTRUCTURE HYDRAULICS</b>		
Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components .....	8000	7-27952GB
Specifications, troubleshooting, checks and hydraulic pressure settings .....	8001	7-27704GB
Hydraulic reservoir removal and installation .....	8002	7-27990GB
Main and pilot pumps, removal and installation .....	8003	7-27871GB
Main hydraulic control valve, removal and installation.....	8004	7-27880GB
Attachment cylinders, removal and installation .....	8005	7-27791GB
Hydraulic swivel, removal and installation .....	8006	7-27811GB
Pilot blocs, removal and installation.....	8007	7-28100GB
Swing motor, removal and installation .....	8008	7-28060GB
Main hydraulic pump, disassembly and assembly.....	8010	7-29770GB
Main hydraulic control valve, disassembly and assembly.....	8011	7-28200GB
Attachment cylinders, disassembly and assembly.....	8012	7-27902GB
Hand control levers, disassembly and assembly .....	8013	7-28110GB
Foot control levers, disassembly and assembly .....	8014	7-28300GB
Six-solenoid valves, disassembly and assembly .....	8015	7-27911GB
Caution valve, disassembly and assembly .....	8016	7-27942GB
Safety valve .....	8017	7-29631GB
Hydraulic swivel, disassembly and assembly .....	8018	7-28080GB
Swing motor, disassembly and assembly .....	8019	7-28011GB
Hydraulic functions.....	8020	7-28481GB

DIVISION/SECTION	SECTION N°	REFERENCE N°
<b>9 UPPERSTRUCTURE</b>		
Quick coupler .....	9000	9-93630GB
Upperstructure, turntable and counterweight .....	9002	7-27982GB
Boom, dipper and bucket .....	9003	7-27963GB
Seat and seat belt .....	9004	7-28120GB
Cab and cab equipment .....	9005	7-28022GB
Air conditioning troubleshooting .....	9006	9-88730GB
Air conditioning unit disassembly and assembly .....	9007	██████████
Air conditioning servicing .....	9008	██████████
Air conditioning components .....	9009	██████████
Large format electrical schematic .....	Pocket	9-88430
Large format hydraulic schematic .....	Pocket	9-88380
Hydraulic schematic with dozer blade (Huchida pump) .....	Pocket	7-29592
Hydraulic schematic with dozer blade (Kawasaki pump) .....	Pocket	9-54670

\* Consult the Engine Service Manual

██████████ Sections to be distributed at a later date

NOTE: CNH Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

# Section

# 1001

**SAFETY, GENERAL INFORMATION  
AND TORQUE SPECIFICATIONS**

## TABLE OF CONTENTS

GENERAL INFORMATION .....	3
SAFETY .....	4
STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS.....	6



**WARNING** : *This symbol is used in this manual to indicate important safety messages. Whenever you see this symbol, carefully read the message that follows, as there is a risk of serious injury.*

## GENERAL INFORMATION

### Cleaning

Clean all metal parts except bearings, in a suitable cleaning solvent or by steam cleaning. Do not use caustic soda for steam cleaning. After cleaning, dry and put oil on all parts. Clean oil passages with compressed air. Clean bearings in a suitable cleaning solvent, dry the bearings completely and put oil on the bearings.

### Inspection

Check all parts when the parts are disassembled. Replace all parts that have wear or damage. Small scoring or grooves can be removed with a hone or crocus cloth. Complete a visual inspection for indications of wear, pitting and their replacement of parts necessary to prevent early failures.

### Bearings

Check bearings for easy action. If bearings have a loose fit or rough action replace the bearing. Wash bearings with a suitable cleaning solvent and permit to air dry. **DO NOT DRY BEARINGS WITH COMPRESSED AIR.**

### Needle bearings

Before you press needle bearings in a bore always remove any metal protrusions in the bore or edge of the bore. Before you press bearings into position put petroleum jelly on the inside and outside diameter of the bearings.

### Gears

Check all gears for wear and damage. Replace gears that have wear or damage.

### Oil seals, O-rings and gaskets

Always install new oil seals, O-rings and gaskets. Put petroleum jelly on seals and O-rings.

### Shafts

Check all shafts that have wear or damage. Check the bearing and oil seal surfaces of the shafts for damage.

### Service parts

Always install genuine Case service parts. When ordering refer to the Parts Catalog for the correct part number of the genuine Case replacement items. Failures due to the use of other than genuine Case replacement parts are not covered by warranty.

### Lubrication

Only use the oils and lubricants specified in the Operator's or Service Manuals. Failures due to the use of non-specified oils and lubricants are not covered by warranty.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)