

CRAWLER EXCAVATOR CX160B-CX180B SERVICE MANUAL

TABLE OF CONTENTS

| DIVISION/SECTION | SECTION N° | REFERENCE N° |
|--|------------|----------------|
| 1 GENERAL INFORMATION | | |
| Safety, general information and standard torque data | 1001 | 7-27691EN |
| General specifications and special torque setting..... | 1002 | SC160B1002-0EN |
| 2 ENGINE | | |
| Engine specifications | * | |
| Disassembly and assembly of the engine | * | |
| 3 FUEL SYSTEM | | |
| Fuel tank | 3001 | SM160B3001-0EN |
| Fuel engine system | * | |
| 4 ELECTRICAL SYSTEM | | |
| Electrical system, electrical and electronic troubleshooting..... | 4001 | SC210B4001-1EN |
| Electrical equipment and electrical circuit diagrams | 4020 | SC210B4020-0EN |
| 5 UNDERCARRIAGE | | |
| Removal and installation of tracks | 5001 | SM160B5001-0EN |
| Rollers | 5003 | SM160B5003-0EN |
| Sprocket | 5004 | SM160B5004-0EN |
| Idler wheel and tension shock absorber | 5005 | SM160B5005-0EN |
| 6 DRIVE TRAIN | | |
| Drive motor and final drive transmission removal and installation | 6001 | SM160B6001-0EN |
| Drive motor and final drive transmission disassembly and assembly | 6002 | SM160B6002-0EN |
| Swing reduction gear, removal and installation..... | 6003 | SM160B6003-0EN |
| Swing reduction gear, disassembly and assembly..... | 6004 | SM210B6004-0EN |
| 7 UNDERCARRIAGE HYDRAULICS | | |
| 8 UPPERSTRUCTURE HYDRAULICS | | |
| Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components | 8000 | SM160B8000-0EN |
| Specifications, troubleshooting, checks and hydraulic pressure settings..... | 8001 | SC160B8001-0EN |
| Hydraulic reservoir removal and installation | 8002 | SM160B8002-0EN |
| Attachment cylinders, removal and installation | 8005 | SM160B8005-0EN |
| Hydraulic swivel, removal and installation | 8006 | SM160B8006-0EN |
| Pilot blocs, removal and installation | 8007 | SM160B8007-0EN |
| Swing motor, removal and installation..... | 8008 | SM160B8008-0EN |
| Main hydraulic pump, disassembly and assembly | 8010 | SM160B8010-0EN |
| Main hydraulic control valve, disassembly and assembly | 8011 | SM160B8011-0EN |
| Hand control levers, disassembly and assembly | 8013 | SM160B8013-0EN |
| Foot control levers, disassembly and assembly | 8014 | SM160B8014-0EN |
| Caution valve, disassembly and assembly..... | 8016 | SM160B8016-0EN |
| Swing motor, disassembly and assembly | 8019 | SM160B8019-0EN |
| Hydraulic functions..... | 8020 | SC160B8020-1EN |
| Hydraulic component functions | 8030 | SC160B8030-0EN |

| DIVISION/SECTION | SECTION N° | REFERENCE N° |
|--|------------|----------------|
| 9 UPPERSTRUCTURE | | |
| Quick coupler..... | 9000 | SM160B9000-0EN |
| Upperstructure, turntable and counterweight..... | 9002 | SM160B9002-0EN |
| Boom, dipper and bucket..... | 9003 | SM160B9003-0EN |
| Seat, removal and installation..... | 9004 | SM160B9004-0EN |
| Cab and cab equipment..... | 9005 | SM160B9005-0EN |
| Air conditioner functions and troubleshooting..... | 9006 | SC210B9006-0EN |
| Large size hydraulic schematics..... | Pocket | 87593994B |
| Large size electrical schematics..... | Pocket | 87594000A |

* Consult the Engine Service Manual

NOTE: CNH Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

Section

1001


**SAFETY, GENERAL INFORMATION
AND TORQUE SPECIFICATIONS**

TABLE OF CONTENTS

GENERAL INFORMATION 3

SAFETY 4

STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS..... 6



WARNING : *This symbol is used in this manual to indicate important safety messages. Whenever you see this symbol, carefully read the message that follows, as there is a risk of serious injury.*

GENERAL INFORMATION

Cleanning

Clean all metal parts except bearings, in a suitable cleaning solvent or by steam cleaning. Do not use caustic soda for steam cleaning. After cleaning, dry and put oil on all parts. Clean oil passages with compressed air. Clean bearings in a suitable cleaning solvent, dry the bearings completely and put oil on the bearings.

Inspection

Check all parts when the parts are disassembled. Replace all parts that have wear or damage. Small scoring or grooves can be removed with a hone or crocus cloth. Complete a visual inspection for indications of wear, pitting and the replacement of parts necessary to prevent early failures.

Bearings

Check bearings for easy action. If bearings have a loose fit or rough action replace the bearing. Wash bearings with a suitable cleaning solvent and permit to air dry. **DO NOT DRY BEARINGS WITH COMPRESSED AIR.**

Needle bearings

Before you press needle bearings in a bore always remove any metal protrusions in the bore or edge of the bore. Before you press bearings into position put petroleum jelly on the inside and outside diameter of the bearings.

Gears

Check all gears for wear and damage. Replace gears that have wear or damage.

Oil seals, O-rings and gaskets

Always install new oil seals, O-rings and gaskets. Put petroleum jelly on seals and O-rings.

Shafts

Check all shafts that have wear or damage. Check the bearing and oil seal surfaces of the shafts for damage.

Service parts

Always install genuine Case service parts. When ordering refer to the Parts Catalog for the correct part number of the genuine Case replacement items. Failures due to the use of other than genuine Case replacement parts are not covered by warranty.

Lubrication

Only use the oils and lubricants specified in the Operator's or Service Manuals. Failures due to the use of non-specified oils and lubricants are not covered by warranty.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com