

Mini Excavators

CX16B and CX18B

SERVICE MANUAL

CX16B and CX18B

SECTION 1

HOW TO USE

INDEX

Sections index	1-1
Introduction	1-4
Manual handling	1-4
Symbols and indications	1-5
Features of the manual	1-6
Manual composition	1-6
Brief information for manual consultation	1-8

SECTIONS INDEX**PAGES****SECTION 1 - HOW TO USE**

Sections index	1-1
Introduction	1-4
Features of the manual	1-5

SECTION 2 - SAFETY RULES

Safety rules	S1
Safety signs	S38

SECTION 3 - PRELIMINARY

General precautions for repairs	3-1
Escaping procedure in case of emergency	3-6
International unit conversion system	3-7

SECTION 4 - SPECIFICATION

Foreword	4-1
Identification data	4-2
Noise levels (2000/14/EC)	4-3
Summary plate for maintenance operations	4-4
Basic components of the mini excavator	4-5
Technical specifications	4-7
Digging performances (canopy)	4-8
Digging performances (cab)	4-9
Transport dimensions (canopy)	4-10
Transport dimensions (cab)	4-11
Lifting capacities (cab)	4-12
Lifting capacities (canopy)	4-13
Machine and components weight (dry)	4-14
Buckets application	4-15
Filling chart	4-16

SECTION 5 - TOOLS

Tools of cylinders	5-1
Tool of hydraulic pump	5-4
Tool of pilot valve track	5-4
Tool of roller track	5-4
Tool of idler adjuster	5-5
Tools of engine	5-5
Tools of travel motor	5-8

SECTION 6 - STANDARD MAINTENANCE TIME TABLE

Preface	6-1
Standard working time table for the maintenance	6-2

SECTION 7 - MAINTENANCE STANDARDS AND TEST PROCEDURES

How to use maintenance standards and precautions	7-1
Performance inspection standard table	7-2
Measuring engine speed	7-4
Measuring hydraulic oil pressure	7-5
Measuring travel performances	7-8
Measuring slew performances	7-10
Measuring attachment operating performances	7-12
Measuring slew bearing performances	7-14
Measuring crawler tension	7-15

SECTION 8 - HYDRAULIC SYSTEM

Function and features of hydraulic circuit	8-1
Hydraulic circuits and components	8-2
Hydraulic circuit operation	8-6

SECTION 9 - ELECTRICAL SYSTEM

How to read circuit diagram	9-1
-----------------------------------	-----

SECTION 10 - ATTACHMENT

Attachment assy and name	10-1
Bucket	10-2
Arm	10-5
Boom	10-10
Swing	10-15
Dozer	10-22
Hydraulic cylinders	10-26

SECTION 11 - UPPER STRUCTURE

Canopy	11-1
Cab	11-4
Guard	11-6
Floor plate	11-10
Battery	11-13
Counterweight	11-14
Fuel tank	11-17
Hydraulic oil tank	11-20
Air cleaner	11-25
Muffler	11-27
Hydraulic pump	11-28
Radiator	11-43
Engine	11-47
Control valve	11-49
Solenoid valve	11-84
Pilot valve	11-86
Pilot valve travel	11-96
Slew motor	11-105
Joint swivel	11-139
Selector valve	11-154
Upper frame	11-159

SECTION 12 - TRAVEL SYSTEM

Low structure	12-1
Crawler	12-3
Slide plate	12-12
Roller tracks	12-14
Idler adjuster	12-19
Sprocket	12-28
Travel motor	12-29
Slew bearing	12-71
Lower frame	12-76

SECTION 13 - TROUBLESHOOTING HYDRAULIC SYSTEM

General precautions	13-1
Trouble diagnosis: Hydraulic	13-2
Troubleshooting	13-3

SECTION 14 - TROUBLESHOOTING ELECTRICAL SYSTEM

Trouble diagnosis: Electrical	14-1
Troubleshooting	14-2

SECTION 15 - TROUBLESHOOTING ENGINE

Trouble diagnosis: Engine	15-1
Troubleshooting	15-2

SECTION 16 - ENGINE

Specifications and Performance	16-1
Cross Sectional Views	16-15
Cooling water, lubricating oil and fuel oil	16-17
Troubleshooting	16-21
Measuring instruments	16-25
Measurement, inspection and adjustment	16-29
Adjustment the valve head clearance	16-31
Checking the v-belt tension	16-32
Measuring and checking the injection pressure and spray patterns of the fuel injection valve	16-32
Checking and adjustment the fuel injection timing	16-36
Adjustment the no-load maximum (or minimum) revolutions	16-38
Checking the cooling water system and radiator for water leakage	16-38
Checking the battery	16-39
Checking the sensors	16-41
Checking the oil cooler	16-42
Checking the piston cooling nozzle	16-43
Measuring Procedure, Service Data and Corrective Action	16-45
Disassembly and reassembly	16-73
Service data	16-83
Tightening torque	16-89
Fuel injection pump for indirect injection system	16-91
Fuel Injection Pump for Direct Injection System	16-97
Governor	16-111
Turbocharger	16-123
Service information for CARB ULG regulation	16-129

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com