

CX700 Crawler Excavators

Table of Contents

DIVISION/SECTION	SECTION N°	REFERENCE N°
1 GENERAL INFORMATION		
Safety, general information and standard torque data	1001	7-27691EN
General specifications and special torque setting.....	1002	9-94060EN
2 ENGINE		
Radiator and engine removal and installation	2001	9-94480EN
Engine specifications	*	
Disassembly and assembly of the engine.....	*	
3 FUEL SYSTEM		
Fuel tank, removal and installation.....	3001	9-94470EN
Fuel engine system.....	*	
4 ELECTRICAL SYSTEM		
Electrical system, electrical and electronic troubleshooting.....	4001	9-94070EN
Inspection and maintenance of batteries and connecting a booster battery....	4002	9-36830EN
Computer and engine controller, removal and installation	4003	9-94510EN
5 UNDERCARRIAGE		
Removal and installation of tracks	5001	9-36860EN
Rollers.....	5003	9-94340EN
Sprocket	5004	9-36890EN
Idler wheel and tension shock absorber	5005	9-94350EN
6 DRIVE TRAIN		
Travel-motor reduction gear assembly, removal and installation.....	6001	9-94440EN
Travel hydraulic motor, disassembly and assembly.....	6002	9-94620EN
Swing reduction gear, removal and installation.....	6003	9-94450EN
Swing reduction gear, disassembly and assembly.....	6004	9-42630EN
Travel reduction gear, disassembly and assembly	6005	9-94610EN
7 UNDERCARRIAGE HYDRAULICS		
8 UPPERSTRUCTURE HYDRAULICS		
Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components	8000	9-94430EN
Specifications, troubleshooting, checks and hydraulic pressure settings.....	8001	9-94080EN
Hydraulic reservoir removal and installation	8002	9-94490EN
Main hydraulic pump and pilot pumps, removal and installation	8003	9-94540EN
Main hydraulic control valve, removal and installation	8004	9-94500EN
Attachment cylinders, removal and installation	8005	9-94810EN
Hydraulic swivel, removal and installation.....	8006	9-94600EN
Pilot blocs, removal and installation	8007	9-94520EN
Swing motor, removal and installation.....	8008	9-94420EN
Main hydraulic pump, disassembly and assembly	8010	9-94590EN
Main hydraulic control valve, disassembly and assembly	8011	9-94780EN
Attachment cylinders, disassembly and assembly	8012	9-94580EN
Hand control levers, disassembly and assembly	8013	9-94630EN
Foot control levers, disassembly and assembly	8014	9-40991EN
Eight-solenoid valves, disassembly and assembly	8015	9-42521EN
Caution valve, disassembly and assembly.....	8016	9-94530EN
Safety valve.....	8017	9-94690EN
Hydraulic swivel, disassembly and assembly.....	8018	9-94410EN
Swing motor, disassembly and assembly	8019	9-42530EN

DIVISION/SECTION	SECTION N°	REFERENCE N°
Hydraulic functions.....	8020	9-94090EN
Fan motor, removal and installation	8022	9-94660EN
Fan motor, disassembly and assembly	8023	9-94670EN
Fan pump, removal, disassembly, assembly and installation	8024	9-94680EN
Hydraulic component functions.....	8030	9-94130EN
9 UPPERSTRUCTURE		
Upperstructure, turntable and counterweight.....	9002	9-94560EN
Boom, dipper and bucket	9003	9-94570EN
Seat and seat belt.....	9004	9-40960EN
Cab and cab equipment.....	9005	9-94650EN
Air conditioning troubleshooting.....	9006	[REDACTED]
Air conditioning unit disassembly and assembly.....	9007	9-94640EN
Air conditioning servicing	9008	[REDACTED]
Air conditioning components.....	9009	[REDACTED]
Removal and installation attachment, counterweight and side fram	9010	9-94140EN
Large size hydraulic schematic	Pocket	9-93940EN
Large size electrical schematic	Pocket	9-93930EN

* Consult the Engine Service Manual

[REDACTED] Sections to be distributed at a later date

NOTE: CNH Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

1001

Section

1001

**SAFETY, GENERAL INFORMATION
AND TORQUE SPECIFICATIONS**

TABLE OF CONTENTS

GENERAL INFORMATION	3
SAFETY.....	4
STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS.....	6



WARNING : *This symbol is used in this manual to indicate important safety messages. Whenever you see this symbol, carefully read the message that follows, as there is a risk of serious injury.*

GENERAL INFORMATION

Cleaning

Clean all metal parts except bearings, in a suitable cleaning solvent or by steam cleaning. Do not use caustic soda for steam cleaning. After cleaning, dry and put oil on all parts. Clean oil passages with compressed air. Clean bearings in a suitable cleaning solvent, dry the bearings completely and put oil on the bearings.

Inspection

Check all parts when the parts are disassembled. Replace all parts that have wear or damage. Small scoring or grooves can be removed with a hone or crocus cloth. Complete a visual inspection for indications of wear, pitting and the replacement of parts necessary to prevent early failures.

Bearings

Check bearings for easy action. If bearings have a loose fit or rough action replace the bearing. Wash bearings with a suitable cleaning solvent and permit to air dry. DO NOT DRY BEARINGS WITH COMPRESSED AIR.

Needle bearings

Before you press needle bearings in a bore always remove any metal protrusions in the bore or edge of the bore. Before you press bearings into position put petroleum jelly on the inside and outside diameter of the bearings.

Gears

Check all gears for wear and damage. Replace gears that have wear or damage.

Oil seals, O-rings and gaskets

Always install new oil seals, O-rings and gaskets. Put petroleum jelly on seals and O-rings.

Shafts

Check all shafts that have wear or damage. Check the bearing and oil seal surfaces of the shafts for damage.

Service parts

Always install genuine Case service parts. When ordering refer to the Parts Catalog for the correct part number of the genuine Case replacement items. Failures due to the use of other than genuine Case replacement parts are not covered by warranty.

Lubrication

Only use the oils and lubricants specified in the Operator's or Service Manuals. Failures due to the use of non-specified oils and lubricants are not covered by warranty.

Thank you so much for reading.

**Please click the “Buy Now!”
button below to download the
complete manual.**

Buy Now



After you pay.

**You can download the most
perfect and complete manual in
the world immediately.**

Our support email:

ebooklibonline@outlook.com