

TABLE OF CONTENTS

585, 685, 595, 695 Series Tractors

SERIES	SECTION	DESCRIPTION	PUBLICATION
10	GENERAL		
	1000	General Specifications	8-57670
	1005	Special Tools	8-59410
	1230	Fuel System Specifications	8-57721
	1250	Steering System Specifications	8-57570
	1280	Hydraulic System Specifications	8-56930
20	ENGINES		
	2120	Engine Removal - Tractor with XL Cab	8-57160
	2201	Engine Troubleshooting	8-56590
	2310	Separating the Tractor - Tractor without Cab	8-56660
	2315	4 Cylinder Engine Cylinder Head, Valves and Rockers	8-56600
	2325	4 Cylinder Engine Cylinder Block, Pistons and Conrods	8-56610
	2330	4 Cylinder Engine Camshaft and Idler Gear	
		- Tractor without Air Conditioning	8-57100
	2331	4 Cylinder Engine Camshaft and Idler Gear	
		- Tractor with Air Conditioning	8-57190
	2335	4 Cylinder Engine Crankshaft, Bearings and Balancer	8-56620
	2345	4 Cylinder Engine Lubrication System	8-56630
	2355	Engine Cooling System	8-56640
	2410	Engine Removal - Tractor without Cab	8-56670
30	FUEL SYSTEM		
	3310	Fuel System	8-56650
	3311	Fuel Injection Pump VE	8-59020
	3312	Fuel Injection Pump VA	8-57630
	3313	Fuel Injectors	8-57640
	3315	Fuel Tanks - Tractor with XL Cab	8-57180
40	ELECTRICAL		
	4001*	Electrical Troubleshooting and Schematics	7-35861
	4201	Electrical System Troubleshooting.....	8-57010
	4210	Wiring Diagram - Tractor without Cab.....	8-57050
	4225	Wiring Diagram - Tractor with XL Cab.....	8-57080
	4235	Battery Servicing and Testing	8-56980
	4240	Lucas A115 and A127 45 Ampere Alternators and Regulators	8-57030
	4241	Lucas A133 65 Ampere Alternator and Regulator	8-57230
	4330	Starter Motors	8-57020
50	STEERING		
	5015	Steering Pump Removal	8-57600
	5020	Steering Hand Pump	8-56470
	5330	Front Axles 2WD Tractor	8-56700
	5340	Front Axle - Cast Heavy Duty Fixed	8-58940
	5420	Steering Cylinder, 2WD	8-57410
	5425	Steering Cylinder, MFD	8-56460
	5430	Steering Cylinder - Cast Axle	8-58930

Reprinted

SERIES	SECTION	DESCRIPTION	PUBLICATION
60		POWER TRAIN	
	6001	Clutch Controls, Linkage and Thrust Bearing	8-56520
	6030	Rear Axles	8-56480
	6241	Clutch (Rockford Type)	8-56681
	6305	Steering Support Removal - Tractor with XL Cab	8-57210
	6306	Steering Support Removal - Tractor without Cab	8-57240
	6310	Transmission Speedbox	8-56950
	6315	Transmission Rangebox - with Light Duty Park Brake	8-56960
	6320	Power Shift Transmission	8-56970
	6325	Forward/Reverse Transmission - Tractor without Cab	8-56980
	6325	Forward/Reverse Transmission - Tractor with XL Cab	7-35910
	6330	Differential - Transmission with Light Duty Park Brake	8-57290
	6331	Differential - Transmission with Heavy Duty Park Brake	8-57650
	6335	Transmission Rangebox - with Heavy Duty Park Brake	8-56990
	6340	Power Take Off (PTO) Clutch and Lower Shaft - 2WD	8-56540
	6341	Clutch (Laycock Type)	8-56690
	6343	PTO Clutch and Lower Shaft - MFD Tractor	8-59360
	6410	Speedbox Removal - Tractor without Cab	8-56830
	6411	Rangebox Removal - Tractor without Cab	8-57370
	6420	Speedbox Removal - Tractor with XL Cab	8-56850
	6421	Rangebox Removal - Tractor with XL Cab	8-57360
	6430	Creeper Speed Transmission - Tractor with XL Cab	7-35880
	6430	Creeper Speed Transmission - Tractor without Cab	7-36620
	6465	Center Drive MFD Front Axles - (ZF Types APL 325 and APL 330)	8-56530
	6470	Center Drive MFD Front Axle - (ZF Type APL 335)	8-58230
	6471	Axle Hubs and Planetaries (Carraro Type 707-164 and 707 STD-164).....	7-36731
	6472	Axle Removal and Differential (Carraro Type 707-164 and 707 STD-164).....	7-36741
	6473	Carraro Drop Box.....	7-37740
	6475	Center Drive MFD Transfer Gearbox with Dog Clutch	8-57401
	6480	Center Drive MFD Transfer Gearbox with Multi Plate Clutch	8-57220
	6485	MFD Drive Shaft	8-57390
70		BRAKES	
	7105	Disc Brakes	8-57480
	7110	Brake Master Cylinders and Controls	8-57660
	7115	Park Brake - 2WD Tractors	8-58250
	7120	Park Brake - MFD Tractors	8-58260
80		HYDRAULIC SYSTEM	
	8001*	Hydraulic Schematic and Troubleshooting	8-57581
	8005	Hitch Adjustments	8-56920
	8010	Multiple Control Valve (MCV)	8-56870
	8015	Unloading and Flow Control Valve	8-56880
	8020	Filter and Pump	8-56860
	8025	Bosch Remote Valves	8-56890
	8030	Draft Cylinder and Rockshaft	8-56900
	8035	Control Levers and Raise Rate Valve	8-56910
	8040	Hydraulic Housing Removal	8-57250

CHASSIS AND ACCESSORIES

9001*	Pedal and Lever Adjustment	7-35890
9205	Air Conditioning System Troubleshooting	8-58290
9215	Testing Air Conditioning System	8-58300
9225	Servicing Air Conditioning System	8-58900
9235	Servicing Air Conditioning System Components	8-58310
9240	Hood, Fender and Panels - Tractor without Cab	8-56810
9240	Hood and Panels	7-35940
9440	Cab Removal - Tractor with XL Cab	8-56750
9441	Servicing XL Cab	8-58270

* Schematic Set Sections

Section 1000

GENERAL SPECIFICATIONS 85 Series Tractors

SERIAL NUMBERS

Compiled in this manual are the operating and maintenance instructions for the 85 Series Agricultural Tractors

When in need of service parts always quote the tractor, transmission unit, and engine serial numbers, including prefix and suffix letters.

If information is required that is not available in this manual see the nearest authorized Case Dealer.

Transmission Serial Number

EXAMPLE: 293805 BTY

The suffix letters, BTY denote the build of the unit.

The first letter denotes the type of drive train, B = fast speed transmission,
A or D = slow speed transmission.

The second letter denotes the bevel gear ratio,
T = 11:52, S = 14:51 and R = 12:53.

The third letter denotes the operating speeds for the PTO and the number of splines on the upper and lower shafts as shown below.

U	=	555 r/min	6 splines upper shaft
V	=	1000 r/min	6 splines lower shaft
W	=	580 r/min	6 splines upper shaft
X	=	606 r/min	6 splines upper shaft
Y	=	611 r/min	6 splines upper shaft
Z	=	614 r/min	6 splines upper shaft

V denotes that only the lower PTO shaft is fitted, as for compressor drive. When applicable, dual speed installations are indicated by a fourth suffix letter D.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com