

9100 Series Tractor
Service Manual

Table of Contents

	Description	Section No.	Form No.
General		Tab 1	
Safety Suggestions			M00103
Metric Conversion			M00104
Torque Values			M00105
Specifications and Capacities			
9110, 9130, Puma and Wildcat			37-189
9150, Bearcat and Cougar			37-156
9170, 9180, PIN 17900699 and After			
Panther and Lion PIN 17900255 and After			37-188
Panther and Lion Prior to PIN 17900255			37-175
Specifications, Engine 6-830	1426		8-28421
Engines 9110, 9130, Puma and Wildcat Only		Tab 2	
Aftercooler	2011		8-91700
Cylinder Head and Valve Train	2415		8-28430
Cylinder Block - Camshaft, Pistons, Rods, Sleeves, Bearings, Camshaft, Seals and Flywheel	2425		8-28440
Lubrication System - Oil Pan, Oil Pump, Oil Cooler and Oil Filter Housing	2445		8-28450
Cooling System - Thermostat, Water Pump, Fan Pulley and Belt Tensioner	2455		8-28460
Turbocharger	2465		8-28470
Turbocharger Failure Analysis	2565		9-78235
Fuel System 9110, 9130, Puma and Wildcat Only		Tab 3	
Fuel System and Filters	3410		8-28480
Injection Pump - Pump Drive Gear, Timing Pin, Fuel Shutoff Solenoid and Primer Pump	3412		8-28490
Fuel Injectors	3413		8-28500
Electrical		Tab 4	
Wiring Schematics			
9110 and 9130 PIN 17900564 and Below			
9150 PIN 17900705 and Below			
Puma PIN 17900250 and Below			
Bearcat/Cougar PIN 17900270 and Below			37-16OR1
9110 and 9130 PIN 17900564 and After			
9150 PIN 17900705 and After			
9170 and 9180 PIN 17900669 and After			
Puma PIN 17900250 and After			
Wildcat PIN 1790001 and After			
Bearcat/Cougar PIN 17900270 and After			
Panther/Lion PIN 17900255 and After			37-187
9170/9180 SN 17900150			
Panther/Lion SN 6501 and After			37-178
Solid State Electronic Dash and ROPS Instrument Panel	4003		8-81130
Alternators			
Niehoff Model N1056			37-155
Motorola LHB Series			37-169

Reprinted

**9100 Series Tractor
Service Manual
Table of Contents**

Description	Section No.	Form No.
Steering	Tab 5	
Steering Column		37-093
Steering Control Unit.....		37-153
Front Axle Steering.....	5001	8-81100
 Power Train	 Tab 6	
Controlled Traction Electric Shift Unit.....		M0100
K598-60/70 and K598-64/74 Axle.....		37-163
K598-60/70 Axle ("NOK" Seal).....	6002	8-81090
AP3445 Axle		37-171
K592-20/30 Axle.....	6003	8-81120
EW-16 Powershift Transmission, Removal and Installation		37-174
EW-16 PowerShift Transmission, Repair		37-168
Powershift Transmission Charge Pump	6012	8-81660
PTO Drive Unit		37-170
 Brakes	 Tab 7	
Caliper Disc Brake System		37-179
 Hydraulics	 Tab 8	
Hydraulic Specifications and Schematics		37-166
Three Point Hitch Alignment and Valve Service	8021	8-81670
 Chassis	 Tab 9	
Cab Removal and Installation.....		37-172
Heating, Ventilating, Air Conditioning 9110, 9130, 9150, Puma, Wildcat, Bearcat and Cougar		37-177
Heating, Ventilating, Air Conditioning 9170, 9180, Panther and Lion.....		37-136
Air Ride Seat		37-180
 How It Works	 Tab 10	

Safety Suggestions

The manufacturer, dealer and/or agent can not anticipate every possible circumstance that might involve potential hazard. The Warnings, Cautions and Safety Suggestions in this manual are therefore not all inclusive. If an operating procedure, tool device, maintenance or work method not specifically recommended is used, you must also ensure that the product will not be damaged or made unsafe by the procedures you choose.



Whenever you see this symbol, it means Attention! Become Alert! Your safety is involved.

- **Always** observe and heed all caution and warning signs or other decals wherever they may appear.
- **Always** install the locking bar between the front and rear frames whenever possible -
 - A. Before service work is done near center of tractor
 - B. Before lifting or transporting the tractor on another vehicle
 - C. Before operating stationary PTO driven equipment
- **Never** perform any service or maintenance in the center hinge area of a 4 wheel-drive articulated tractor unless the engine is shut off and the switch key removed.
- **Never** clean, service or adjust the tractor or any equipment operated by it until the tractor engine is shut down and all machine motion is stopped, unless specific instructions are given for a particular repair or procedure.
- **Always** direct compressed air away from the body and towards a safe area. Use only an approved air nozzle and wear adequate eye protection.
- **Always** keep hand tools in good condition and proper working order. Replace any that are damaged.
- **Always** have electrical equipment and cords serviced and/or inspected periodically. Use only properly grounded electrical equipment.
- **Always** keep shop floors dry and clean to prevent falls of people and/or equipment.
- **Always** weld and/or grind only in safe areas away from any flammable or explosive materials.
- **Always** read the operation instructions and understand the proper use of test equipment or other special tooling.
- **Always** inspect all lift tie chains and/or slings periodically, replace any that show signs of damage.
- **Always** use a rated alloy chain for lifting or a sling of a size and type adequate for the intended usage.
- **Always** relieve all pressure in air, oil or water systems before any lines, fittings or related items are disconnected or removed. Be alert for possible fluid pressure or spring force when disconnecting or repairing any device from a system that utilizes fluid pressure or spring force.
- **Always** reinstall all fasteners with the same part number. **Do not** use a lesser quality fastener if replacements are necessary.
- **Always** wear eye protection when charging, boosting or performing other services to or around batteries.
- **Never** spin or rotate bearings with compressed air.
- **Never** attempt to lift or jack an object that exceeds the weight capacity of the lifting fixture (jack, hoist, fork lift etc.).
- **Never** wear loose fitting clothing around rotating shafts or machinery. Long hair should always be netted.
- **Do not** try to locate high pressure fluid leaks with your hands. Use cardboard or wood to search for suspected leaks. High pressure fluid escaping from a very small area can be nearly invisible. If injured by high pressure fluid, seek immediate medical attention. Serious infection or reaction can develop if proper medical treatment is not administered immediately.
- **Do not** use unguarded grinding tools or other power tools requiring a guard. Wear safety glasses and safety shoes whenever they may be required.

- **Do not** attempt to separate or disassemble hydraulic cylinders with the use of compressed air or hydraulic pressure.
- **Do not** attempt tire repairs unless you have the proper equipment and know how to perform the repair correctly and safely.
- **Do not** work on anything that is supported only by lift jacks or a hoist. **Always** use adequate blocks or proper stands to support the product before performing any service work.
- Use **only** approved cleaning solvents. **Never** use gasoline or other flammable or explosive materials for cleaning.
- Report or correct any unsafe areas or practices immediately.
- **Before** doing any electrical work, disconnect the battery. Do not damage wiring during removal operations. Reinstall the wiring so it is not damaged nor will it be damaged in operation by contacting sharp corners, or by rubbing against objects or sharp corner.
- If guards or shields must be removed to perform the repair or service, use extra caution. After the repair is completed, be sure to reinstall any guard or shield that was removed.

These are a few of the most common causes of personal injuries. There are a great many more and shops are continually finding accidents happening that they never heard of before.

The only known way to reduce personal injury, is to teach and practice **Safety First**.

GENERAL SPECIFICATIONS AND CAPACITIES

**Case IH 9110 and 9130 Series
P.I.N. 17900564 and After**

**Steiger Puma 1000 Series
P.I.N. 17900250 and After**

**Steiger Wildcat 1000 Series
P.I.N. 17907001 and After**

Service Manual

CASE CORPORATION

37-189 (2M, 10-87)

Issued October, 1987
Printed in U.S.A.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com