SERVICE MANUAL QUADTRAC TRACTOR

9370 9380 9390

8-83394

- 1. Trim along dashed line.
- 2. Slide into pocket on Binder Spine.

TYPE 1-4

SERVICE MANUAL QUADTRAC TRACTOR

9370 9380 9390

8-83394

- 1. Trim along dashed line.
- 2. Slide into pocket on Binder Spine.

SERVICE MANUAL QUADTRAC TRACTOR

9370 9380 9390

8-83394

- 1. Trim along dashed line.
- 2. Slide into pocket on Binder Spine.

TYPE 1-4

SERVICE MANUAL QUADTRAC TRACTOR

9370 9380 9390

8-83394

- 1. Trim along dashed line.
- 2. Slide into pocket on Binder Spine.

TYPE 1-4

TYPE 1-4

9370, 9380, 9390 and Quadtrac Tractor Service Manual Table of Contents

General	Section	Form No.
Loctite Product Chart		8-98902
General Information and Specifications	1003	7-65420
Engine		
Engine Removal - 9370, 9380	2001	8-83900
Fuel System		
Fuel System and Filters	3001	8-83620
Electrical		
Wiring Schematic and Troubleshooting	4001	8-83240
Starting Motor - Delco Remy Series 42-MT		8-83490
Battery Servicing and Testing	4003	8-83530
Delco 21-SI Alternator Testing and Repair		8-83450
Wiring Schematic and Troubleshooting - Quadtrac	4015	8-84030
Steering		
Tilt/Telescoping Steering Column	5001	8-83470
"Wide Angle" Steering Control Unit	5002	8-83790
Steering Priority Valve - 9370, 9380, 9390 and Quadtrac	5004	8-83760
Power Train		
Powershift Transmission Removal - 9370, 9380, 9390	6001	8-83910
PTO Driveline Hanger Bearing	6002	8-83720
EW-16 Powershift Transmission Service	6004	8-83410
PTO Drive Unit Repair		8-83420
Rear Driveline Support Bearing	6006	8-83710
PTO Drop Box Unit Repair		8-83440
Differential Lock Electric Shift Motor Testing & Repair	6009	8-82651
694-60/70 and 694-62/72 Raba Axle Repair		8-83120
Charge Pump Repair EW-16 Powershift HM-2 and HM-24 SynchroShift Transmission	6014	8-83460
Axle Repair - Quadtrac Model Tractors		8-83960
Rear Axle Cooling (Quadtrac)	6016	8-83970
Axle Removal and Installation - Quadtrac	6017	8-83980

CASE CORPORATION 700 State Street Racine, WI 53404 U.S.A

Reprinted

Power Train (Cont'd)

Differential Pinion Seal Replacement (in tractor) Quadtrac 6018 8-84000 Track and Undercarriage - Quadtrac 6019 8-83990 HM-2 and HM-24 SynchroShift Transmission Pressure Testing 6021 8-83260 HM-2 and HM-24 SynchroShift Transmission Removal 6022 8-83260 12 Speed SynchroShift and 24 Speed HI-LO SynchroShift Transmission Repair 6023 8-83020 Brakes Dual Stage Master Cylinder 7001 8-83310 Caliper Disc Brake System 7002 8-83330 Single Stage Master Cylinder 7003 8-83320 Hydraulic System Hydraulic Troubleshooting and Schematic - 9370, 9380 8000 8-83190 Remote Control Valve 8001 8-83560 Hydraulic Piston Pump 8003 8-83660 Hydraulic Filters 8006 8-83600 Hydraulic Filters <	Power Train (Cont'd)		
HM-2 and HM-24 SynchroShift Transmission Pressure Testing 8021 8-83270 HM-2 and HM-24 SynchroShift Transmission Removal 6022 8-83260 12 Speed SynchroShift and 24 Speed HI-LO SynchroShift Transmission Repair 8023 8-83020 Brakes Dual Stage Master Cylinder 7001 8-83310 Caliper Disc Brake System 7002 8-83320 Hydraulic System Hydraulic Troubleshooting and Schematic - 9370, 9380 8000 8-83190 Remote Control Valve 8001 8-83750 Hydraulic Piston Pump 8002 8-83650 Hydraulic Gear Pump 8003 8-84660 Hitch Valve 8005 8-84050 Hydraulic Filters 8006 8-83630 Electronic Hitch Calibration 8009 8-83170 Hydraulic Gear Pump - 9390 8010 8-84020 Hydraulic Troubleshooting and Schematics - 9390 8011 8-84020 Hydraulic Troubleshooting and Schematics - Quadtrac 8011 8-84040 TPH Valve 8013 7-8580 Axle Lubrication and Brake Circuit Troubleshooting (Quadtrac) 8014 7-87860	Differential Pinion Seal Replacement (in tractor) Quadtrac	6018	8-84000
HM-2 and HM-24 SynchroShift Transmission Removal 6022 8-83280 12 Speed SynchroShift and 24 Speed HI-LO SynchroShift Transmission Repair 6023 8-83020 Brakes Brake System 7001 8-83310 Caliper Disc Brake System 7002 8-83330 Single Stage Master Cylinder 7003 8-83320 Hydraulic System Hydraulic Troubleshooting and Schematic - 9370, 9380 8000 8-83190 Remote Control Valve 8001 8-83750 Hydraulic Fiston Pump 8003 8-83680 Hydraulic Gear Pump 8003 8-83660 Hydraulic Filters 8006 8-83630 Electronic Hitch Calibration 8009 8-83170 Hydraulic Troubleshooting and Schematics - 9390 8010 8-84020 Hydraulic Troubleshooting and Schematics - Quadtrac 8012 8-84040 TPH Valve 8013 7-85380 Axle Lubrication and Brake Circuit Troubleshooting (Quadtrac) 8014 7-87860 Chassis Cab Removal and Installation 9001	Track and Undercarriage - Quadtrac	6019	8-83990
12 Speed SynchroShift and 24 Speed HI-LO SynchroShift Transmission Repair 6023 8-83020 Brakes Dual Stage Master Cylinder 7001 8-83310 Caliper Disc Brake System 7002 8-83330 Single Stage Master Cylinder 7003 8-83320 Hydraulic System Hydraulic Troubleshooting and Schematic - 9370, 9380 8000 8-83190 Remote Control Valve 8001 8-83750 Hydraulic Piston Pump 8002 8-83650 Hydraulic Gear Pump 8003 8-83660 Hydraulic Filters 8006 8-83170 Hydraulic Filters 8006 8-83170 Hydraulic Troubleshooting and Schematics - 9390 8010 8-84050 Hydraulic Troubleshooting and Schematics - 9390 8011 8-84011 Hydraulic Troubleshooting and Schematics - Quadtrac 8012 8-84040 TPH Valve 8013 7-85380 Axle Lubrication and Brake Circuit Troubleshooting (Quadtrac) 8014 7-87860 Cab Removal and Installation 9001 8-83850	HM-2 and HM-24 SynchroShift Transmission Pressure Testing	6021	8-83270
Brakes Dual Stage Master Cylinder 7001 8-83310 Caliper Disc Brake System 7002 8-83330 Single Stage Master Cylinder 7003 8-83320 Hydraulic System Hydraulic Troubleshooting and Schematic - 9370, 9380 8000 8-83190 Remote Control Valve 8001 8-83750 Hydraulic Piston Pump 8002 8-8360 Hydraulic Gear Pump 8003 8-8360 Hydraulic Filters 8006 8-8360 Hydraulic Filters 8006 8-8310 Electronic Hitch Calibration 8009 8-83170 Hydraulic Gear Pump - 9390 8010 8-84020 Hydraulic Troubleshooting and Schematics - 9390 8011 8-84011 Hydraulic Troubleshooting and Schematics - Quadtrac 8012 8-84040 TPH Valve 8013 7-85380 Axle Lubrication and Brake Circuit Troubleshooting (Quadtrac) 8014 7-87860 Chassis Cab Removal and Installation 9001 8-83590 Drawbar Removal 9004	·		8-83260
Dual Stage Master Cylinder 7001 8-83310 Caliper Disc Brake System 7002 8-83330 Single Stage Master Cylinder 7003 8-83320 Hydraulic System Hydraulic Troubleshooting and Schematic - 9370, 9380 8000 8-83190 Remote Control Valve 8001 8-83750 Hydraulic Piston Pump 8002 8-83650 Hydraulic Gear Pump 8003 8-83660 Hitch Valve 8005 8-84050 Hydraulic Filters 8006 8-83630 Electronic Hitch Calibration 8009 8-83170 Hydraulic Gear Pump - 9390 8011 8-84020 Hydraulic Troubleshooting and Schematics - 9390 8011 8-84011 Hydraulic Troubleshooting and Schematics - Quadtrac 8012 8-84020 Hydraulic Troubleshooting and Schematics - Quadtrac 8012 8-84040 Chassis 8013 7-85380 Cab Removal and Installation 9001 8-83860 Center Hinge Bearings and Connecting Link 9002 8-83590 Drawbar Removal <td< td=""><td>12 Speed SynchroShift and 24 Speed HI-LO SynchroShift Transmission Repair</td><td>6023</td><td>8-83020</td></td<>	12 Speed SynchroShift and 24 Speed HI-LO SynchroShift Transmission Repair	6023	8-83020
Caliper Disc Brake System 7002 8-83330 Single Stage Master Cylinder 7003 8-83320 Hydraulic System Hydraulic Troubleshooting and Schematic - 9370, 9380 8000 8-83190 Remote Control Valve 8001 8-83750 Hydraulic Piston Pump 8002 8-83650 Hydraulic Gear Pump 8003 8-83660 Hitch Valve 8005 8-84050 Hydraulic Filters 8006 8-83630 Electronic Hitch Calibration 8009 8-83170 Hydraulic Gear Pump - 9390 8010 8-84020 Hydraulic Troubleshooting and Schematics - 9390 8011 8-84011 Hydraulic Troubleshooting and Schematics - Quadtrac 8012 8-84040 TPH Valve 8013 7-85380 Axle Lubrication and Brake Circuit Troubleshooting (Quadtrac) 8014 7-87860 Chassis Cab Removal and Installation 9001 8-8360 Center Hinge Bearings and Connecting Link 9002 8-83590 Drawbar Removal 9370, 9380, 9390 9004 <t< td=""><td></td><td></td><td></td></t<>			
Hydraulic System Hydraulic Troubleshooting and Schematic - 9370, 9380 8000 8-83190 Remote Control Valve 8001 8-83750 Hydraulic Piston Pump 8002 8-83650 Hydraulic Gear Pump 8003 8-83660 Hitch Valve 8005 8-84050 Hydraulic Filters 8006 8-83630 Electronic Hitch Calibration 8009 8-83170 Hydraulic Gear Pump - 9390 8010 8-84020 Hydraulic Troubleshooting and Schematics - 9390 8011 8-84011 Hydraulic Troubleshooting and Schematics - Quadtrac 8012 8-84040 TPH Valve 8013 7-85380 Axle Lubrication and Brake Circuit Troubleshooting (Quadtrac) 8014 7-87860 Chassis Cab Removal and Installation 9001 8-83960 Center Hinge Bearings and Connecting Link 9002 8-83590 Drawbar Removal 9003 8-83520 Radiator Removal - 9370, 9380, 9390 9004 8-83930 Hood and Grille - 9370, 9380, 9390 9005 8-83930			
Hydraulic Troubleshooting and Schematic - 9370, 9380 8000 8-83190 Remote Control Valve 8001 8-83750 Hydraulic Piston Pump 8002 8-83650 Hydraulic Gear Pump 8003 8-83660 Hitch Valve 8005 8-84050 Hydraulic Filters 8006 8-83630 Electronic Hitch Calibration 8009 8-83170 Hydraulic Gear Pump - 9390 8010 8-84020 Hydraulic Troubleshooting and Schematics - 9390 8011 8-84011 Hydraulic Troubleshooting and Schematics - Quadtrac 8012 8-84040 TPH Valve 8013 7-85380 Axle Lubrication and Brake Circuit Troubleshooting (Quadtrac) 8014 7-87860 Chassis Cab Removal and Installation 9001 8-83860 Center Hinge Bearings and Connecting Link 9002 8-83590 Drawbar Removal 9003 8-83520 Radiator Removal - 9370, 9380, 9390 9004 8-83930 Hood and Grille - 9370, 9380, 9390 9005 8-83930	Single Stage Master Cylinder	7003	8-83320
Remote Control Valve 8001 8-83750 Hydraulic Piston Pump 8002 8-83650 Hydraulic Gear Pump 8003 8-83660 Hitch Valve 8005 8-84050 Hydraulic Filters 8006 8-83630 Electronic Hitch Calibration 8009 8-83170 Hydraulic Gear Pump - 9390 8010 8-84020 Hydraulic Troubleshooting and Schematics - 9390 8011 8-84011 Hydraulic Troubleshooting and Schematics - Quadtrac 8012 8-84040 TPH Valve 8013 7-85380 Axle Lubrication and Brake Circuit Troubleshooting (Quadtrac) 8014 7-87860 Chassis Cab Removal and Installation 9001 8-8360 Center Hinge Bearings and Connecting Link 9002 8-83590 Drawbar Removal 9003 8-83520 Radiator Removal - 9370, 9380, 9390 9004 8-83920 Hood and Grille - 9370, 9380, 9390 9005 8-83930	•		
Hydraulic Piston Pump 8002 8-83650 Hydraulic Gear Pump 8003 8-83660 Hitch Valve 8005 8-84050 Hydraulic Filters 8006 8-83630 Electronic Hitch Calibration 8009 8-83170 Hydraulic Gear Pump - 9390 8010 8-84020 Hydraulic Troubleshooting and Schematics - 9390 8011 8-84011 Hydraulic Troubleshooting and Schematics - Quadtrac 8012 8-84040 TPH Valve 8013 7-85380 Axle Lubrication and Brake Circuit Troubleshooting (Quadtrac) 8014 7-87860 Chassis Cab Removal and Installation 9001 8-83860 Center Hinge Bearings and Connecting Link 9002 8-83590 Drawbar Removal 9003 8-83520 Radiator Removal - 9370, 9380 9004 8-83920 Hood and Grille - 9370, 9380, 9390 9005 8-83930	Hydraulic Troubleshooting and Schematic - 9370, 9380	8000	8-83190
Hydraulic Gear Pump 8003 8-83660 Hitch Valve 8005 8-84050 Hydraulic Filters 8006 8-83630 Electronic Hitch Calibration 8009 8-83170 Hydraulic Gear Pump - 9390 8010 8-84020 Hydraulic Troubleshooting and Schematics - 9390 8011 8-84011 Hydraulic Troubleshooting and Schematics - Quadtrac 8012 8-84040 TPH Valve 8013 7-85380 Axle Lubrication and Brake Circuit Troubleshooting (Quadtrac) 8014 7-87860 Chassis Cab Removal and Installation 9001 8-83860 Center Hinge Bearings and Connecting Link 9002 8-83590 Drawbar Removal 9003 8-83520 Radiator Removal - 9370, 9380 9004 8-83920 Hood and Grille - 9370, 9380, 9390 9005 8-83930			8-83750
Hitch Valve 8005 8-84050 Hydraulic Filters 8006 8-83630 Electronic Hitch Calibration 8009 8-83170 Hydraulic Gear Pump - 9390 8010 8-84020 Hydraulic Troubleshooting and Schematics - 9390 8011 8-84011 Hydraulic Troubleshooting and Schematics - Quadtrac 8012 8-84040 TPH Valve 8013 7-85380 Axle Lubrication and Brake Circuit Troubleshooting (Quadtrac) 8014 7-87860 Chassis Cab Removal and Installation 9001 8-83860 Center Hinge Bearings and Connecting Link 9002 8-83590 Drawbar Removal 9003 8-83520 Radiator Removal - 9370, 9380 9004 8-83920 Hood and Grille - 9370, 9380, 9390 9005 8-83930			8-83650
Hydraulic Filters 8006 8-83630 Electronic Hitch Calibration 8009 8-83170 Hydraulic Gear Pump - 9390 8010 8-84020 Hydraulic Troubleshooting and Schematics - 9390 8011 8-84011 Hydraulic Troubleshooting and Schematics - Quadtrac 8012 8-84040 TPH Valve 8013 7-85380 Axle Lubrication and Brake Circuit Troubleshooting (Quadtrac) 8014 7-87860 Chassis Cab Removal and Installation 9001 8-83860 Center Hinge Bearings and Connecting Link 9002 8-83590 Drawbar Removal 9003 8-83520 Radiator Removal - 9370, 9380 9004 8-83920 Hood and Grille - 9370, 9380, 9390 9005 8-83930			
Electronic Hitch Calibration 8009 8-83170 Hydraulic Gear Pump - 9390 8010 8-84020 Hydraulic Troubleshooting and Schematics - 9390 8011 8-84011 Hydraulic Troubleshooting and Schematics - Quadtrac 8012 8-84040 TPH Valve 8013 7-85380 Axle Lubrication and Brake Circuit Troubleshooting (Quadtrac) 8014 7-87860 Chassis Cab Removal and Installation 9001 8-83860 Center Hinge Bearings and Connecting Link 9002 8-83590 Drawbar Removal 9003 8-83520 Radiator Removal - 9370, 9380 9004 8-83920 Hood and Grille - 9370, 9380, 9390 9005 8-83930			
Hydraulic Gear Pump - 9390 8010 8-84020 Hydraulic Troubleshooting and Schematics - 9390 8011 8-84011 Hydraulic Troubleshooting and Schematics - Quadtrac 8012 8-84040 TPH Valve 8013 7-85380 Axle Lubrication and Brake Circuit Troubleshooting (Quadtrac) 8014 7-87860 Chassis Cab Removal and Installation 9001 8-83860 Center Hinge Bearings and Connecting Link 9002 8-83590 Drawbar Removal 9003 8-83520 Radiator Removal - 9370, 9380 9004 8-83920 Hood and Grille - 9370, 9380, 9390 9005 8-83930	•		
Hydraulic Troubleshooting and Schematics - 9390 8011 8-84011 Hydraulic Troubleshooting and Schematics - Quadtrac 8012 8-84040 TPH Valve 8013 7-85380 Axle Lubrication and Brake Circuit Troubleshooting (Quadtrac) 8014 7-87860 Chassis Cab Removal and Installation 9001 8-83860 Center Hinge Bearings and Connecting Link 9002 8-83590 Drawbar Removal 9003 8-83520 Radiator Removal - 9370, 9380 9004 8-83920 Hood and Grille - 9370, 9380, 9390 9005 8-83930			
Hydraulic Troubleshooting and Schematics - Quadtrac 8012 8-84040 TPH Valve 8013 7-85380 Axle Lubrication and Brake Circuit Troubleshooting (Quadtrac) 8014 7-87860 Chassis Cab Removal and Installation 9001 8-83860 Center Hinge Bearings and Connecting Link 9002 8-83590 Drawbar Removal 9003 8-83520 Radiator Removal - 9370, 9380 9004 8-83920 Hood and Grille - 9370, 9380, 9390 9005 8-83930	,		
TPH Valve 8013 7-85380 Axle Lubrication and Brake Circuit Troubleshooting (Quadtrac) 8014 7-87860 Chassis Cab Removal and Installation 9001 8-83860 Center Hinge Bearings and Connecting Link 9002 8-83590 Drawbar Removal 9003 8-83520 Radiator Removal - 9370, 9380 9004 8-83920 Hood and Grille - 9370, 9380, 9390 9005 8-83930			
Axle Lubrication and Brake Circuit Troubleshooting (Quadtrac) .8014 7-87860 Chassis .8014 .8014 .8014 Cab Removal and Installation .9001 8-83860 Center Hinge Bearings and Connecting Link .9002 8-83590 Drawbar Removal .9003 8-83520 Radiator Removal - 9370, 9380 .9004 8-83920 Hood and Grille - 9370, 9380, 9390 .9005 8-83930	, ·		
Chassis Cab Removal and Installation 9001 8-83860 Center Hinge Bearings and Connecting Link 9002 8-83590 Drawbar Removal 9003 8-83520 Radiator Removal - 9370, 9380 9004 8-83920 Hood and Grille - 9370, 9380, 9390 9005 8-83930			
Cab Removal and Installation 9001 8-83860 Center Hinge Bearings and Connecting Link 9002 8-83590 Drawbar Removal 9003 8-83520 Radiator Removal - 9370, 9380 9004 8-83920 Hood and Grille - 9370, 9380, 9390 9005 8-83930	Axie Eublication and Brake Oricuit Houbleshooting (Quaditac)	0014	7-07000
Center Hinge Bearings and Connecting Link 9002 8-83590 Drawbar Removal 9003 8-83520 Radiator Removal - 9370, 9380 9004 8-83920 Hood and Grille - 9370, 9380, 9390 9005 8-83930			
Drawbar Removal 9003 8-83520 Radiator Removal - 9370, 9380 9004 8-83920 Hood and Grille - 9370, 9380, 9390 9005 8-83930	Cab Removal and Installation	9001	8-83860
Radiator Removal - 9370, 9380 .9004 8-83920 Hood and Grille - 9370, 9380, 9390 .9005 8-83930			8-83590
Hood and Grille - 9370, 9380, 9390	Drawbar Removal	9003	8-83520
	Radiator Removal - 9370, 9380	9004	8-83920
11/40 Cyclom 000C 0.00EE0	Hood and Grille - 9370, 9380, 9390	9005	8-83930
•	HVAC System		8-83550
Air Conditioner System - Refrigerant Recovery, System Evacuation and Recharging9007 8-83560			
Air Conditioner Compressor	'		
Mechanical Seat			
Deluxe Air Seat			
Weighting the 4WD Tractor	weignting the 4WD Tractor	9017	8-83040

Section 1003

GENERAL INFORMATION AND SPECIFICATIONS For 9370 and 9380 Series Tractor

SAE FASTENER TORQUE CHART

NOTE: Use these torques, unless special torques are specified. Values are for UNC and UNF thread fasteners, plated or unplated, as received from supplier. Fasteners can be dry or lubricated with normal engine oil. Values do not apply if graphite, moly-disulphide or other extreme pressure lubricant is used.

SAE Grade No.	2				5				8*			
Bolt head identification (See Note 1)	\bigcirc			(-)	\bigcirc \bigcirc \bigcirc				$\bigcirc \times \bigcirc$			
Bolt Size	LB FT		Nm		LB FT		Nm		LB FT		Nm	
Bolt Size	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.
1/4	5	6	7	8	9	11	12	15	12	15	16	20
5/16	10	12	14	16	17	20.5	23	28	24	29	33	39
3/8	20	23	27	31	35	42	48	57	45	54	61	73
7/16	30	35	41	47	54	64	73	87	70	84	95	114
1/2	45	52	61	70	80	96	109	130	110	132	149	179
9/16	65	75	88	102	110	132	149	179	160	192	217	260
5/8	95	105	129	142	150	180	203	244	220	264	298	358
3/4	150	185	203	251	270	324	366	439	380	456	515	618
7/8	160	200	217	271	400	480	542	651	600	720	814	976
1	250	300	339	406	580	696	787	944	900	1080	1220	1464
1-1/8					800	880	1085	1193	1280	1440	1736	1953
1-1/4					1120	1240	1519	1681	1820	2000	2468	2712
1-3/8					1460	1680	1980	2278	2380	2720	3227	3688
1-1/2					1940	2200	2631	2983	3160	3560	4285	4827
IOTE 1: Bolt head identification marks as per grade. Manufacturing marks will vary. *Thick nuts must be used with Grade 8 bol												

STANDARD TORQUE DATA FOR HYDRAULIC TUBES AND FITTINGS

TUBE NUTS FOR 37° FLARED FITTINGS								AC	O-RING BOSS PLUGS, ADJUSTABLE FITTING LOCK NUTS, SWIVEL JIC - 37° SEATS			
	TUBIN	G O.D.	THREAD	LB FT		Nm		LB FT		Nm		
SIZE	Inches	mm	SIZE	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	
4	1/4	6.4	7/16-20	9	12	12	16	6	10	8	14	
5	5/16	7.9	1/2-20	12	15	16	20	10	15	14	20	
6	3/8	9.5	9/16-18	21	24	29	33	15	20	20	27	
8	1/2	12.7	3/4-18	35	40	47	54	25	30	34	41	
10	5/8	15.9	7/8-14	53	58	72	79	35	40	47	54	
12	3/4	19.1	1-1/16-12	77	82	104	111	60	70	81	95	
14	7/8	22.2	1-3/16-12	90	100	122	136	70	80	95	109	
16	1	25.4	1-5/16-12	110	120	149	163	80	90	108	122	
20	1-1/4	31.8	1-5/8-12	140	150	190	204	95	115	129	156	
24	1-1/2	38.1	1-7/8-12	160	175	217	237	120	140	163	190	
32	2	50.8	2-1/2-12	225	240	305	325	250	300	339	407	

Above torque figures are recommended for plain, cadmium or zinc plated fittings, dry or wet installations and swivel nuts either swaged or brazed. These torques are not recommended for tubes 1/2 inch (12.7 mm) O.D. and larger with wall thickness of 0.035 inch (0.889 mm) or less. The torque is specified for 0.035 inch (0.889 mm) wall tubes on each application individually.

Rac 7-65420 Issued, November, 1995

Thank you so much for reading.

Please click the "Buy Now!"

button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com