

---

# DX18E, DX22E, DX24E, DX25E REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION .....	2
SECTION 10 - ENGINE SYSTEMS .....	4
SECTION 25 - FWD .....	11
SECTION 27 - DIFFERENTIAL AND REAR AXLES .....	13
SECTION 29 - HYDROSTATIC TRANSMISSION .....	14
SECTION 31 - PTO .....	17
SECTION 33 - BRAKES .....	18
SECTION 35 - HYDRAULIC SYSTEM .....	19
SECTION 41 - POWER STEERING .....	22
SECTION 44 - WHEELS .....	24
SECTION 55 - ELECTRICAL SYSTEM .....	25
SECTION 58 - MWX154S - MWX160S MID MOUNT MOWER .....	34
SECTION 90 - PLATFORM .....	35

The following pages are the collation of the contents pages from each section and chapter of the DX18E, DX22E, DX24E, and DX25E Repair manual. Complete Repair part # 87352316.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the DX18E, DX22E, DX24E, and DX25E Tractors.

## SECTION 00 - GENERAL INFORMATION

### Chapter 1 - General Information

#### CONTENTS

Section	Description	Page
	Precautionary Statements .....	3
	Personal Safety .....	3
	Machine Safety .....	3
	Information .....	3
	Safety .....	4
	Precautionary Statements .....	4
	The Tractor .....	4
	Servicing the Tractor .....	4
	Operating the Tractor .....	5
	Driving the Tractor .....	5
	Operating the PTO .....	6
	Diesel Fuel .....	6
	Safety Frame (ROPS) .....	6
	Safety Decals .....	7
	Instruction Decals .....	10
	Ecology and the Environment .....	16
	Helpful Hints .....	16
	Universal Symbols .....	17
	General Information .....	18
	Please Read Carefully .....	18
	Minimum Hardware Tightening Torques .....	19
	Metric Bolt Torque Specifications .....	20
	Lubrication and Maintenance .....	21
	General Information .....	21
	Grease Fittings .....	21
	Lubrication and Maintenance Chart .....	23
	Lubrication Fittings .....	24
	Diesel Fuel .....	24
	Fuel Usage Safety .....	24

*SECTION 00 - GENERAL INFORMATION - CHAPTER 1*

---

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Specifications .....	25
	Engine .....	25
	Capacities .....	25
	Cooling System .....	26
	Electrical System .....	26
	Fuel System .....	26
	Brakes .....	27
	Steering .....	27
	Power Take-Off (PTO) .....	27
	Hydraulic Lift Section .....	27
	Transmission Speeds .....	28
	Cast Iron Weights .....	29
	Drawbars .....	29
	3-Point Hitch .....	29
	Tires .....	29
	Wheel Bolt Torques .....	29
	ROPS Attaching Bolt Torques .....	29
	General Dimensions .....	30
	Wheel Tread Settings .....	30
	Liquid Ballast (optional) .....	32
	Tire Pressure .....	32

# PRECAUTIONARY STATEMENTS

## PERSONAL SAFETY

Throughout this manual and on machine decals, you will find precautionary statements (“**DANGER**”, “**WARNING**”, and “**CAUTION**”) followed by specific instructions. These precautions are intended for the personal safety of you and those working with you. Please take the time to read them.



**DANGER**



This word “**DANGER**” indicates an immediate hazardous situation that, if not avoided, will result in death or serious injury. The color associated with Danger is RED.

---



**WARNING**



This word “**WARNING**” indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury. The color associated with Warning is ORANGE.

---



**CAUTION**



This word “**CAUTION**” indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

---

**FAILURE TO FOLLOW THE “DANGER”, “WARNING”, AND “CAUTION” INSTRUCTIONS MAY RESULT IN SERIOUS BODILY INJURY OR DEATH.**

## MACHINE SAFETY

The precautionary statement (“**IMPORTANT**”) is followed by specific instructions. This statement is intended for machine safety.

**IMPORTANT:** *The word “IMPORTANT” is used to inform the reader of something he needs to know to prevent minor machine damage if a certain procedure is not followed.*

## INFORMATION

**NOTE:** *Instructions used to identify and present supplementary information.*

# SAFETY

## PRECAUTIONARY STATEMENTS

A careful operator is the best operator. Most accidents can be avoided by observing certain precautions. To help prevent accidents, read the following precautions before operating this equipment. Equipment should be operated only by those who are responsible and instructed to do so.

Carefully review the procedures given in this manual with all operators. It is important that all operators be familiar with and follow safety precautions.

### THE TRACTOR

1. Read the Operator's Manual carefully before using the tractor. Lack of operating knowledge can lead to accidents.
2. Use an approved roll bar and seat belt for safe operation. Overturning a tractor without a roll bar can result in death or injury. If your tractor is not equipped with a roll bar and seat belt, see your Case IH Dealer.
3. Always use the seat belt. The only instance when the seat belt should not be used is if the roll bar has been removed from the tractor.
4. If a front end loader is to be installed, always use a FOPS (Falling Object Protective Structure) canopy to avoid injury from falling objects.
5. Use the handholds and step plates when getting on and off the tractor to prevent falls. Keep steps and platform cleared of mud and debris.
6. Do not permit anyone but the operator to ride on the tractor. There is no safe place for extra riders.
7. Keep all safety decals clean of dirt and grime, and replace all missing, illegible, or damaged safety decals. See the list of decals in the Decal section of this manual.
3. Keep the tractor and equipment, particularly brakes and steering, maintained in a reliable and satisfactory condition to ensure your safety and comply with legal requirements.
4. Keep open flame or cold weather starting aids away from the battery to prevent fires or explosions. Use jumper cables according to instructions to prevent sparks which could cause explosion.
5. Stop the engine before performing any service on the tractor.
6. Escaping hydraulic/diesel fluid under pressure can penetrate the skin causing serious injury. If fluid is injected into the skin, obtain medical attention immediately or gangrene may result.
  - DO NOT use your hand to check for leaks. Use a piece of cardboard or paper to search for leaks.
  - Stop the engine and relieve pressure before connecting or disconnecting lines.
  - Tighten all connections before starting the engine or pressurizing lines.
7. Do not modify or permit anyone else to modify or alter this tractor or any of its components or functions without first consulting a Case IH Dealer.

### SERVICING THE TRACTOR

1. The cooling system operates under pressure which is controlled by the radiator cap. It is dangerous to remove the cap while the system is hot. Always turn the cap slowly to the first stop and allow pressure to escape before removing the cap entirely.
2. Keep any type of open flame away from the tractor and do not smoke while refueling. Wait for the engine to cool before refueling.
8. The fuel oil in the injection system is under high pressure and can penetrate the skin. Unqualified persons should not remove or attempt to adjust a pump, injector, nozzle, or any other part of the fuel injection system. Failure to follow these instructions can result in serious injury.
9. Continuous long-term contact with used engine oil may cause skin cancer. Avoid prolonged contact with used engine oil. Wash skin promptly with soap and water.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)