

**FARMALL® 105U EP
FARMALL® 115U EP
With 16x16 Semi-Powershift Transmission
Tractor**

*FARMALL® 105U EP PIN ZxJKxxxxx and above
FARMALL® 115U EP PIN ZEJK14976 and above*

SERVICE MANUAL

Part number 47841819

1st edition English
February 2015





SERVICE MANUAL

Farmall® 105U EP with 16x16 Semi-Powershift transmission [ZxJKxxxxx -]
Farmall® 115U EP with 16x16 Semi-Powershift transmission [ZEJK14976 -]

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.501] Exhaust Gas Recirculation (EGR) - Diesel Particulate Filter (DPF) exhaust treatment	10.3
[10.414] Fan and drive	10.4
Transmission.....	21
[21.111] Semi-Powershift transmission	21.1
[21.133] Semi-Powershift transmission external controls	21.2
[21.103] Semi-Powershift transmission lubrication system.....	21.3
[21.152] Semi-Powershift transmission internal components	21.4
[21.160] Creeper	21.5
[21.118] Transmission/Rear drive	21.6
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
[27.126] Spur gear and final drives.....	27.4

Power Take-Off (PTO)	31
[31.104] Rear electro-hydraulic control	31.1
[31.114] Two-speed rear Power Take-Off (PTO)	31.2
[31.116] Three-speed rear Power Take-Off (PTO)	31.3
[31.146] Front Power Take-Off (PTO)	31.4
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
[33.220] Trailer brake hydraulic control	33.3
[33.224] Trailer brake pneumatic control	33.4
[33.204] Front axle brake	33.5
Hydraulic systems.....	35
[35.000] Hydraulic systems	35.1
[35.104] Fixed displacement pump	35.2
[35.322] Regulated/Low pressure system	35.3
[35.204] Remote control valves	35.4
[35.114] Three-point hitch control valve	35.5
[35.162] Front hitch cylinders and lines	35.6
Hitches, drawbars, and implement couplings.....	37
[37.110] Rear three-point hitch	37.1
[37.162] Front hitch	37.2
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components	41.2
[41.216] Cylinders	41.3
Cab climate control	50
[50.100] Heating	50.1
[50.200] Air conditioning	50.2

Electrical systems 55

 [55.000] Electrical system 55.1

 [55.100] Harnesses and connectors..... 55.2

 [55.201] Engine starting system 55.3

 [55.301] Alternator..... 55.4

 [55.302] Battery..... 55.5

 [55.640] Electronic modules 55.6

 [55.408] Warning indicators, alarms, and instruments 55.7

 [55.DTC] FAULT CODES..... 55.8

Platform, cab, bodywork, and decals 90

 [90.150] Cab..... 90.1

 [90.160] Cab interior trim and panels..... 90.2

 [90.100] Engine hood and panels 90.3

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com